


Current Flow Diagram Type 928 USA Model 81

PART I	POWER SUPPLY, STARTER IGNITION FUEL PUMP
PART II	FUEL INJECTION SYSTEM
PART III	IGNITION/STARTER SWITCH, LIGHT SWITCH HEADLIGHT
PART IV	HEADLIGHT, PARKING LIGHT FOG LIGHT, LICENSE PLATE LIGHT FRONT TURN SIGNAL HAZARD FLASHER
PART V	REAR LIGHTS, LAMP CONTROL UNIT WINDSHIELD WIPER
PART VI	WASHER PUMPS REAR WINDOW WIPER REAR WINDOW DEFOGGER INTERIOR LIGHT CENTRAL LOCKING SYSTEM
PART VII	DOOR LIGHT SEAT BELT OUTSIDE MIRROR POWER WINDOWS BRAKE PADS
PART VIII	AUTOMATIC AIR CONDITIONER
PART IX	AUTOMATIC AIR CONDITIONER SENDER UNITS
PART X	CENTRAL WARNING UNIT, INSTRUMENT CLUSTER
PART XI	CLOCK CIGARETTE LIGHTER TEMPSTAT (CRUISE CONTROL) HORNS RADIO

Current Flow Diagram Type 928 USA Model 81 Part I


POWER SUPPLY, STARTER
IGNITION
FUEL PUMP

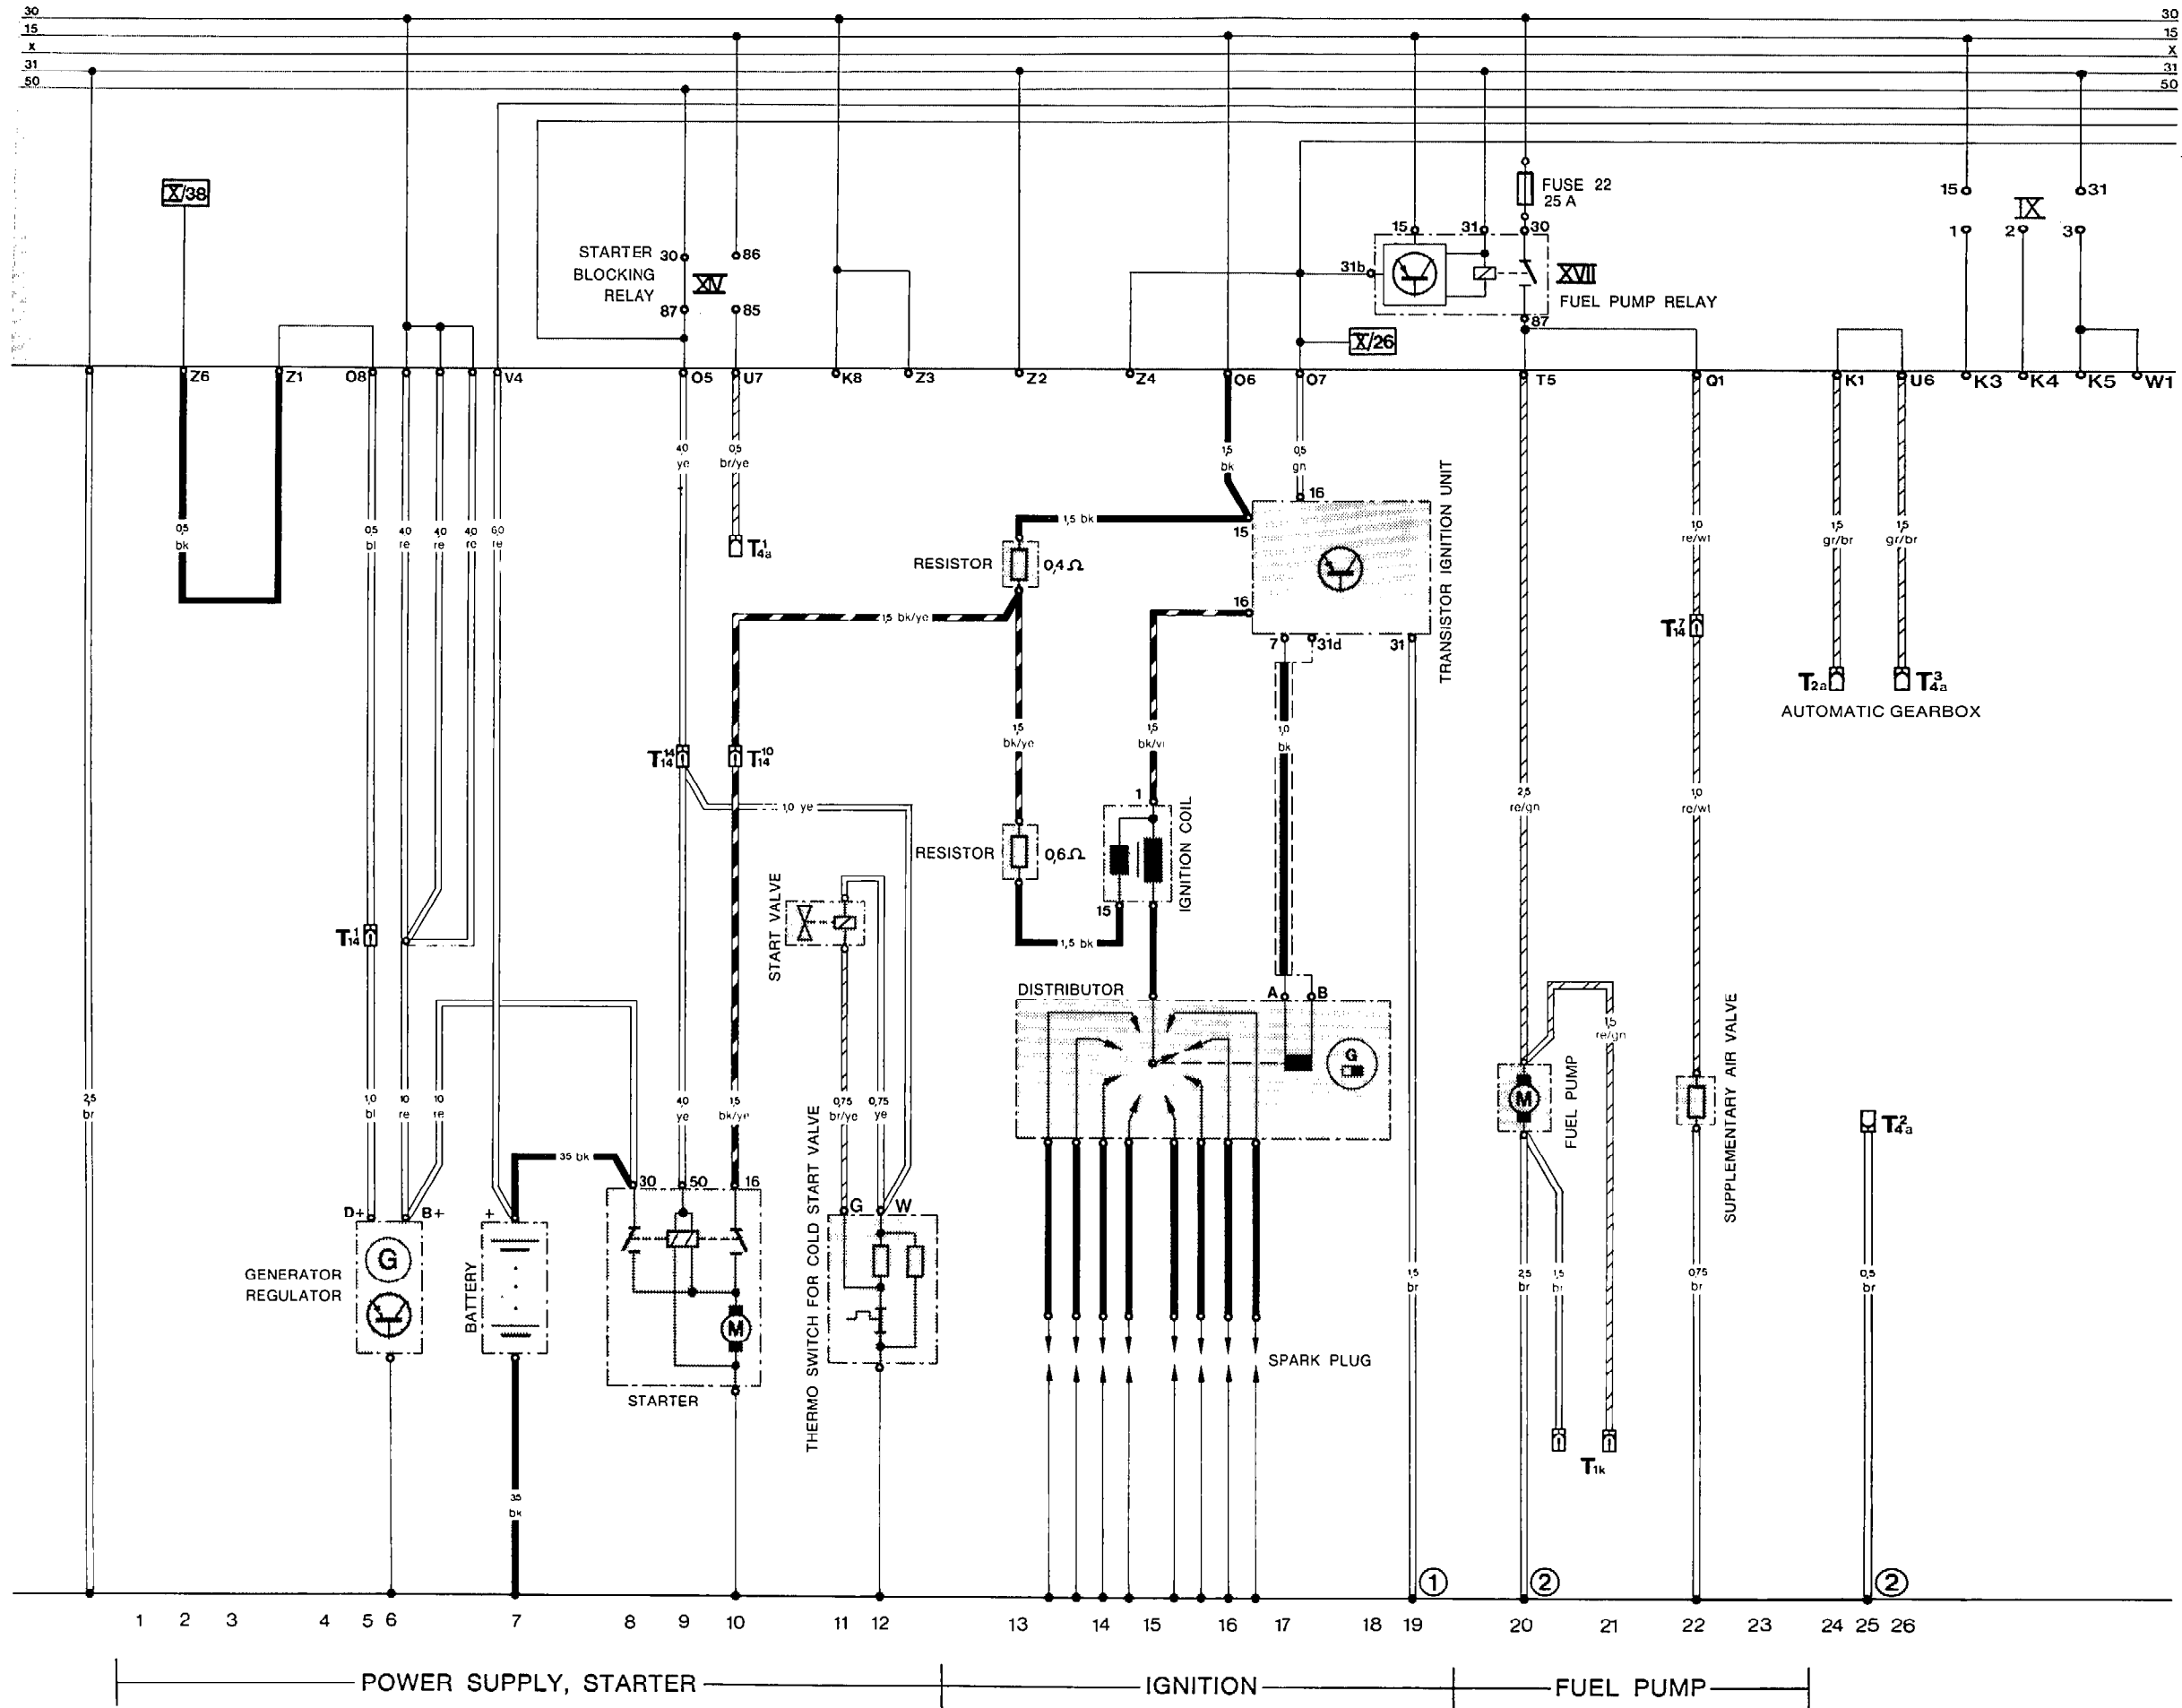

Current Flow Diagram Type 928 USA Model 81 Part II


FUEL INJECTION SYSTEM

Current Flow Diagram Type 928 USA Model 81 Part II

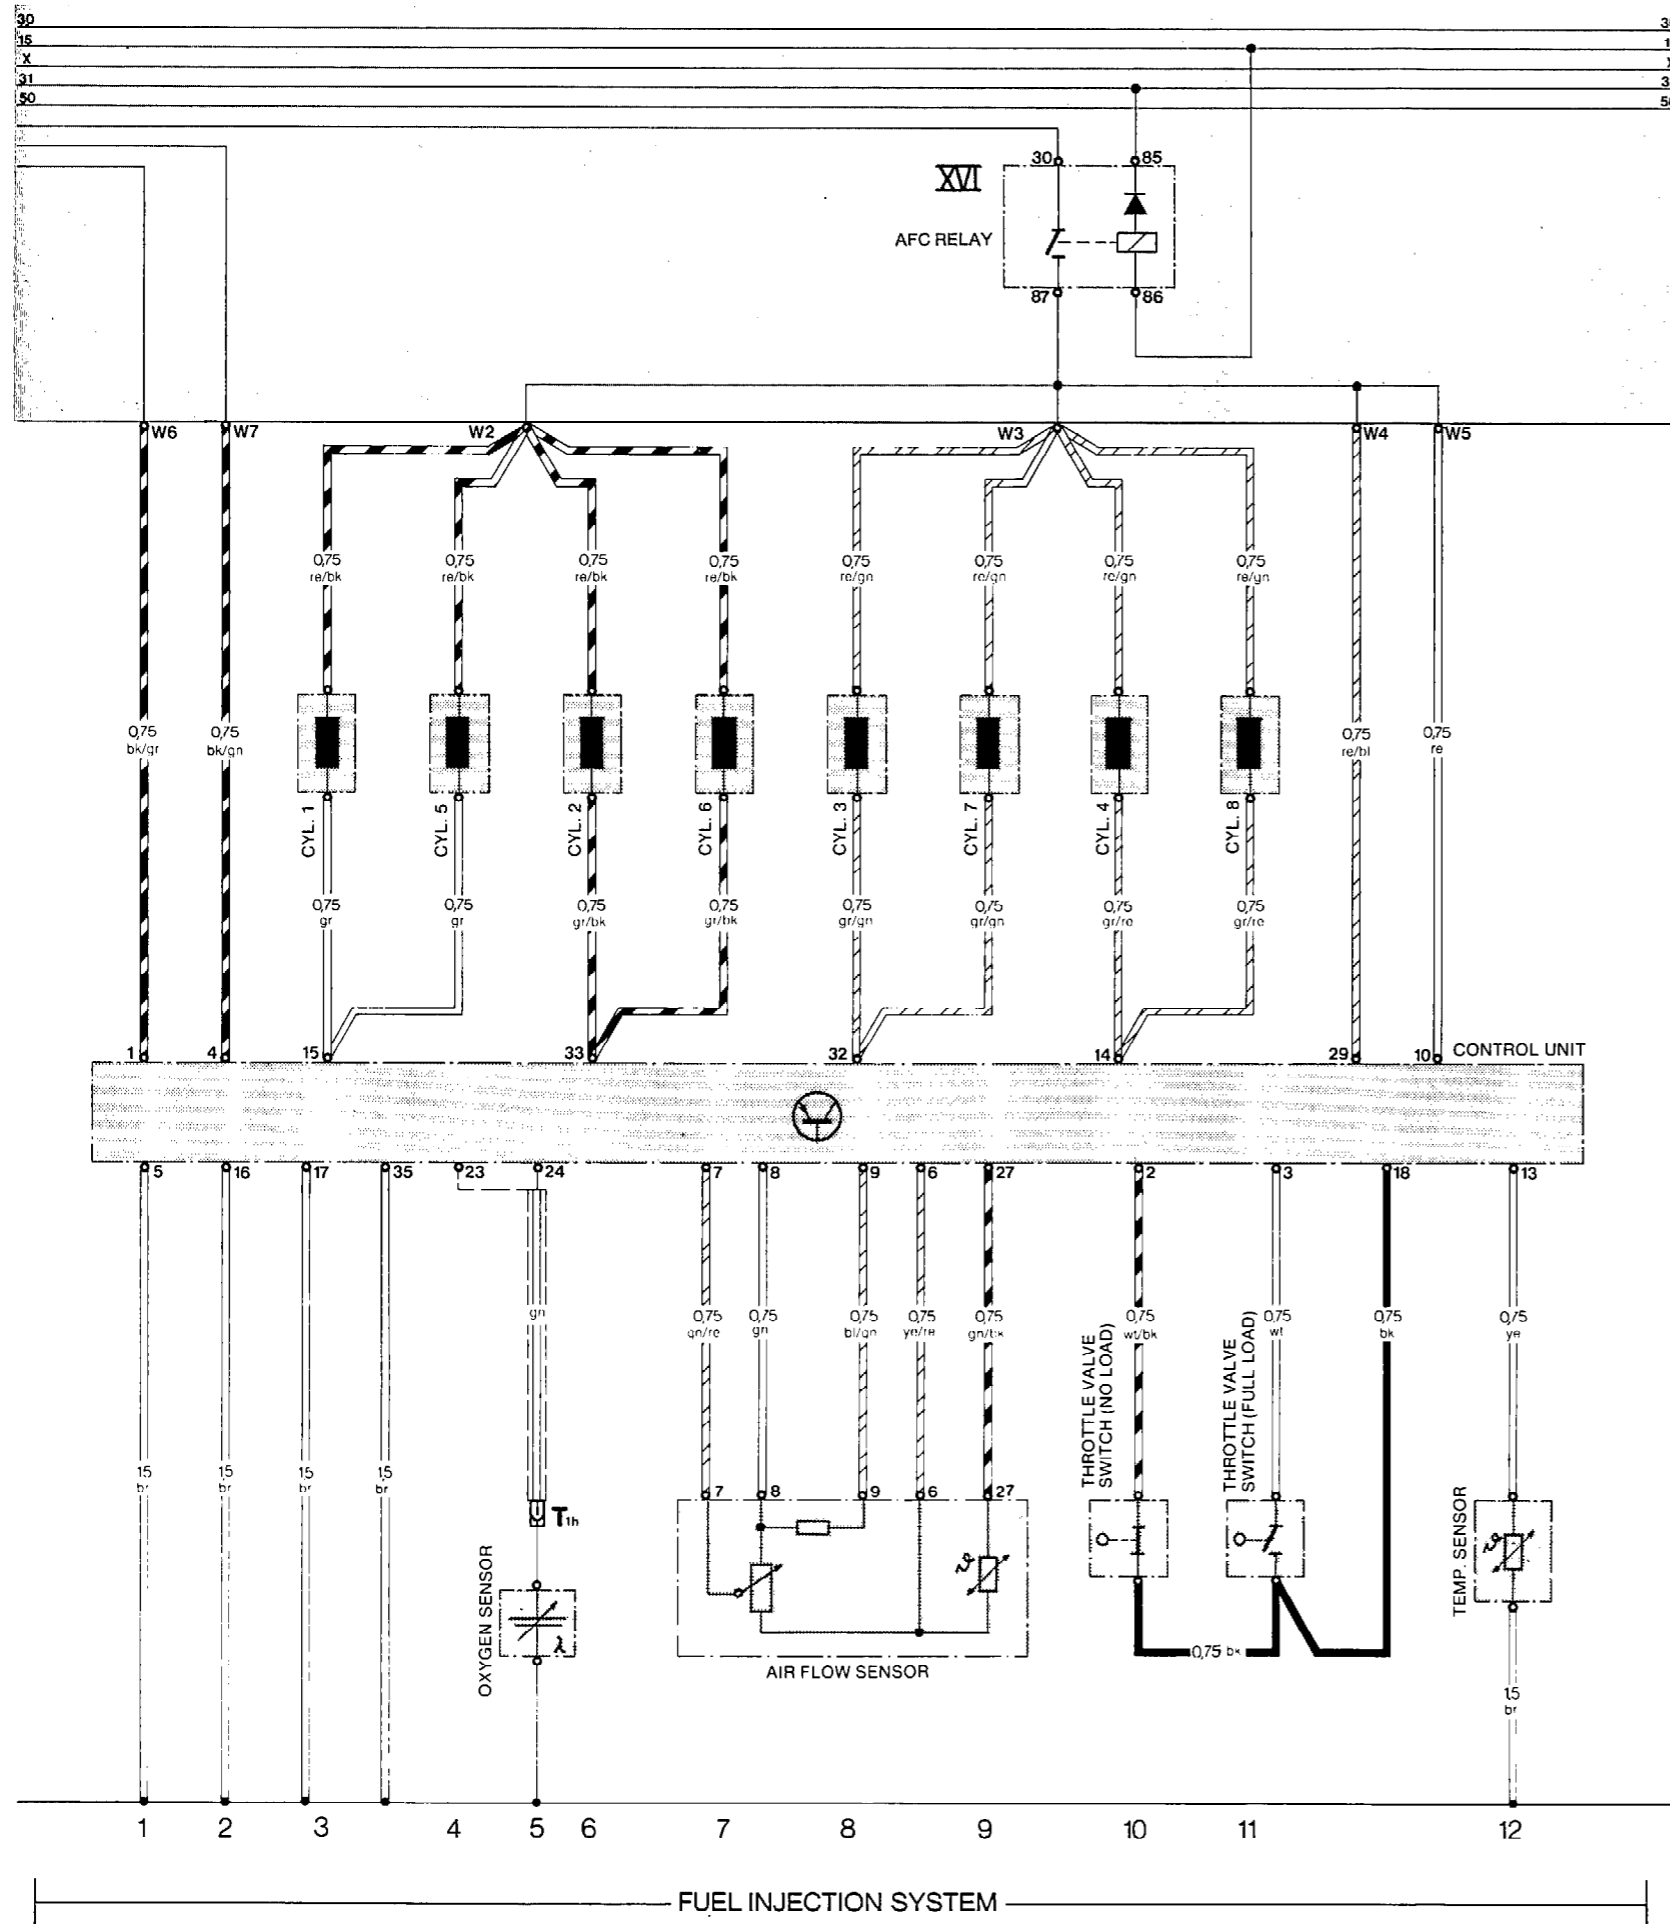


Current Flow Diagram Type 928 USA Model 81 Part III

IGNITION/STARTER SWITCH, LIGHT SWITCH
HEADLIGHT, PARKING LIGHT

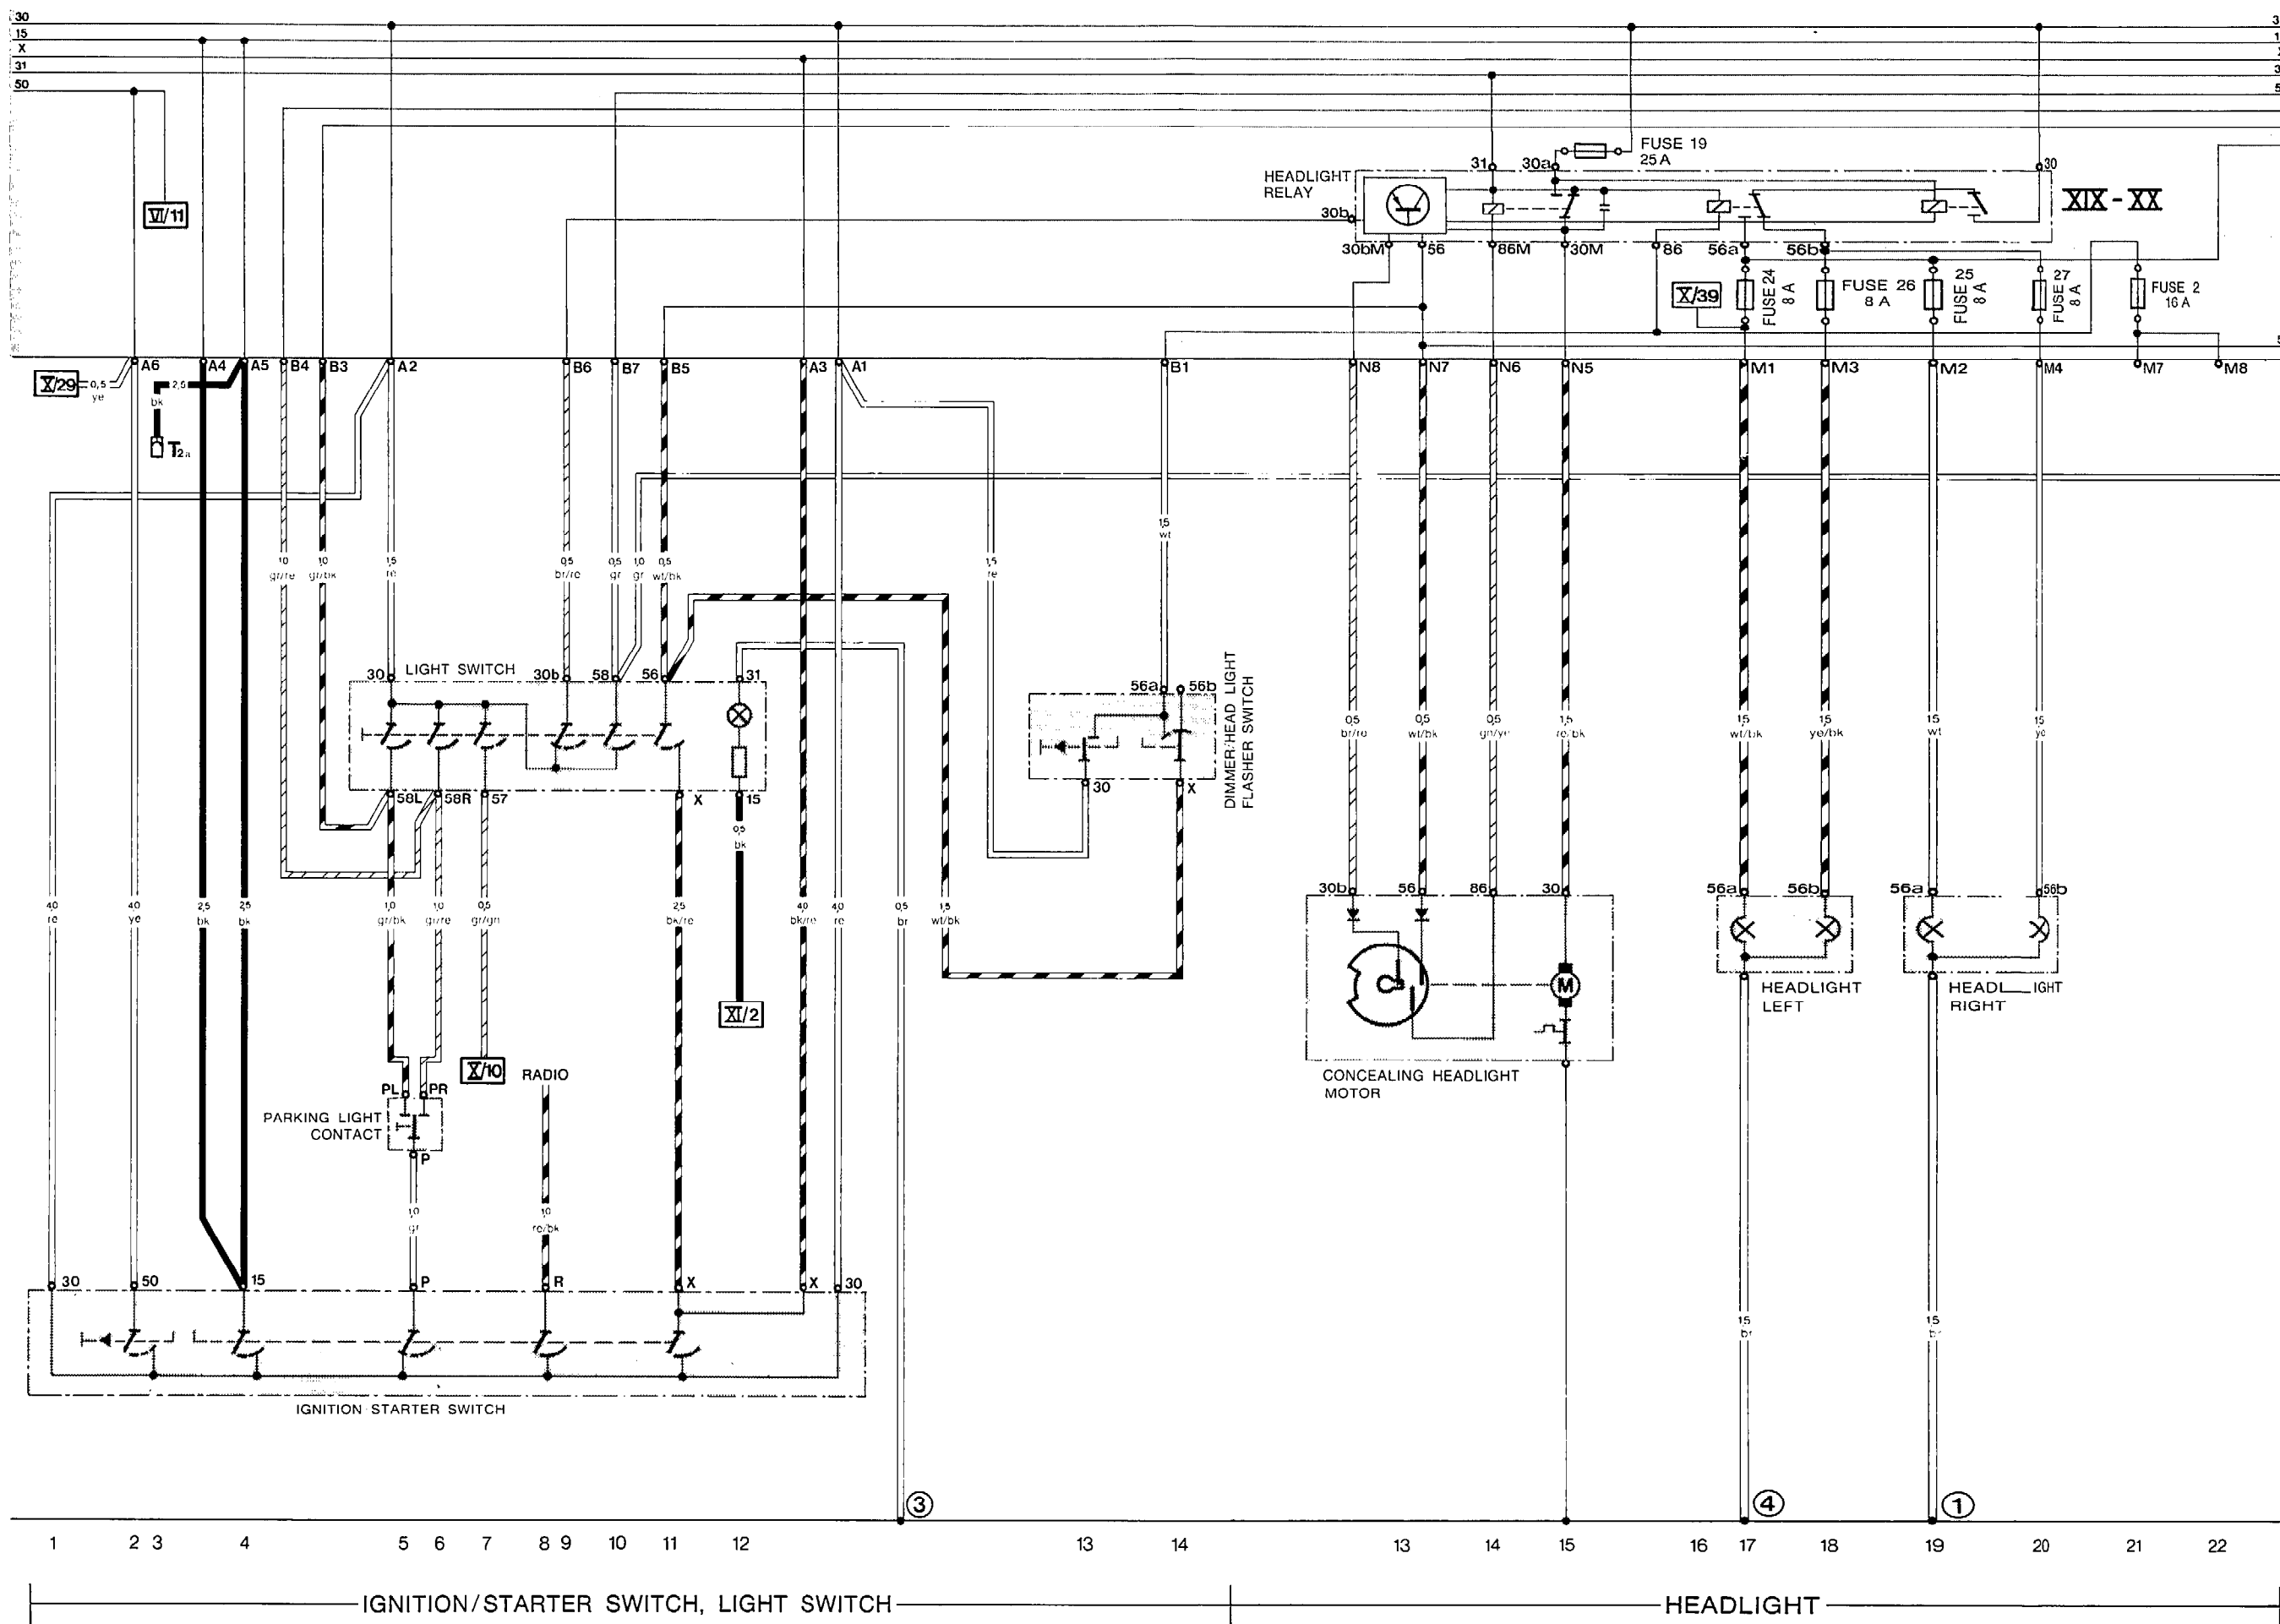


Current Flow Diagram Type 928 USA Model 81 Part IV

FOG LIGHT, LICENSE PLATE LIGHT
FRONT TURN SIGNAL
HAZARD FLASHER

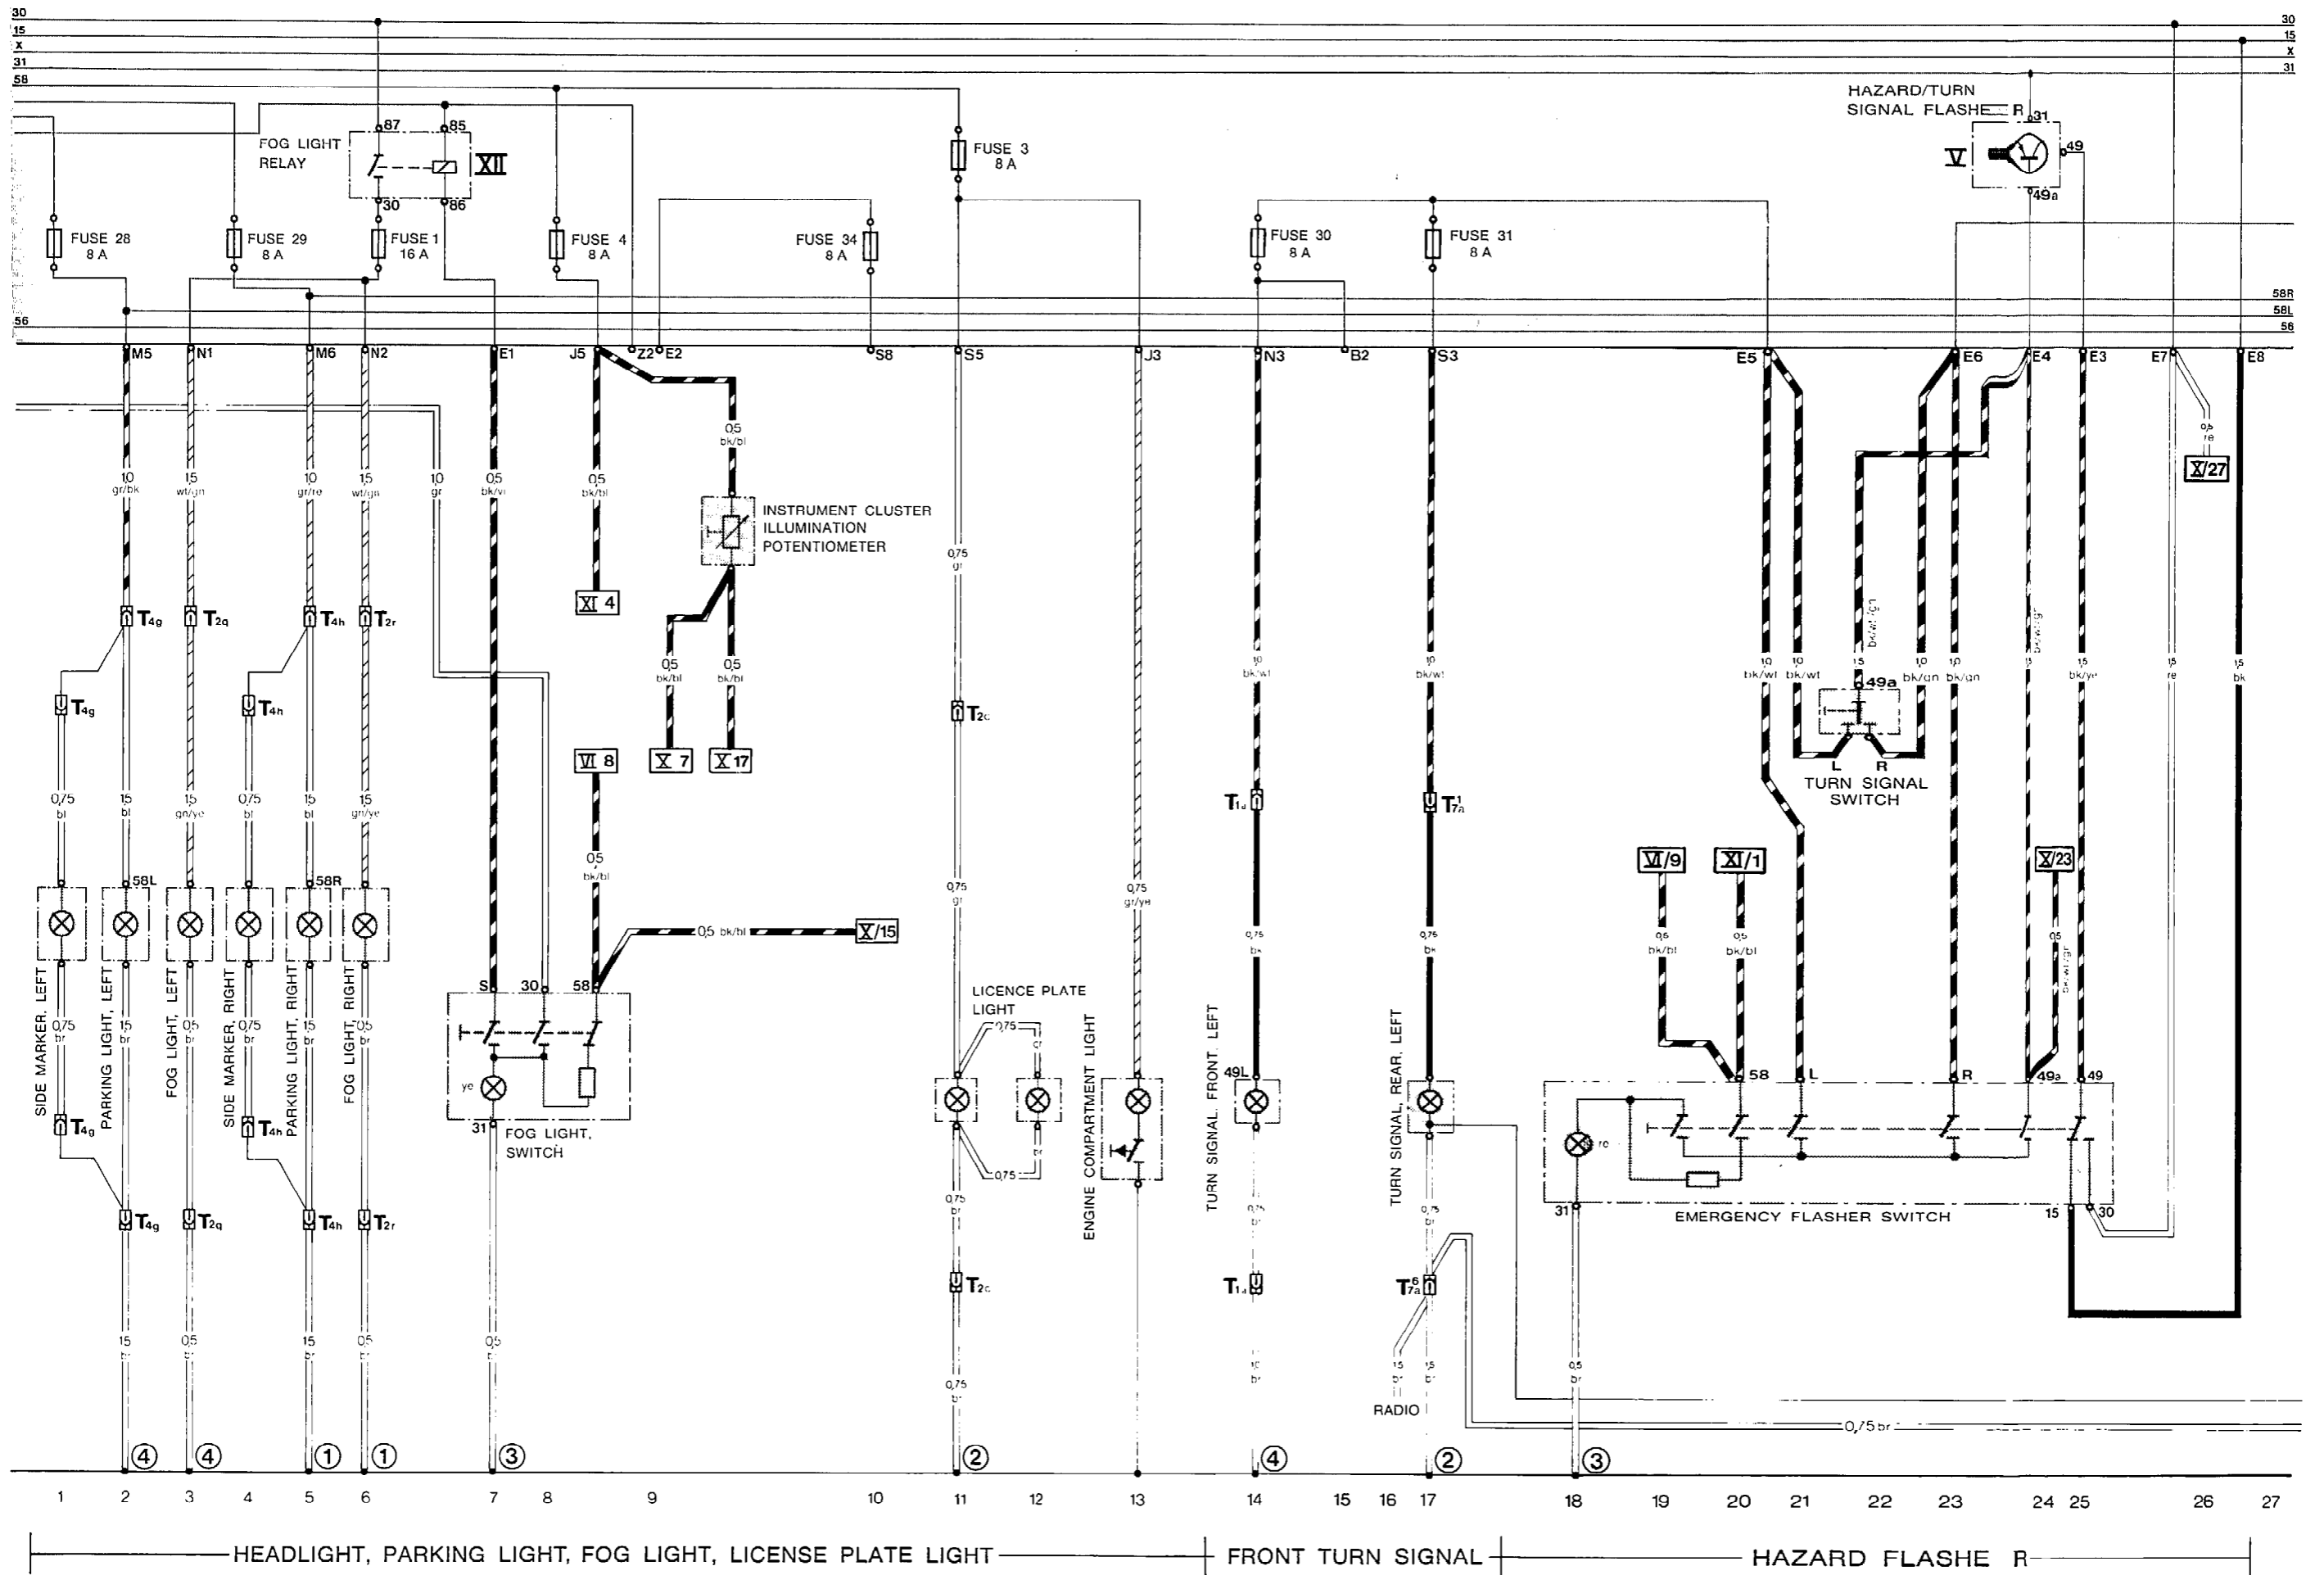


Current Flow Diagram Type 928 USA Model 81 Part V

REAR LIGHTS, LAMP CONTROL UNIT
WINDSHIELD WIPER

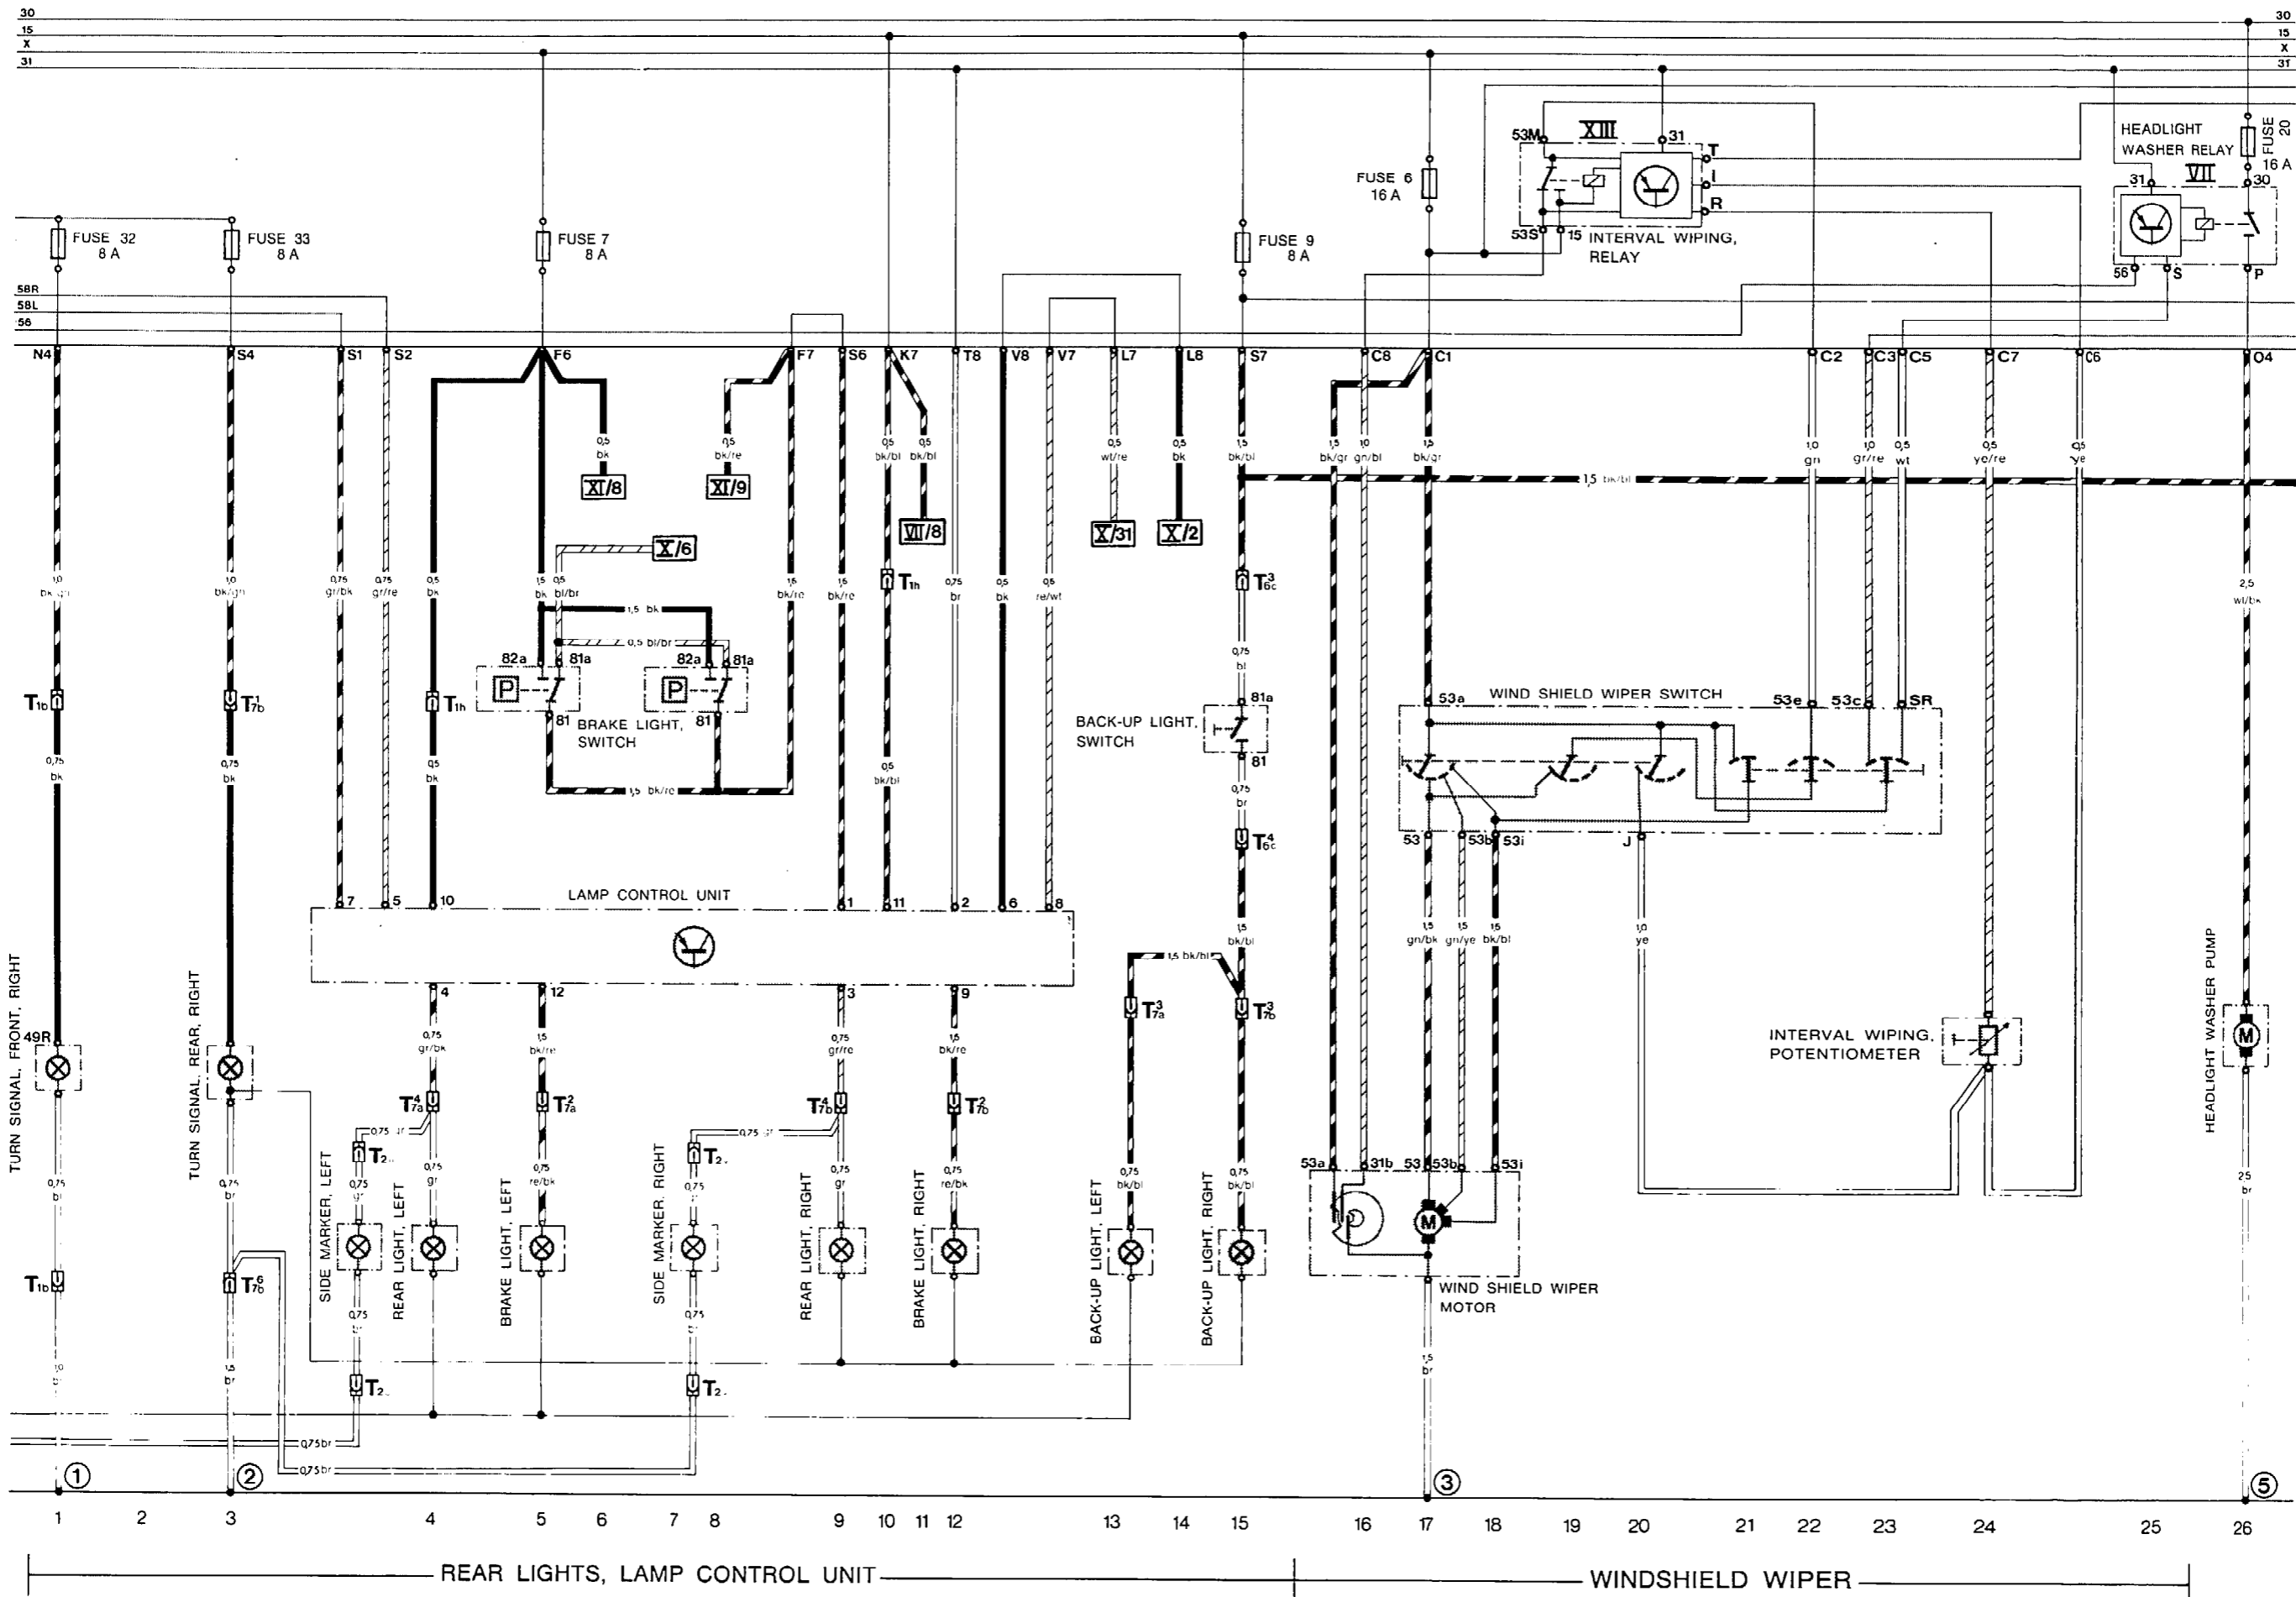


Current Flow Diagram Type 928 USA Model 81 Part VI

WASHER PUMPS
REAR WINDOW WIPER
REAR WINDOW DEFOGGER
INTERIOR LIGHT
SEAT BELT

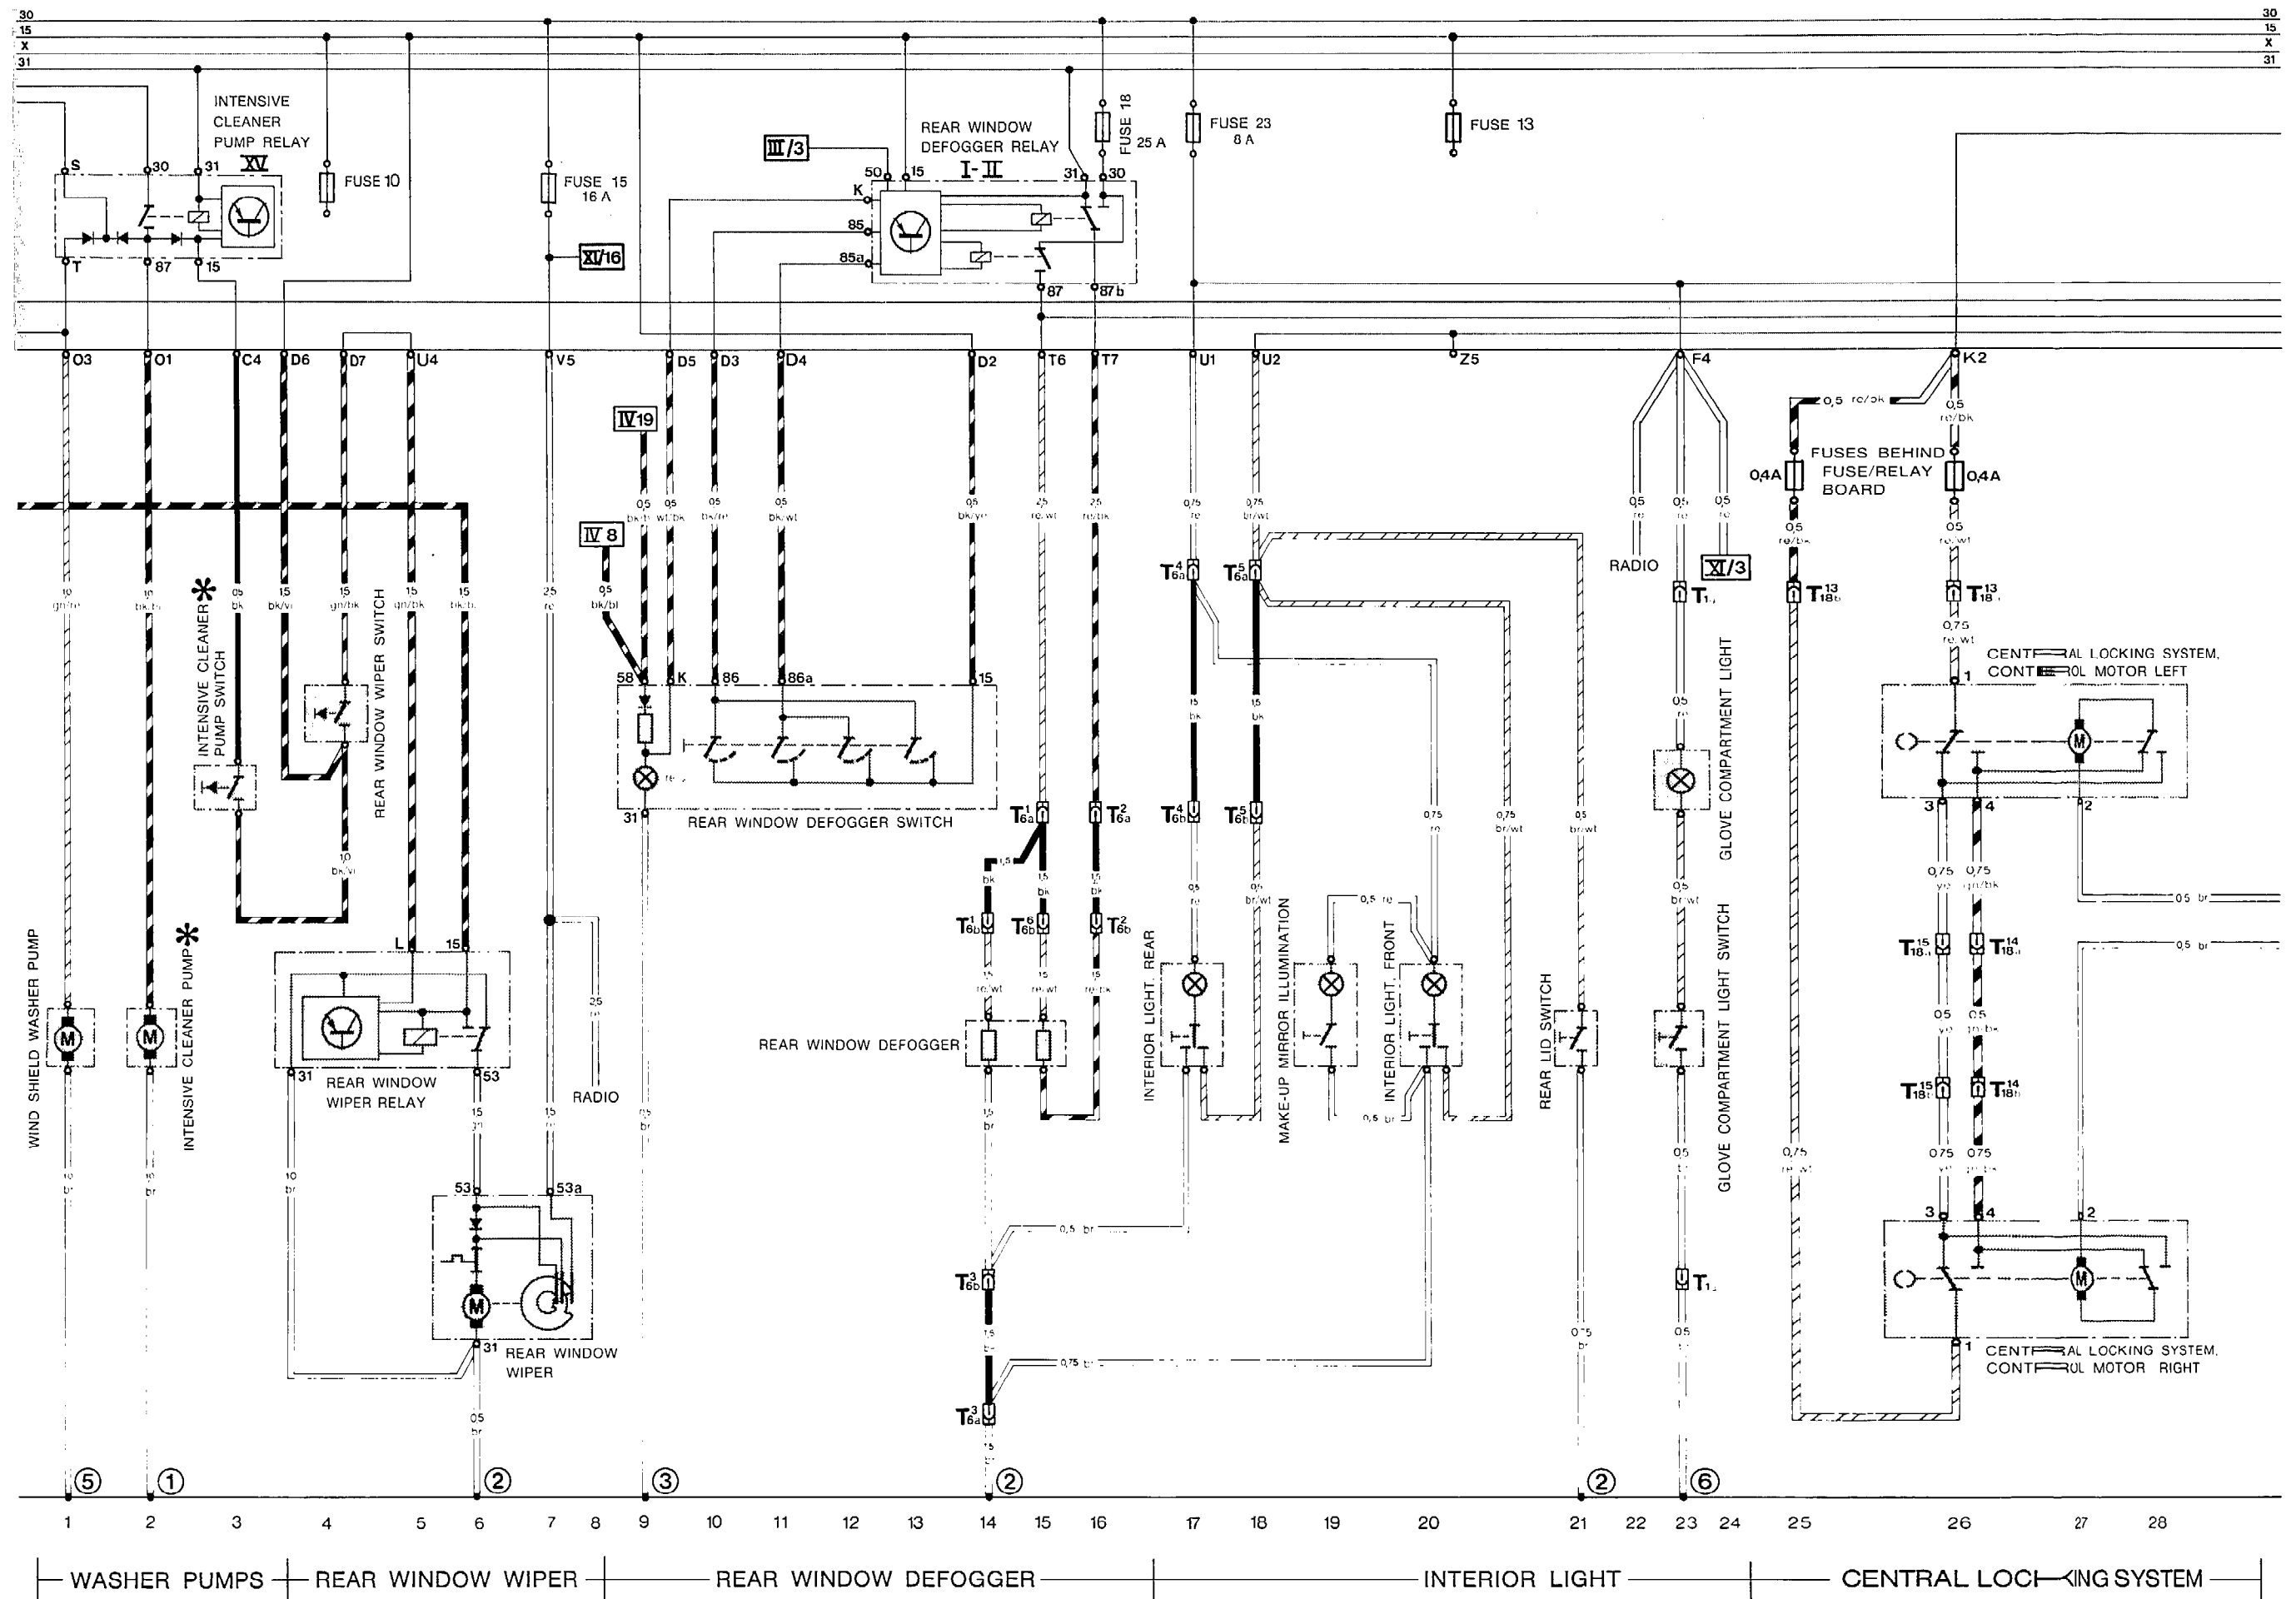


Current Flow Diagram Type 928 USA Model 81 Part VII

DOOR LIGHT
SEAT BELT
OUTSIDE MIRROR
POWER WINDOWS
BRAKE PADS

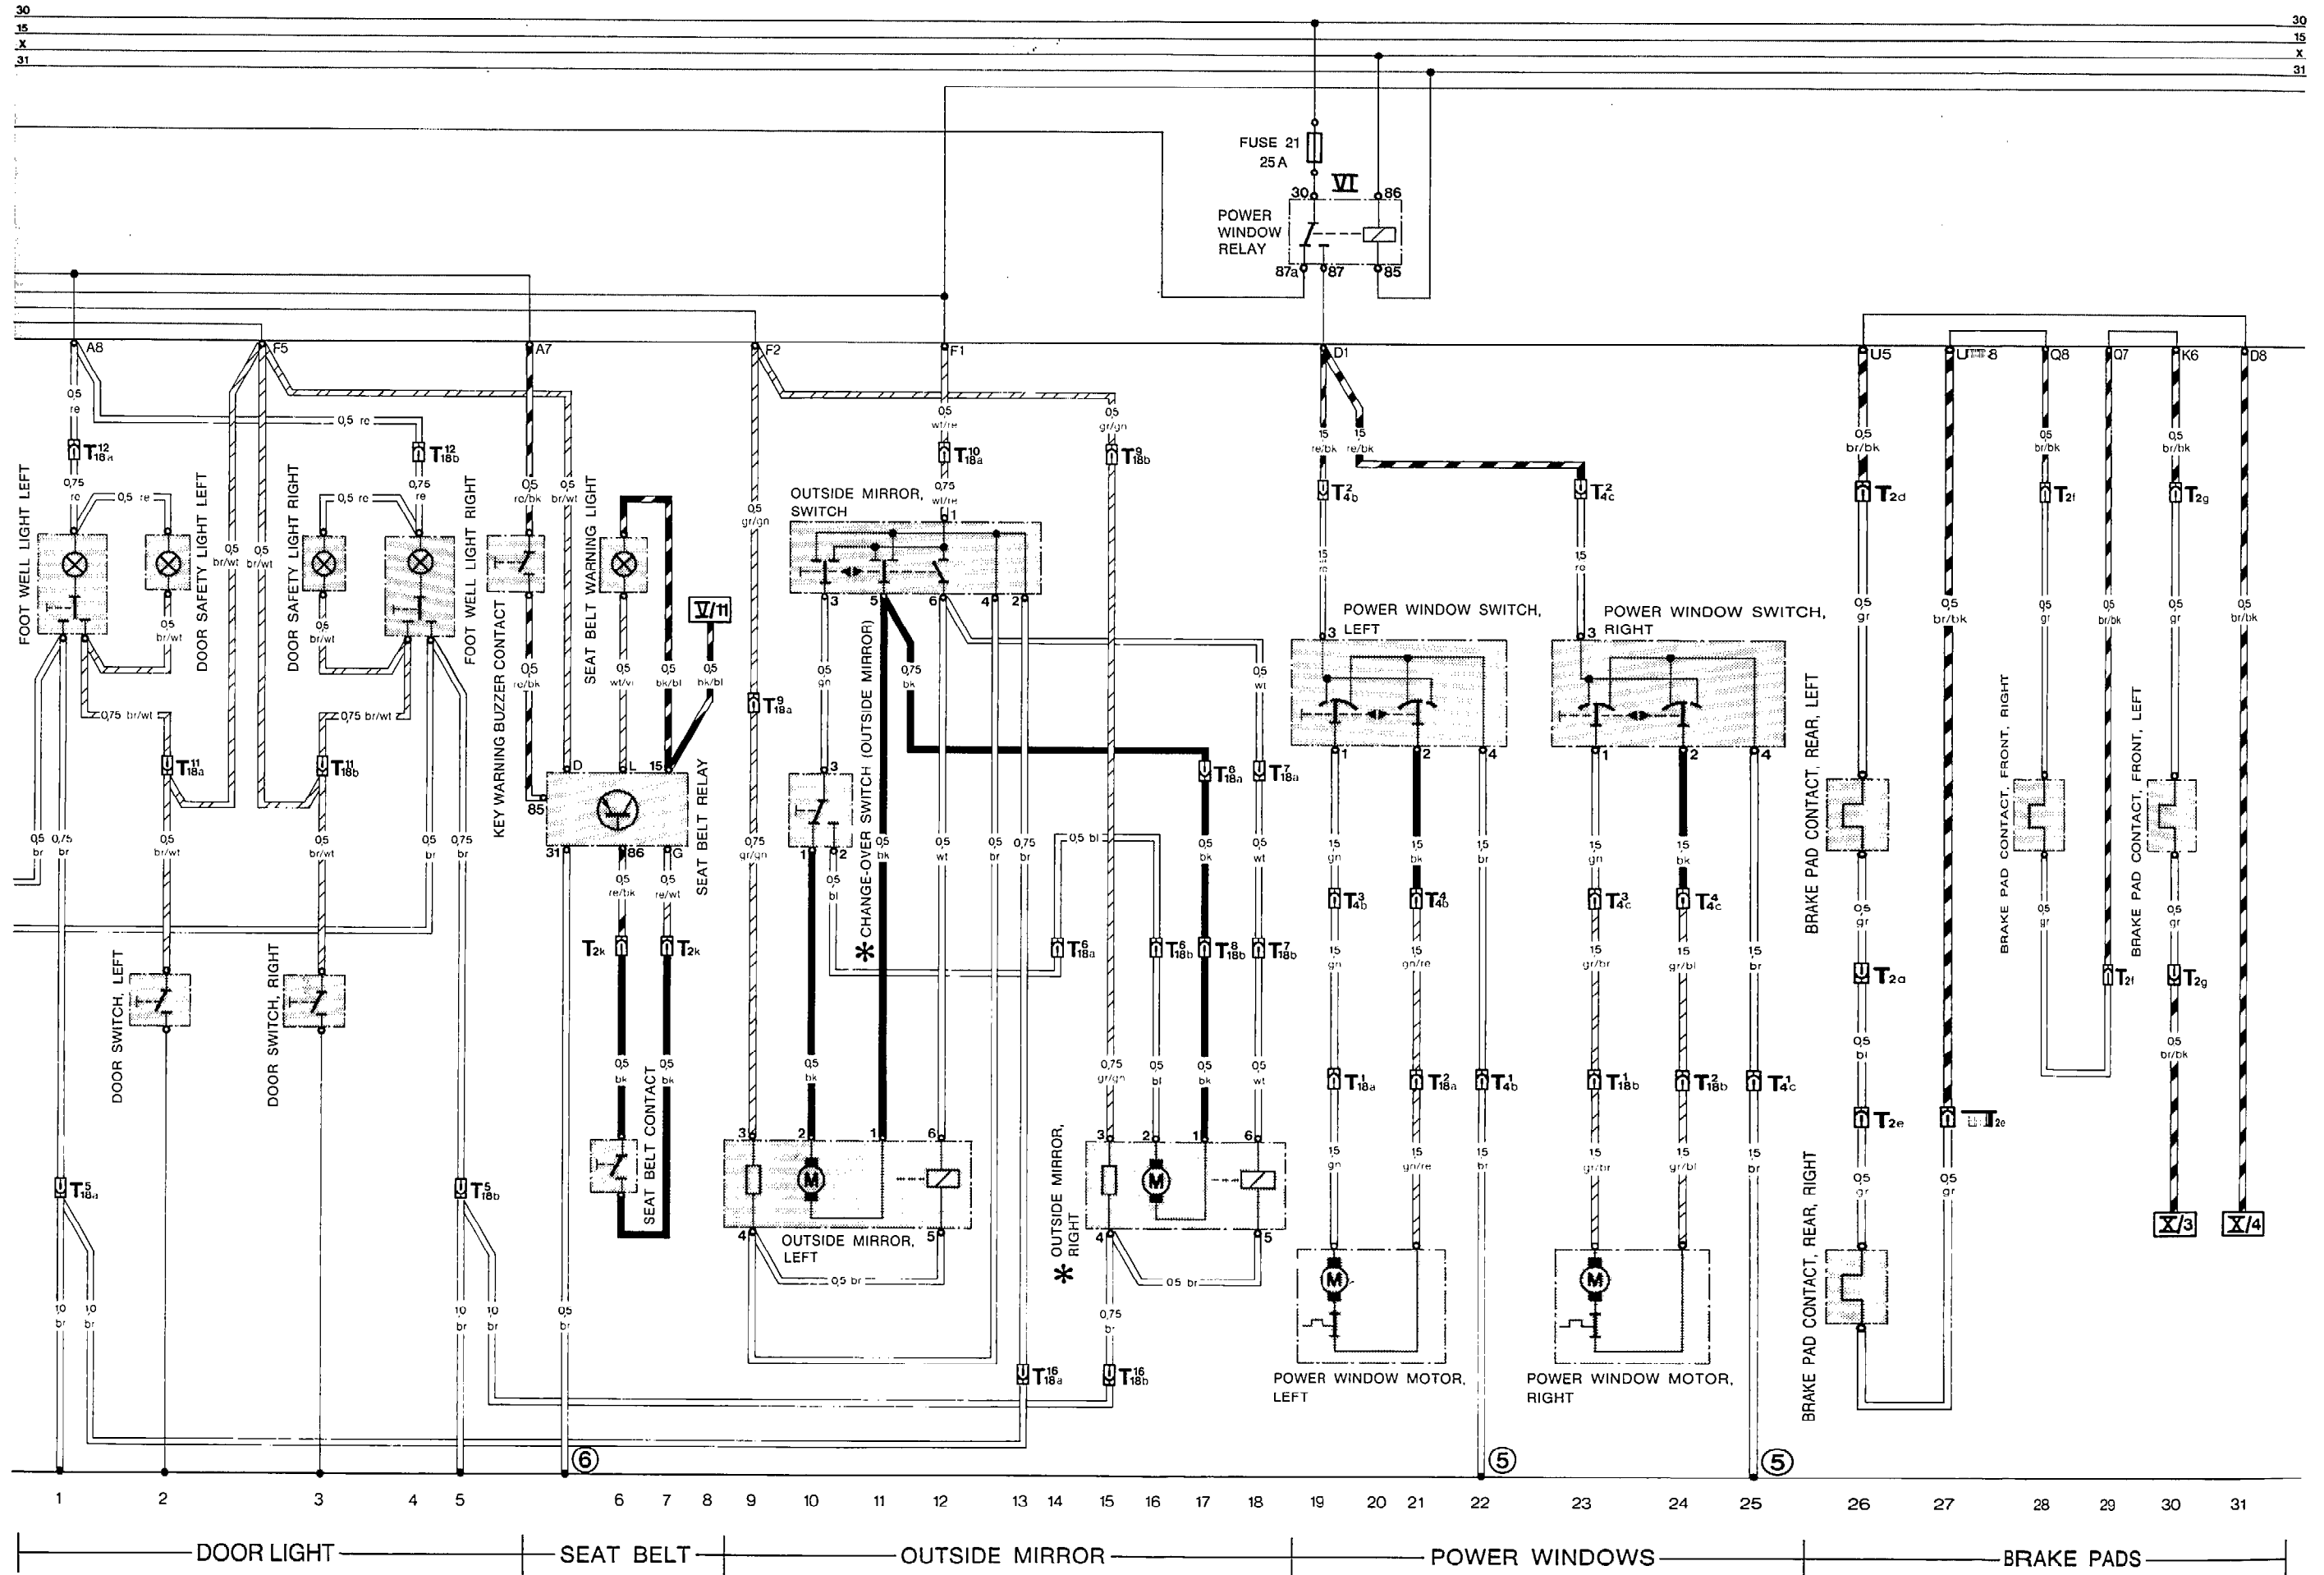

Current Flow Diagram Type 928 USA Model 81 Part VIII


AUTOMATIC AIR CONDITIONER

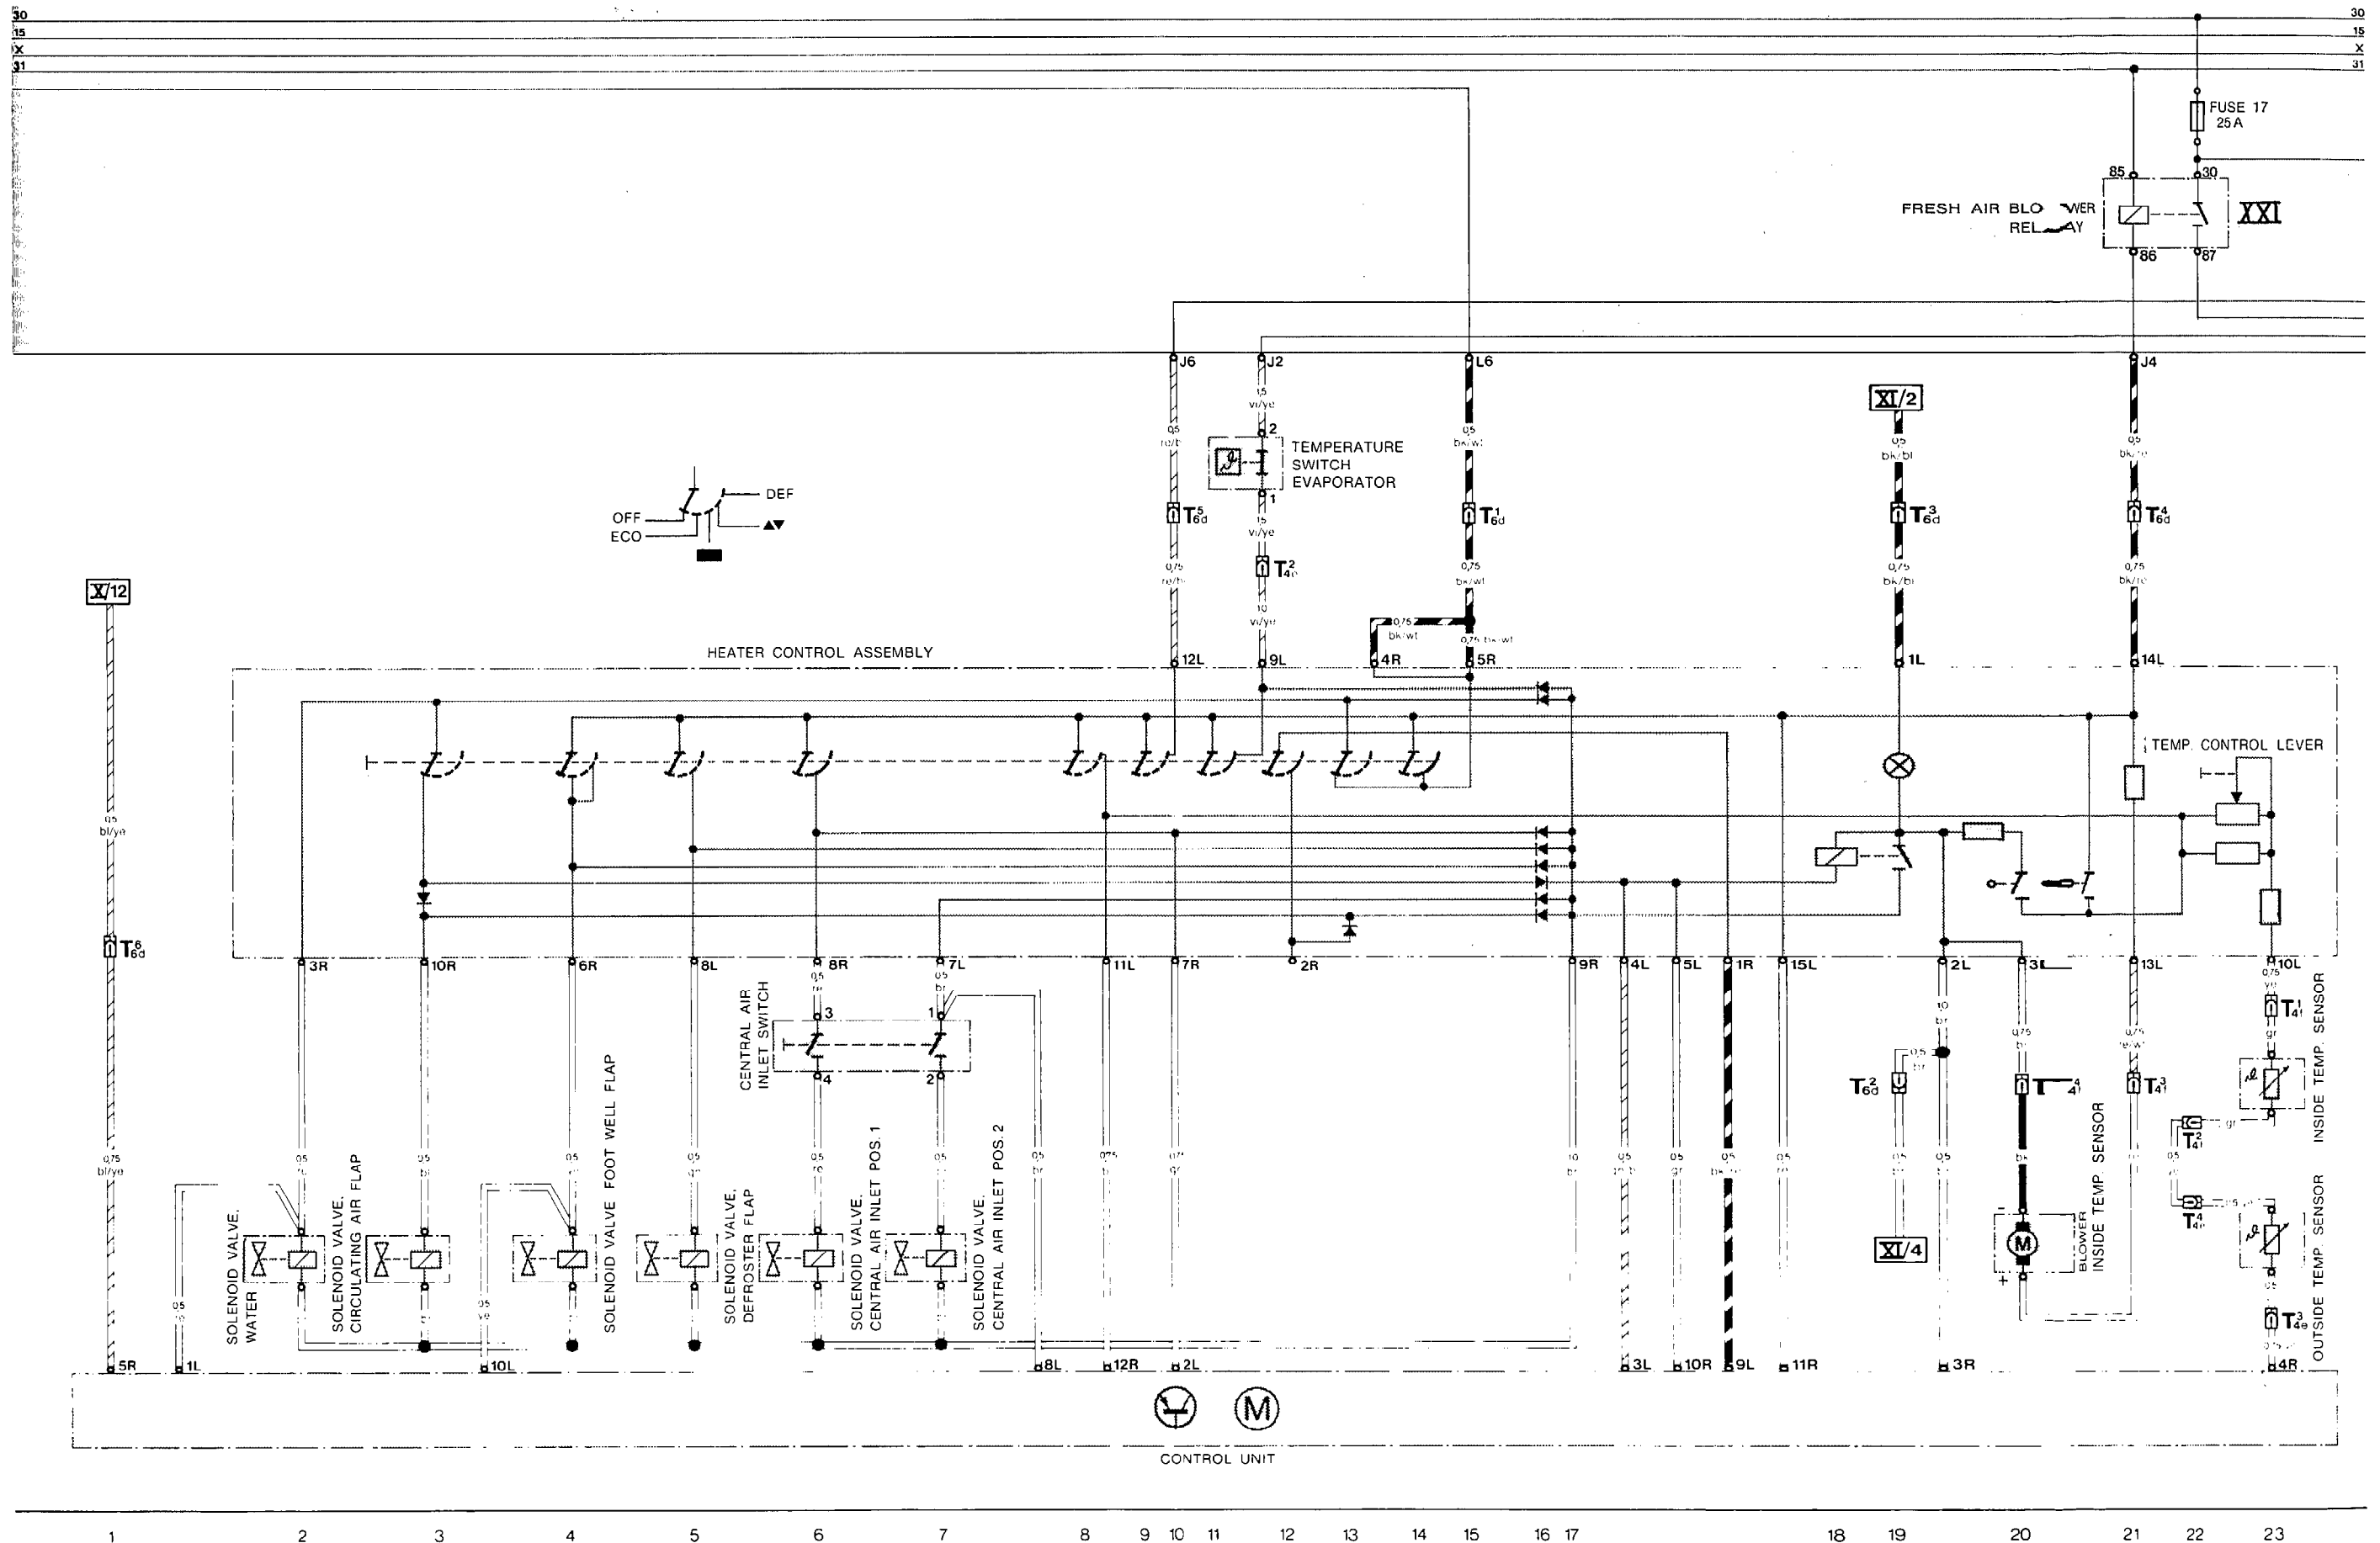

AUTOMATIC AIR CONDITIONER (OPTIONAL)


Current Flow Diagram Type 928 USA Model 81 Part IX

AUTOMATIC AIR CONDITIONER
SENDER UNITS

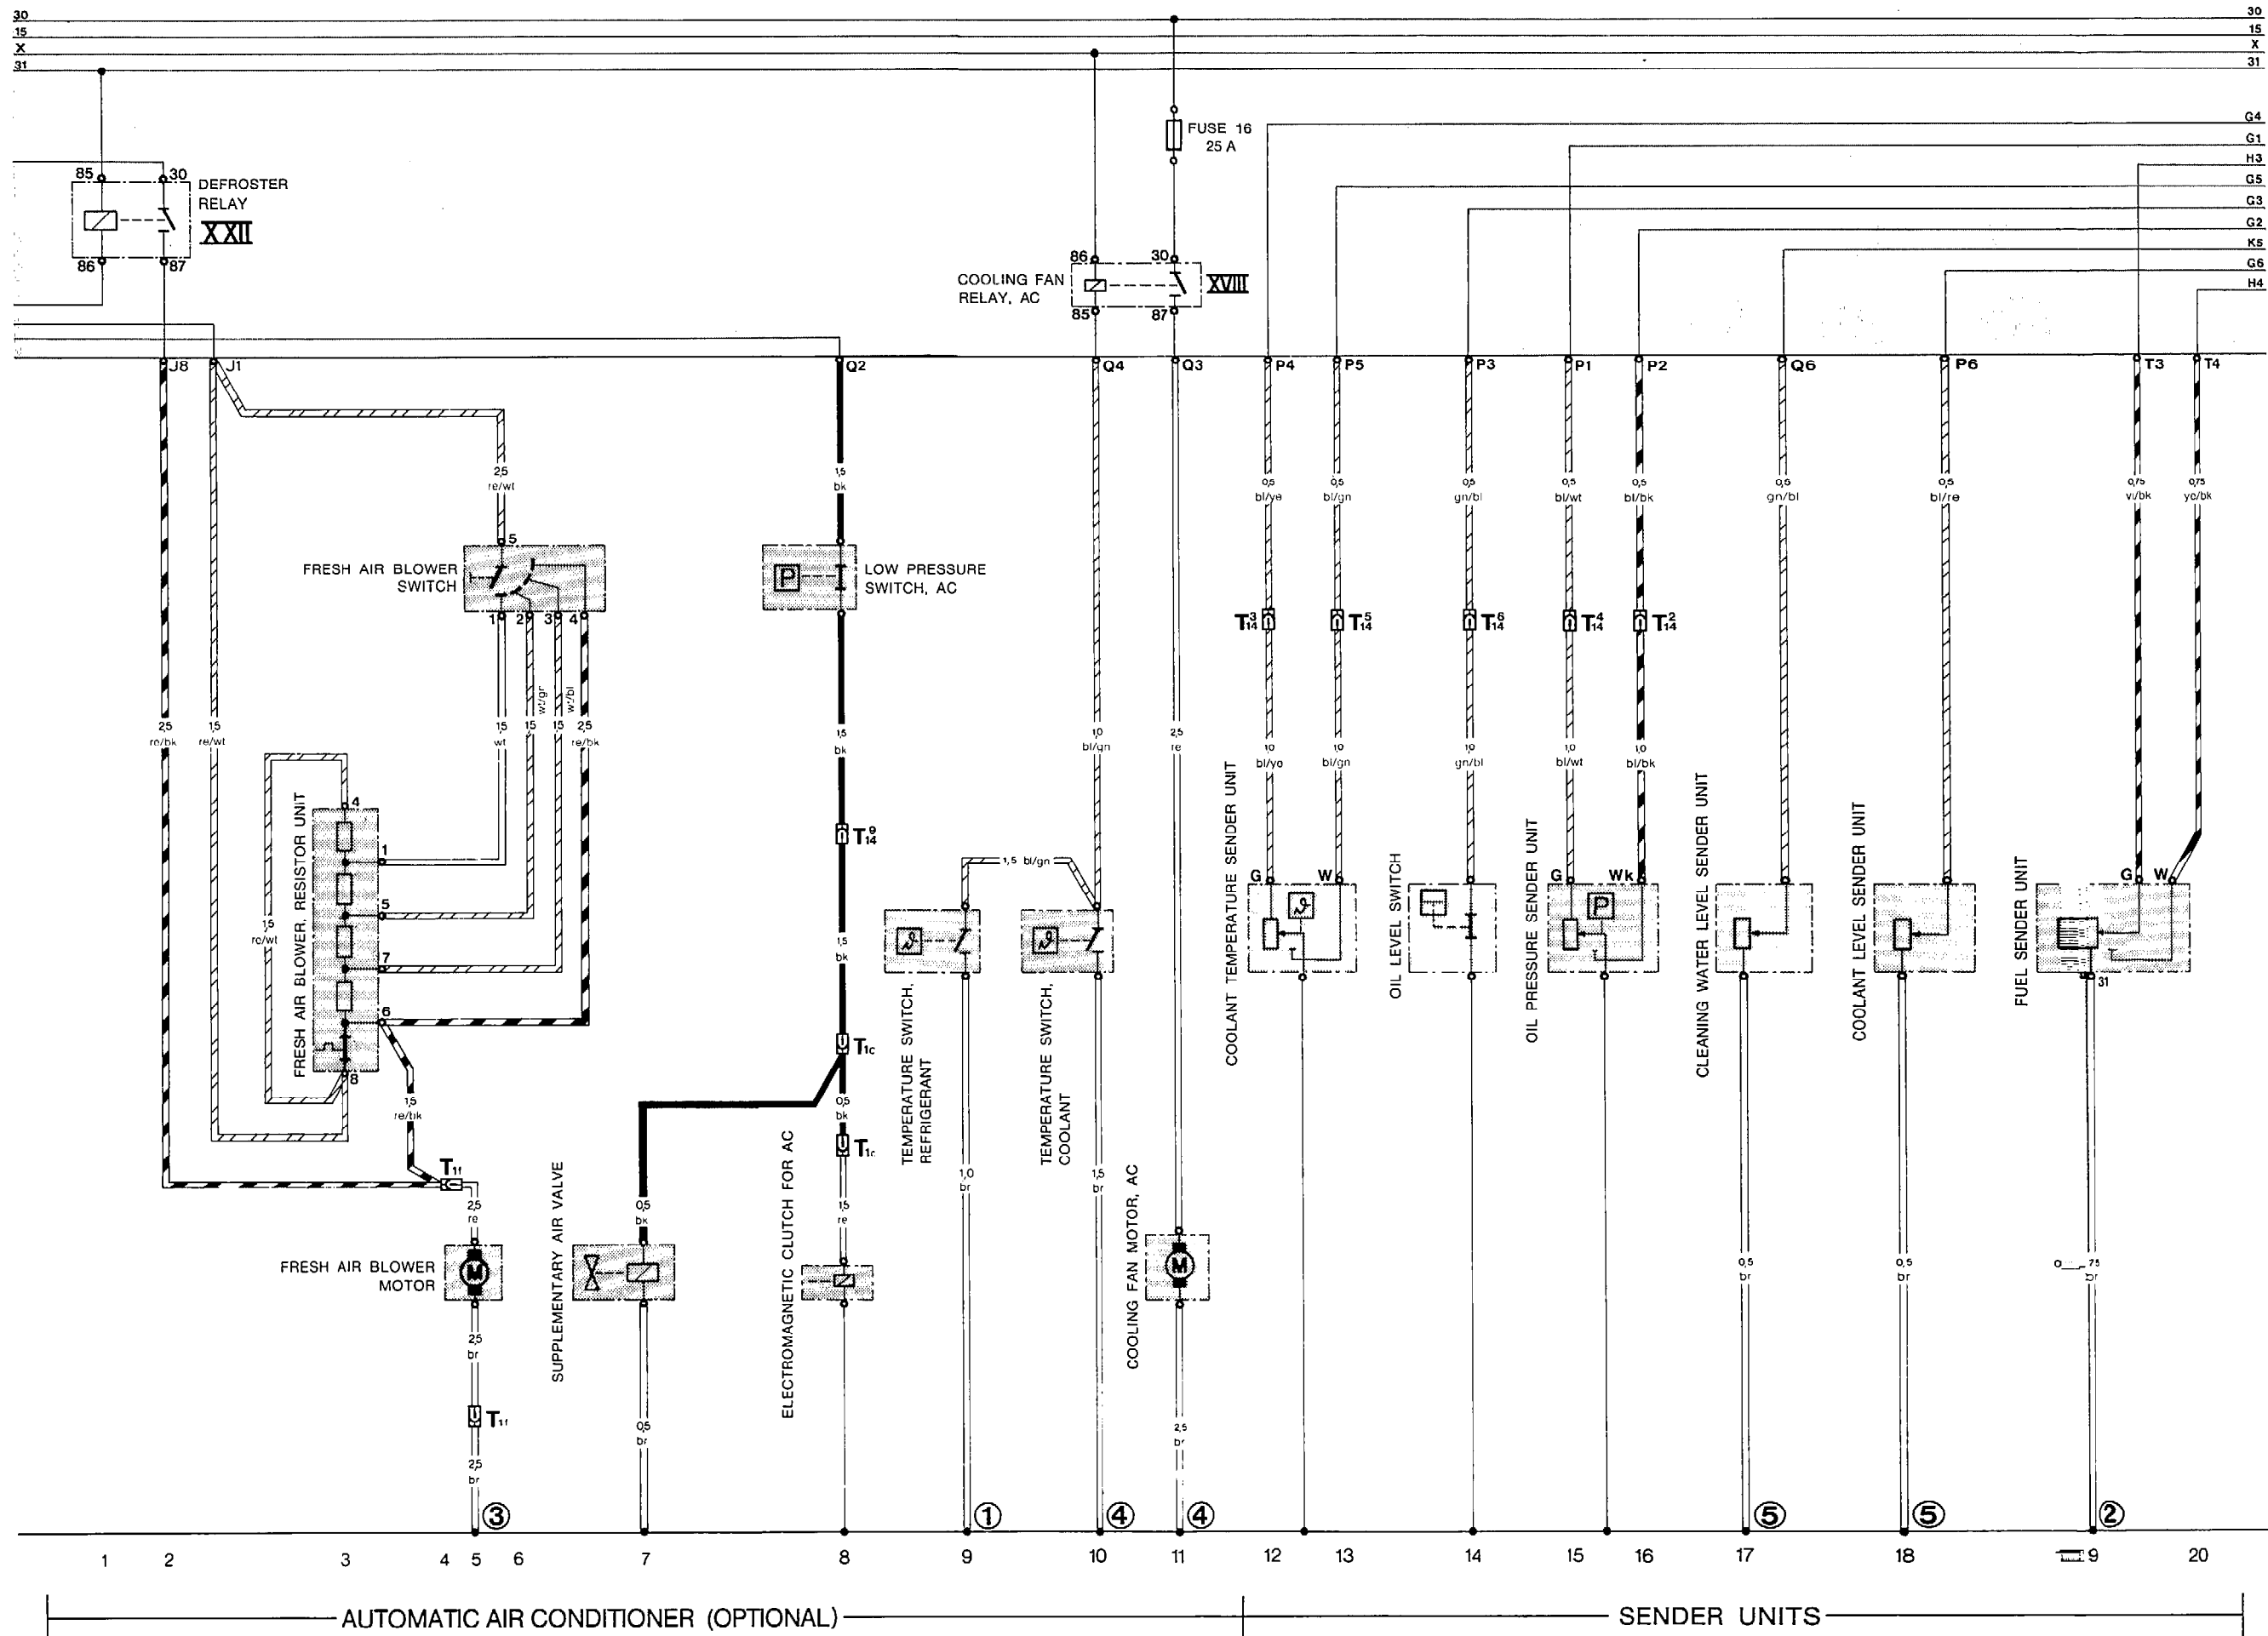


Current Flow Diagram Type 928 USA Model 81 Part X

CENTRAL WARNING UNIT, INSTRUMENT CLUSTER

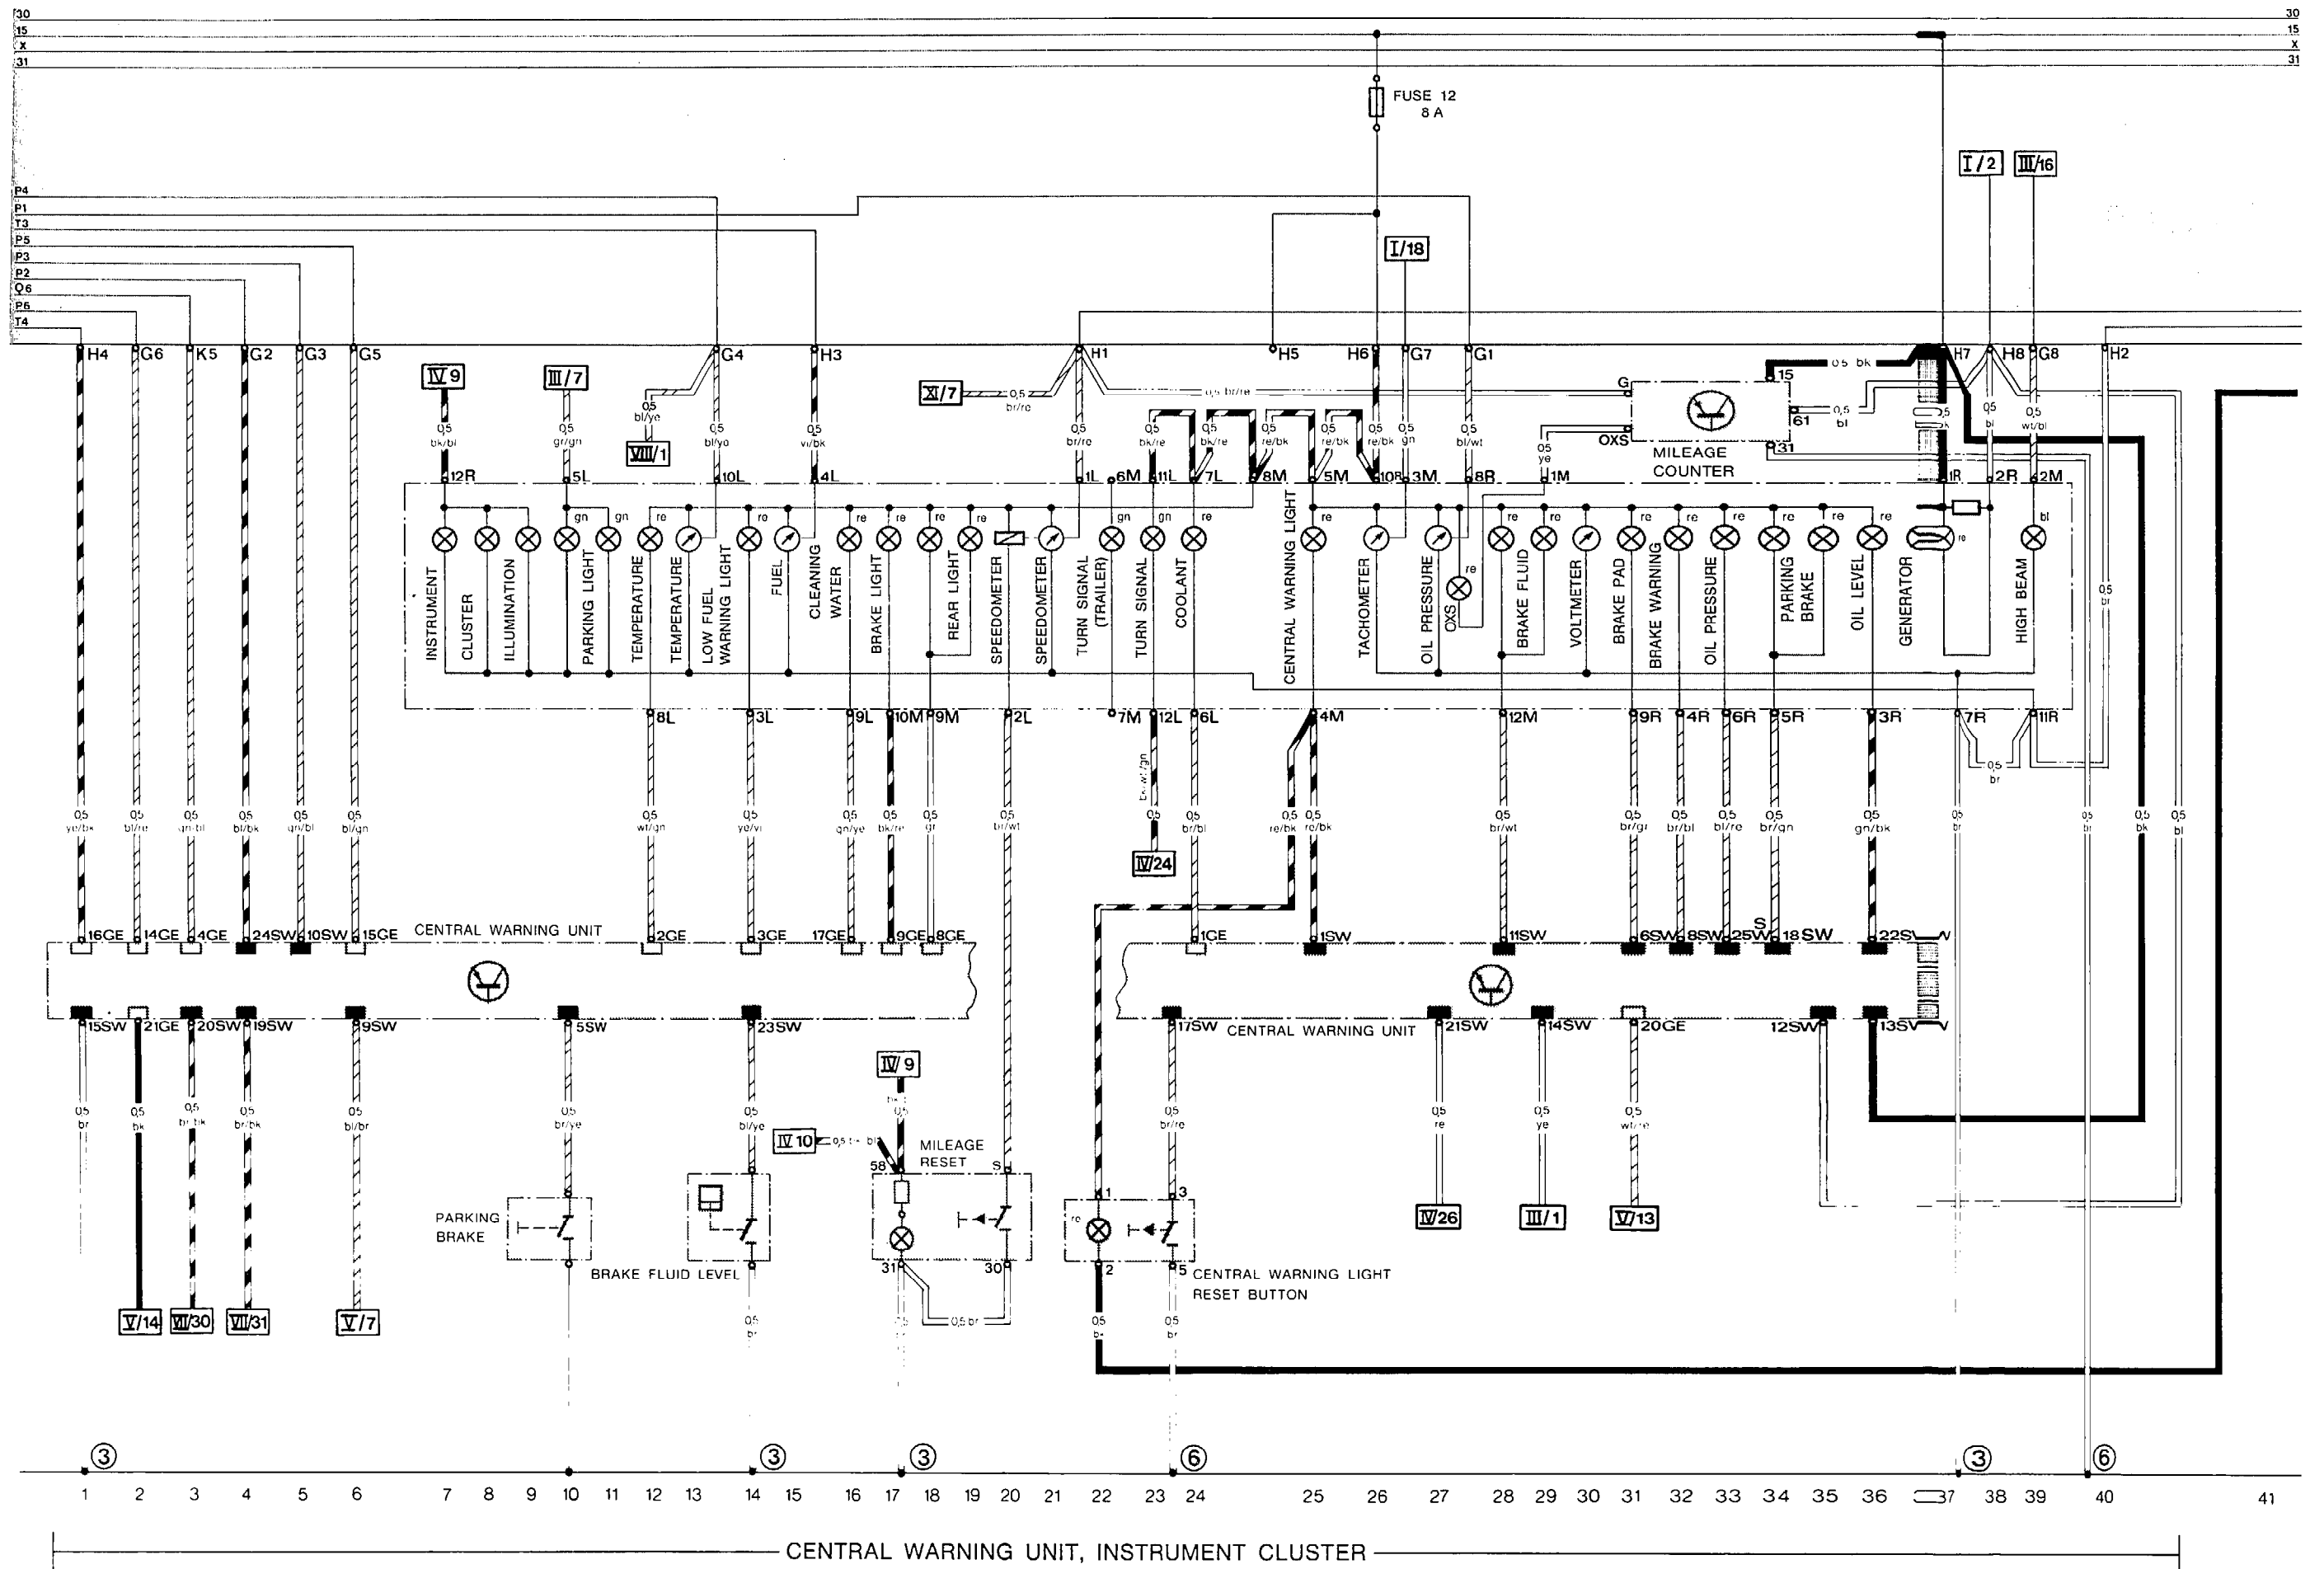


Current Flow Diagram Type 928 USA Model 81 Part XI

CLOCK
CIGARETTE LIGHTER
TEMPOSTAT (CRUISE CONTROL)
HORNS
RADIO
POWER SEAT

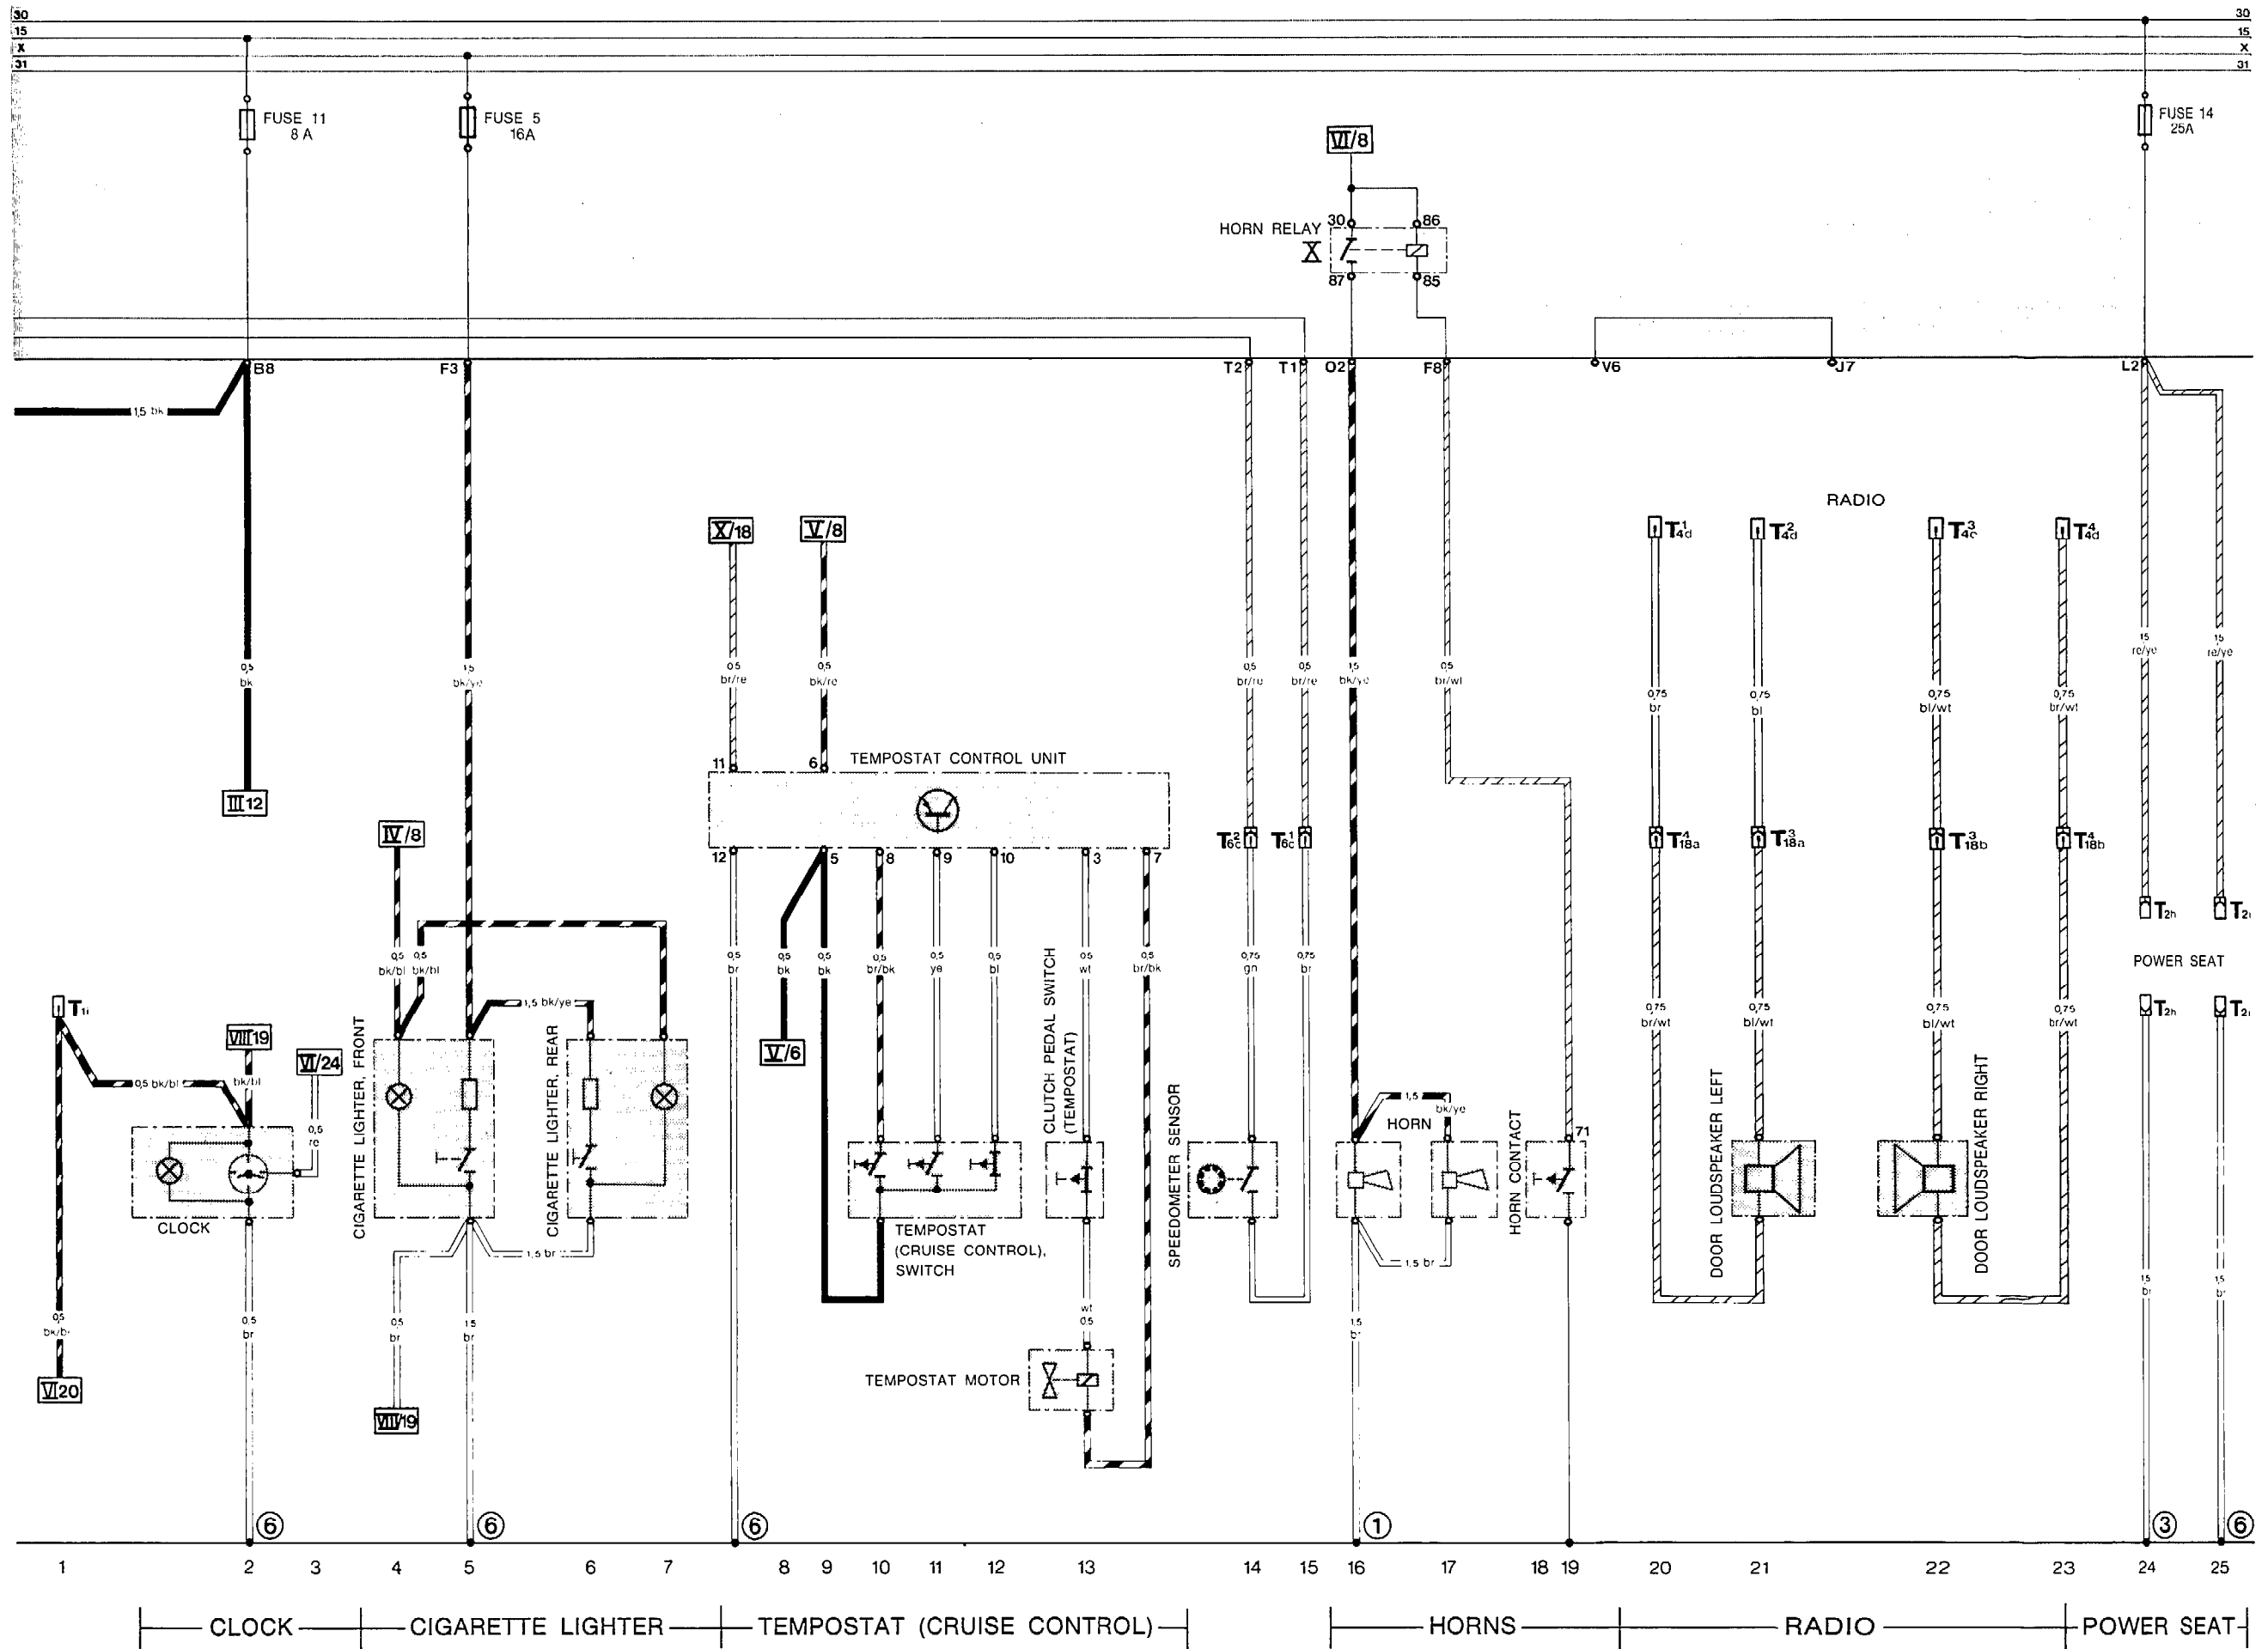

Additional Current Flow Diagram Type 928 USA Model 81

HEATING/VENTILATION/AC

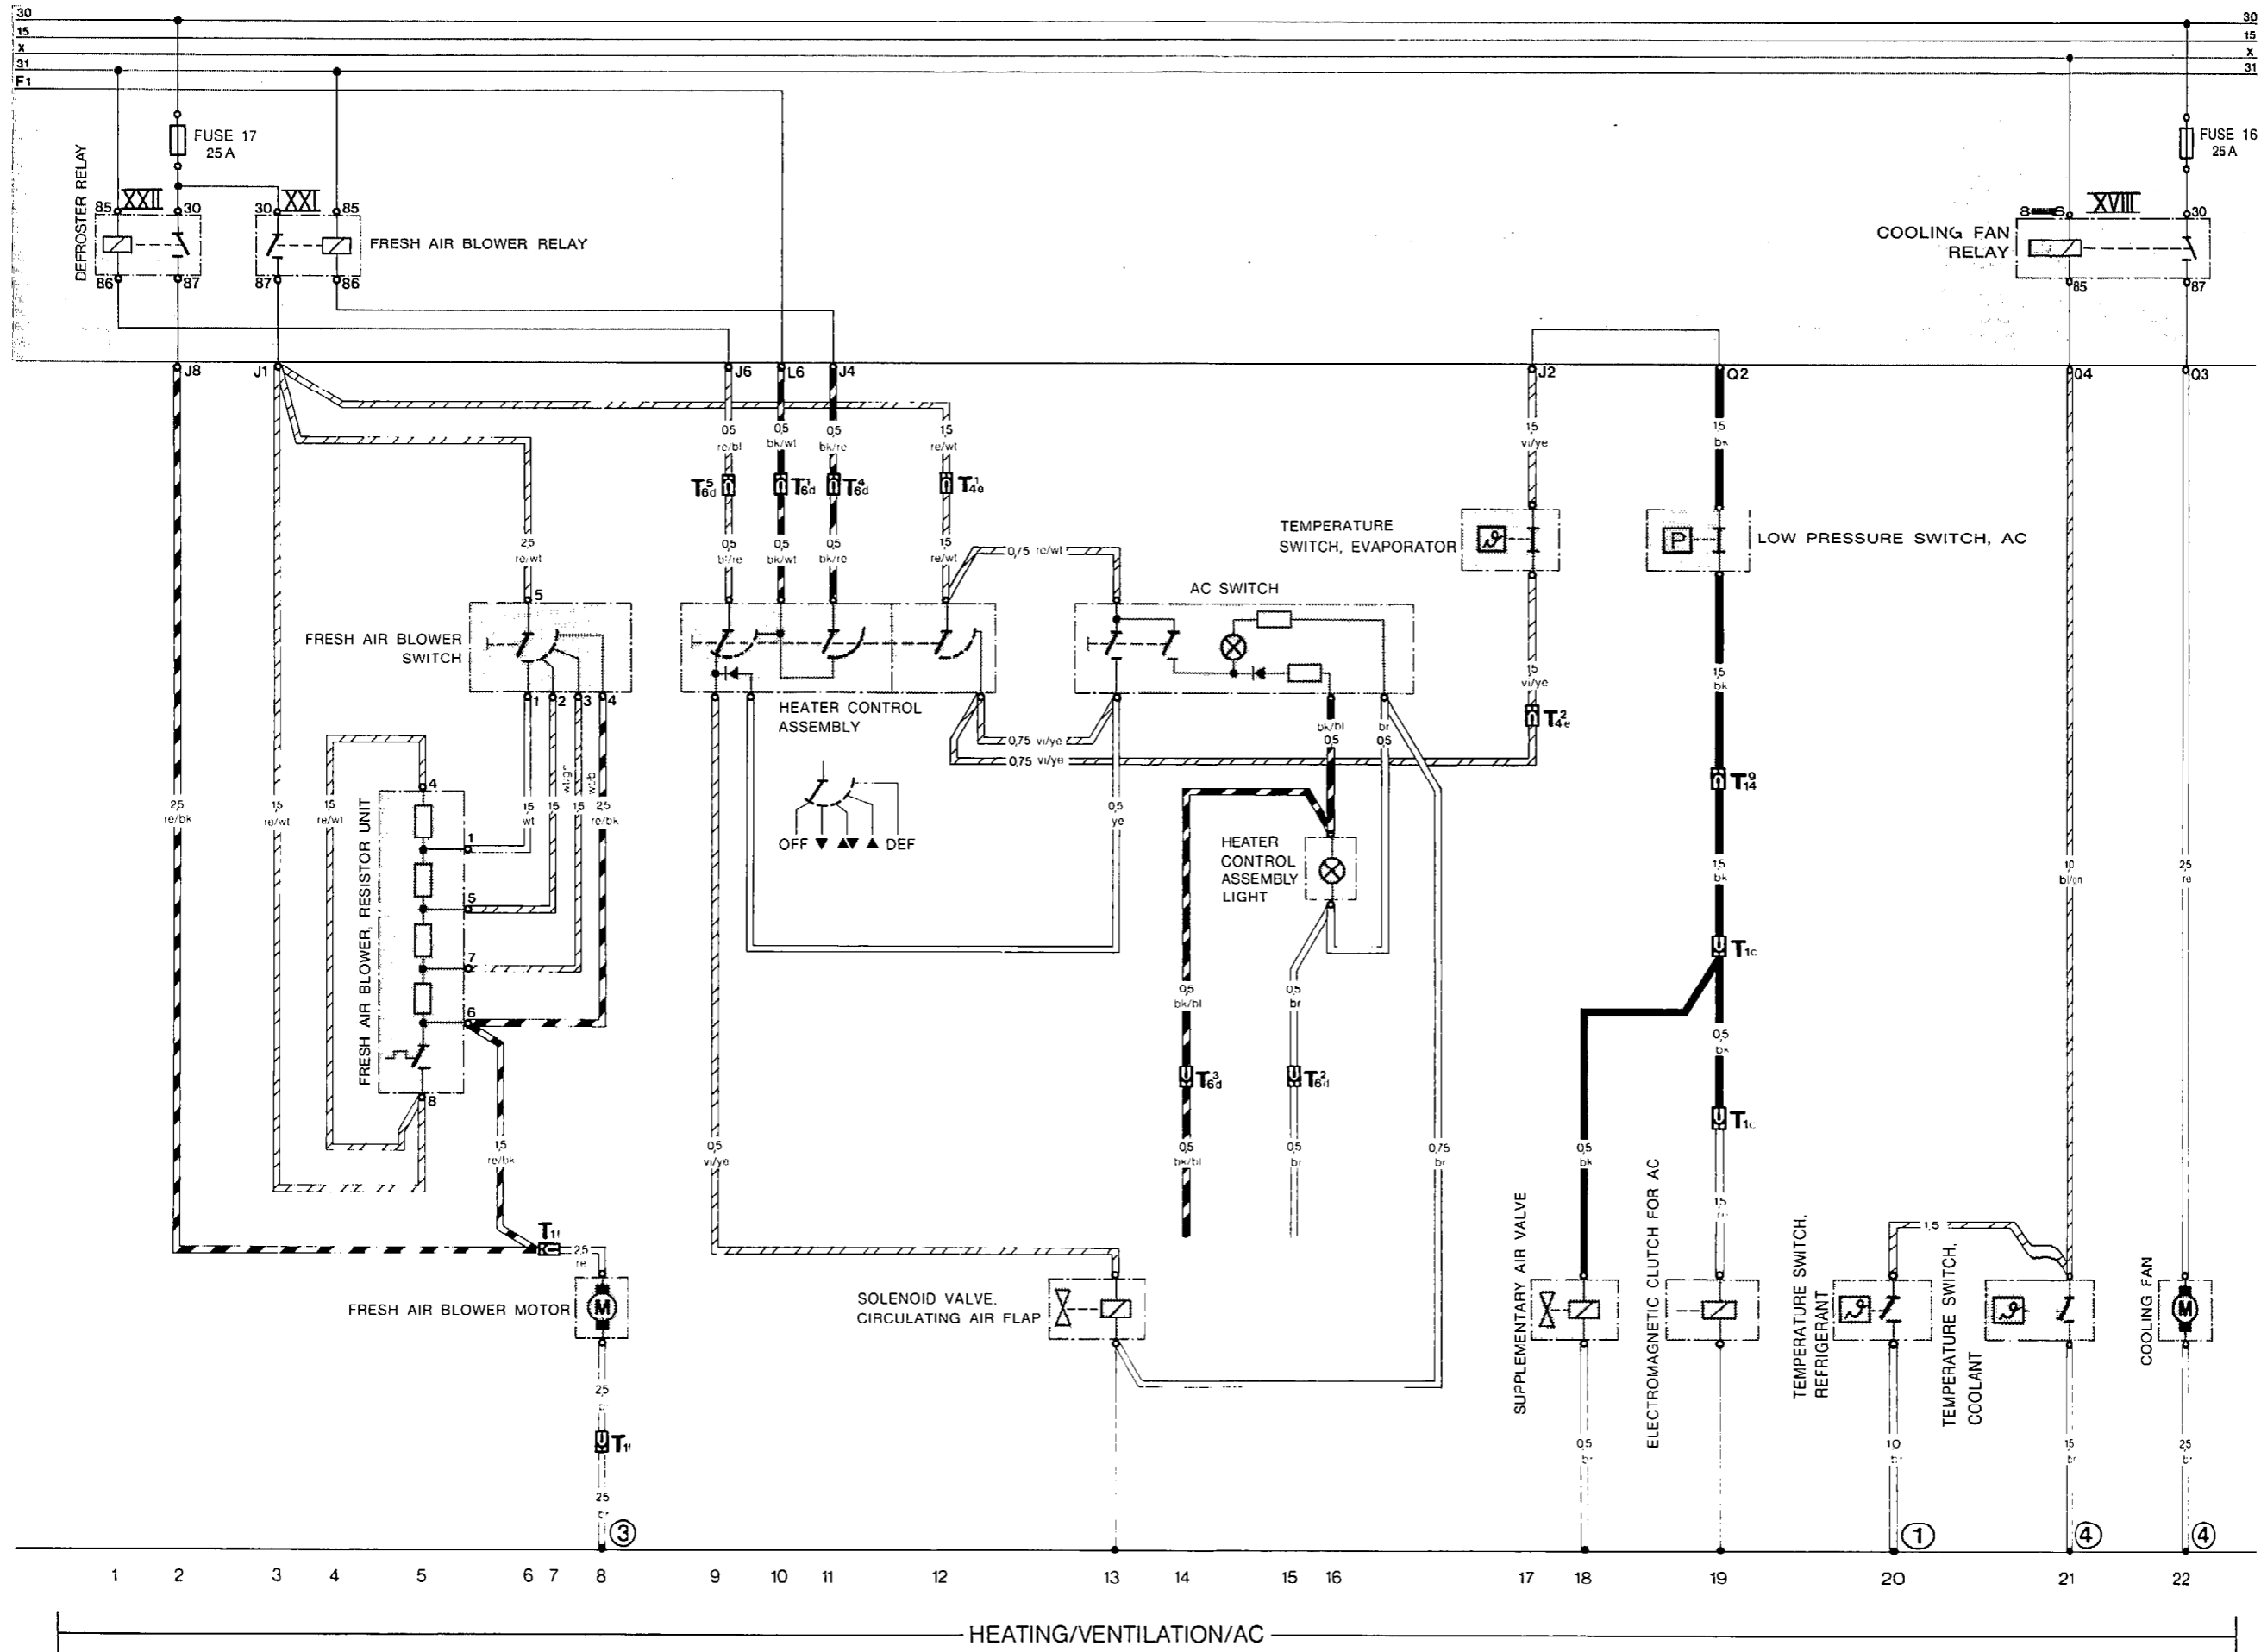


HEATING/VENTILATION/AC

Additional Current Flow Diagram Type 928 USA Model 81

97

Power seat

Wiring

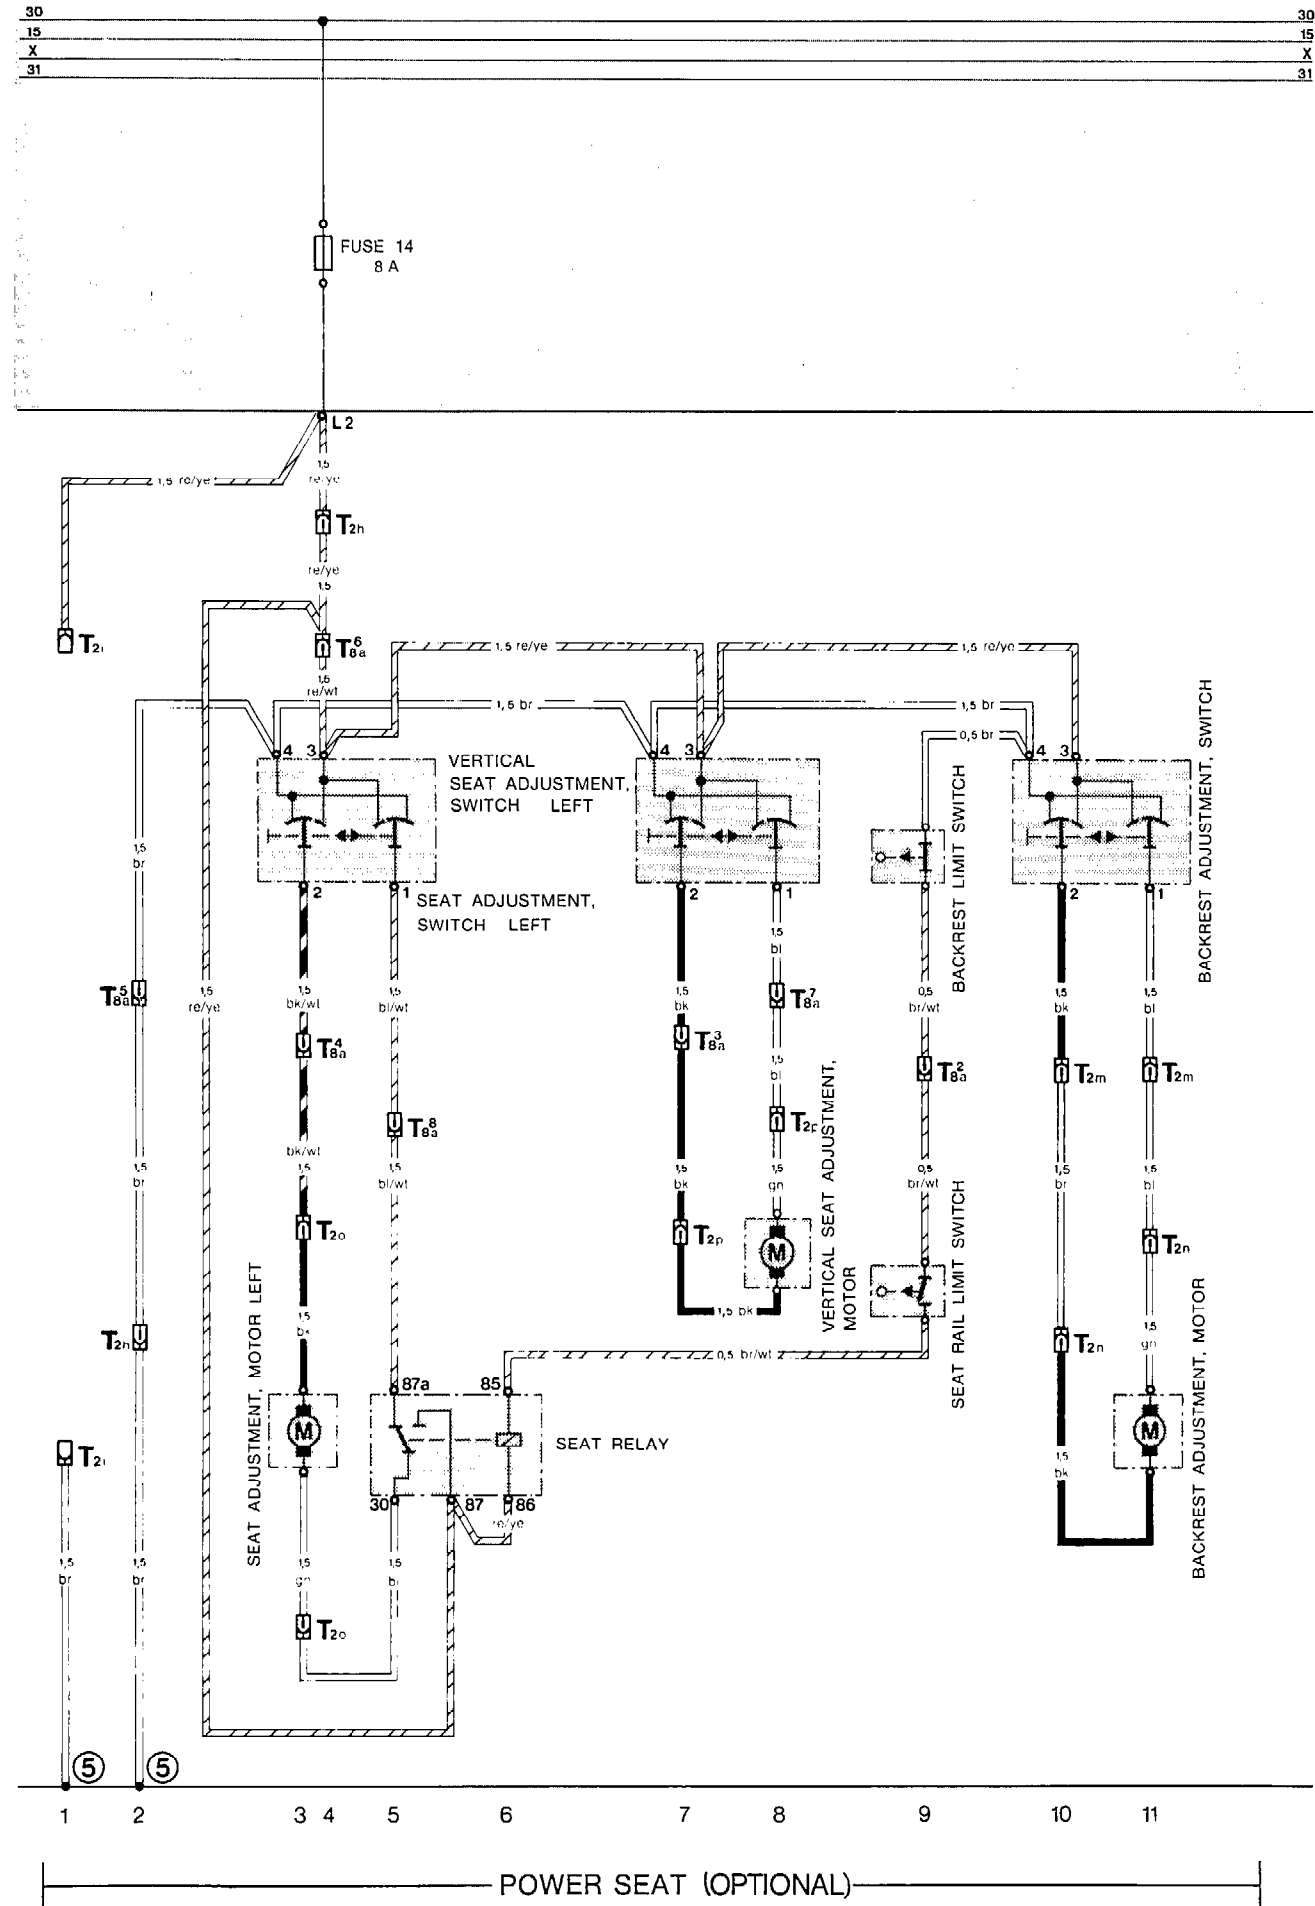


Additional Current Flow Diagram Type 928 USA Model 81

97

Wiring

Sliding Roof

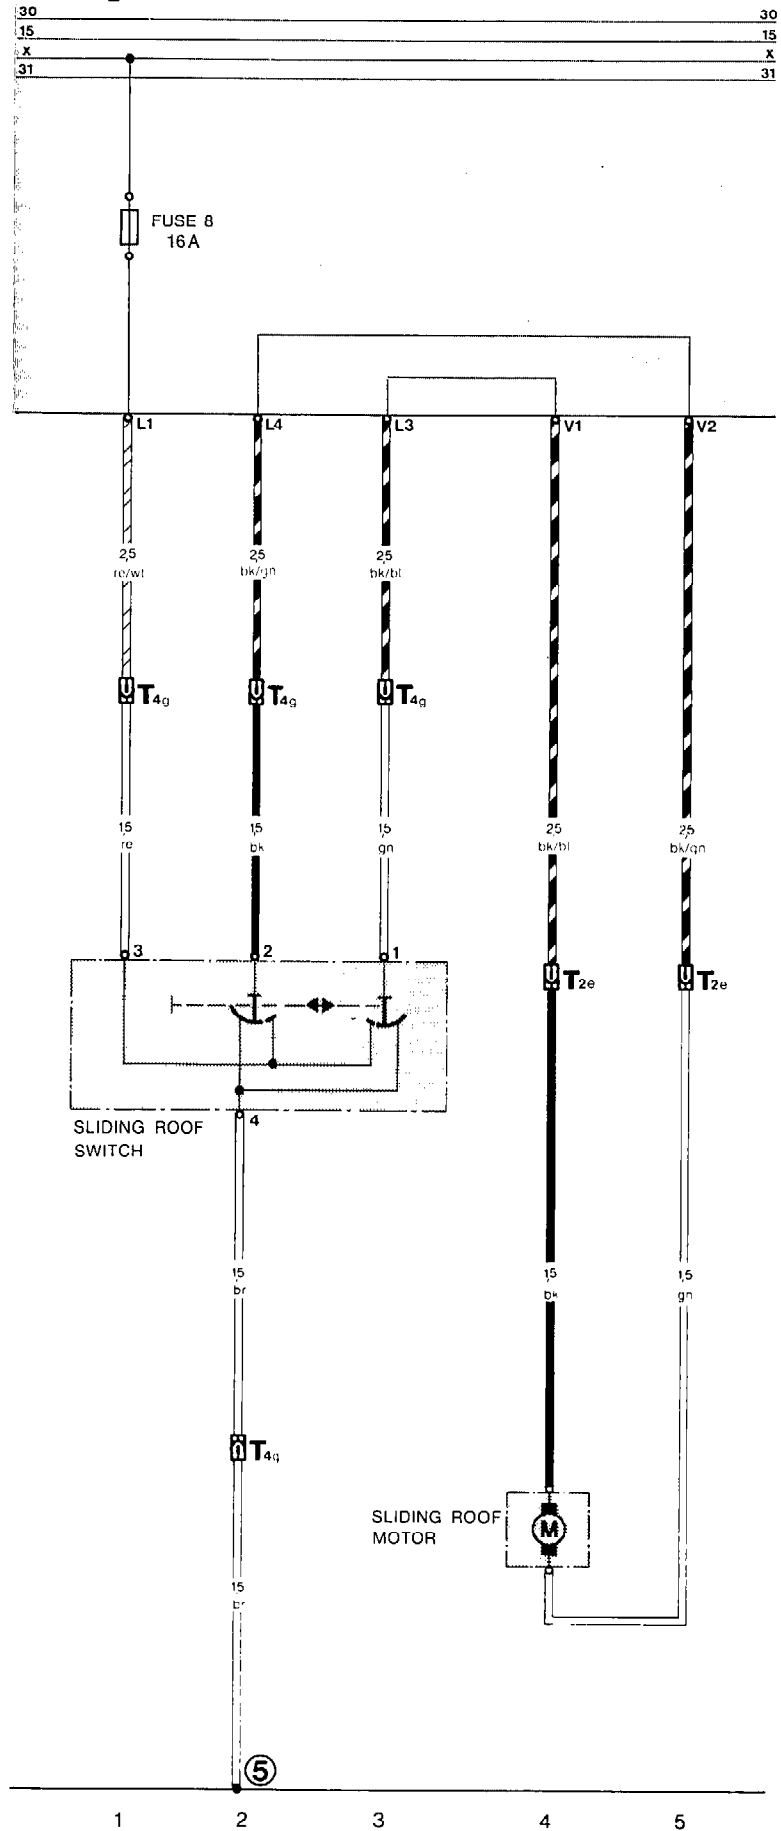

SLIDING ROOF (OPTIONAL)

Additional Current Flow Diagram


Type 928 USA Model 81

97

RADIO WITH
4 LOUDSPEAKERS

Wiring

30	30
15	15
X	X
31	31

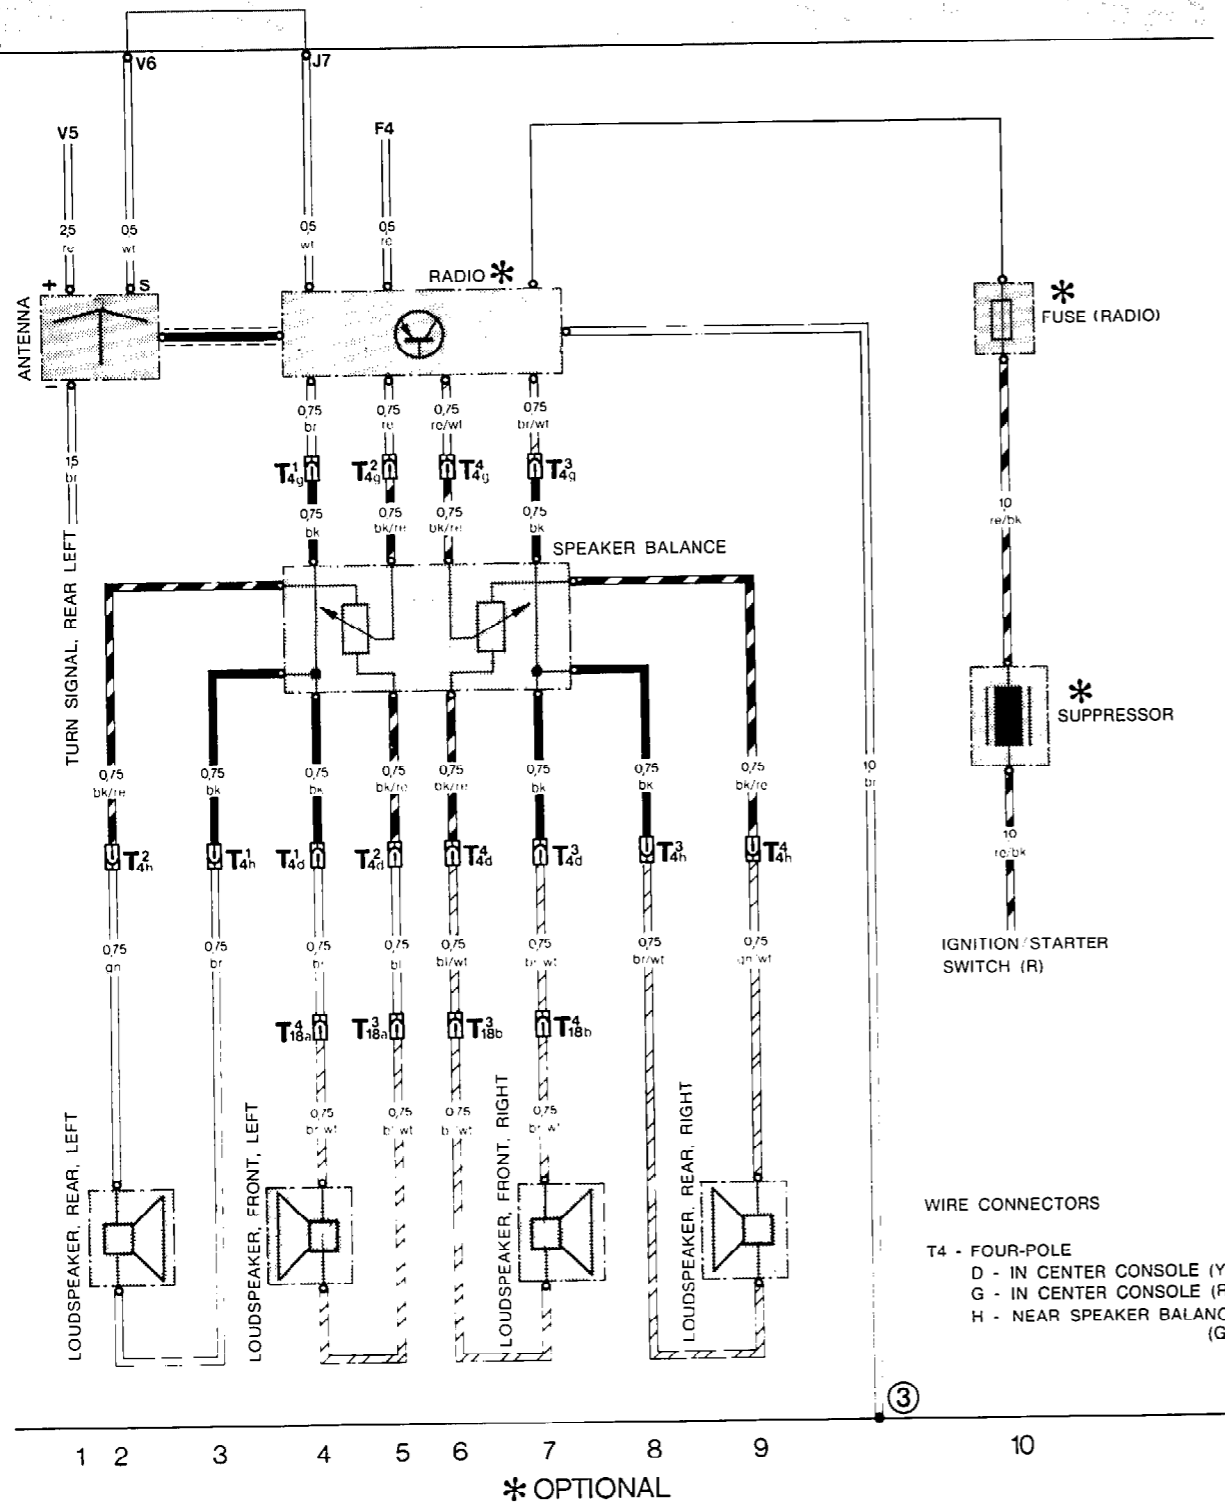


* OPTIONAL

Additional Current Flow Diagram Type 928 USA Model 81

RADIO WITH 4 LOUDSPEAKERS AND BOOSTER

RADIO WITH 4 LOUDSPEAKERS AND BOOSTER

30	30
15	15
X	X
31	31

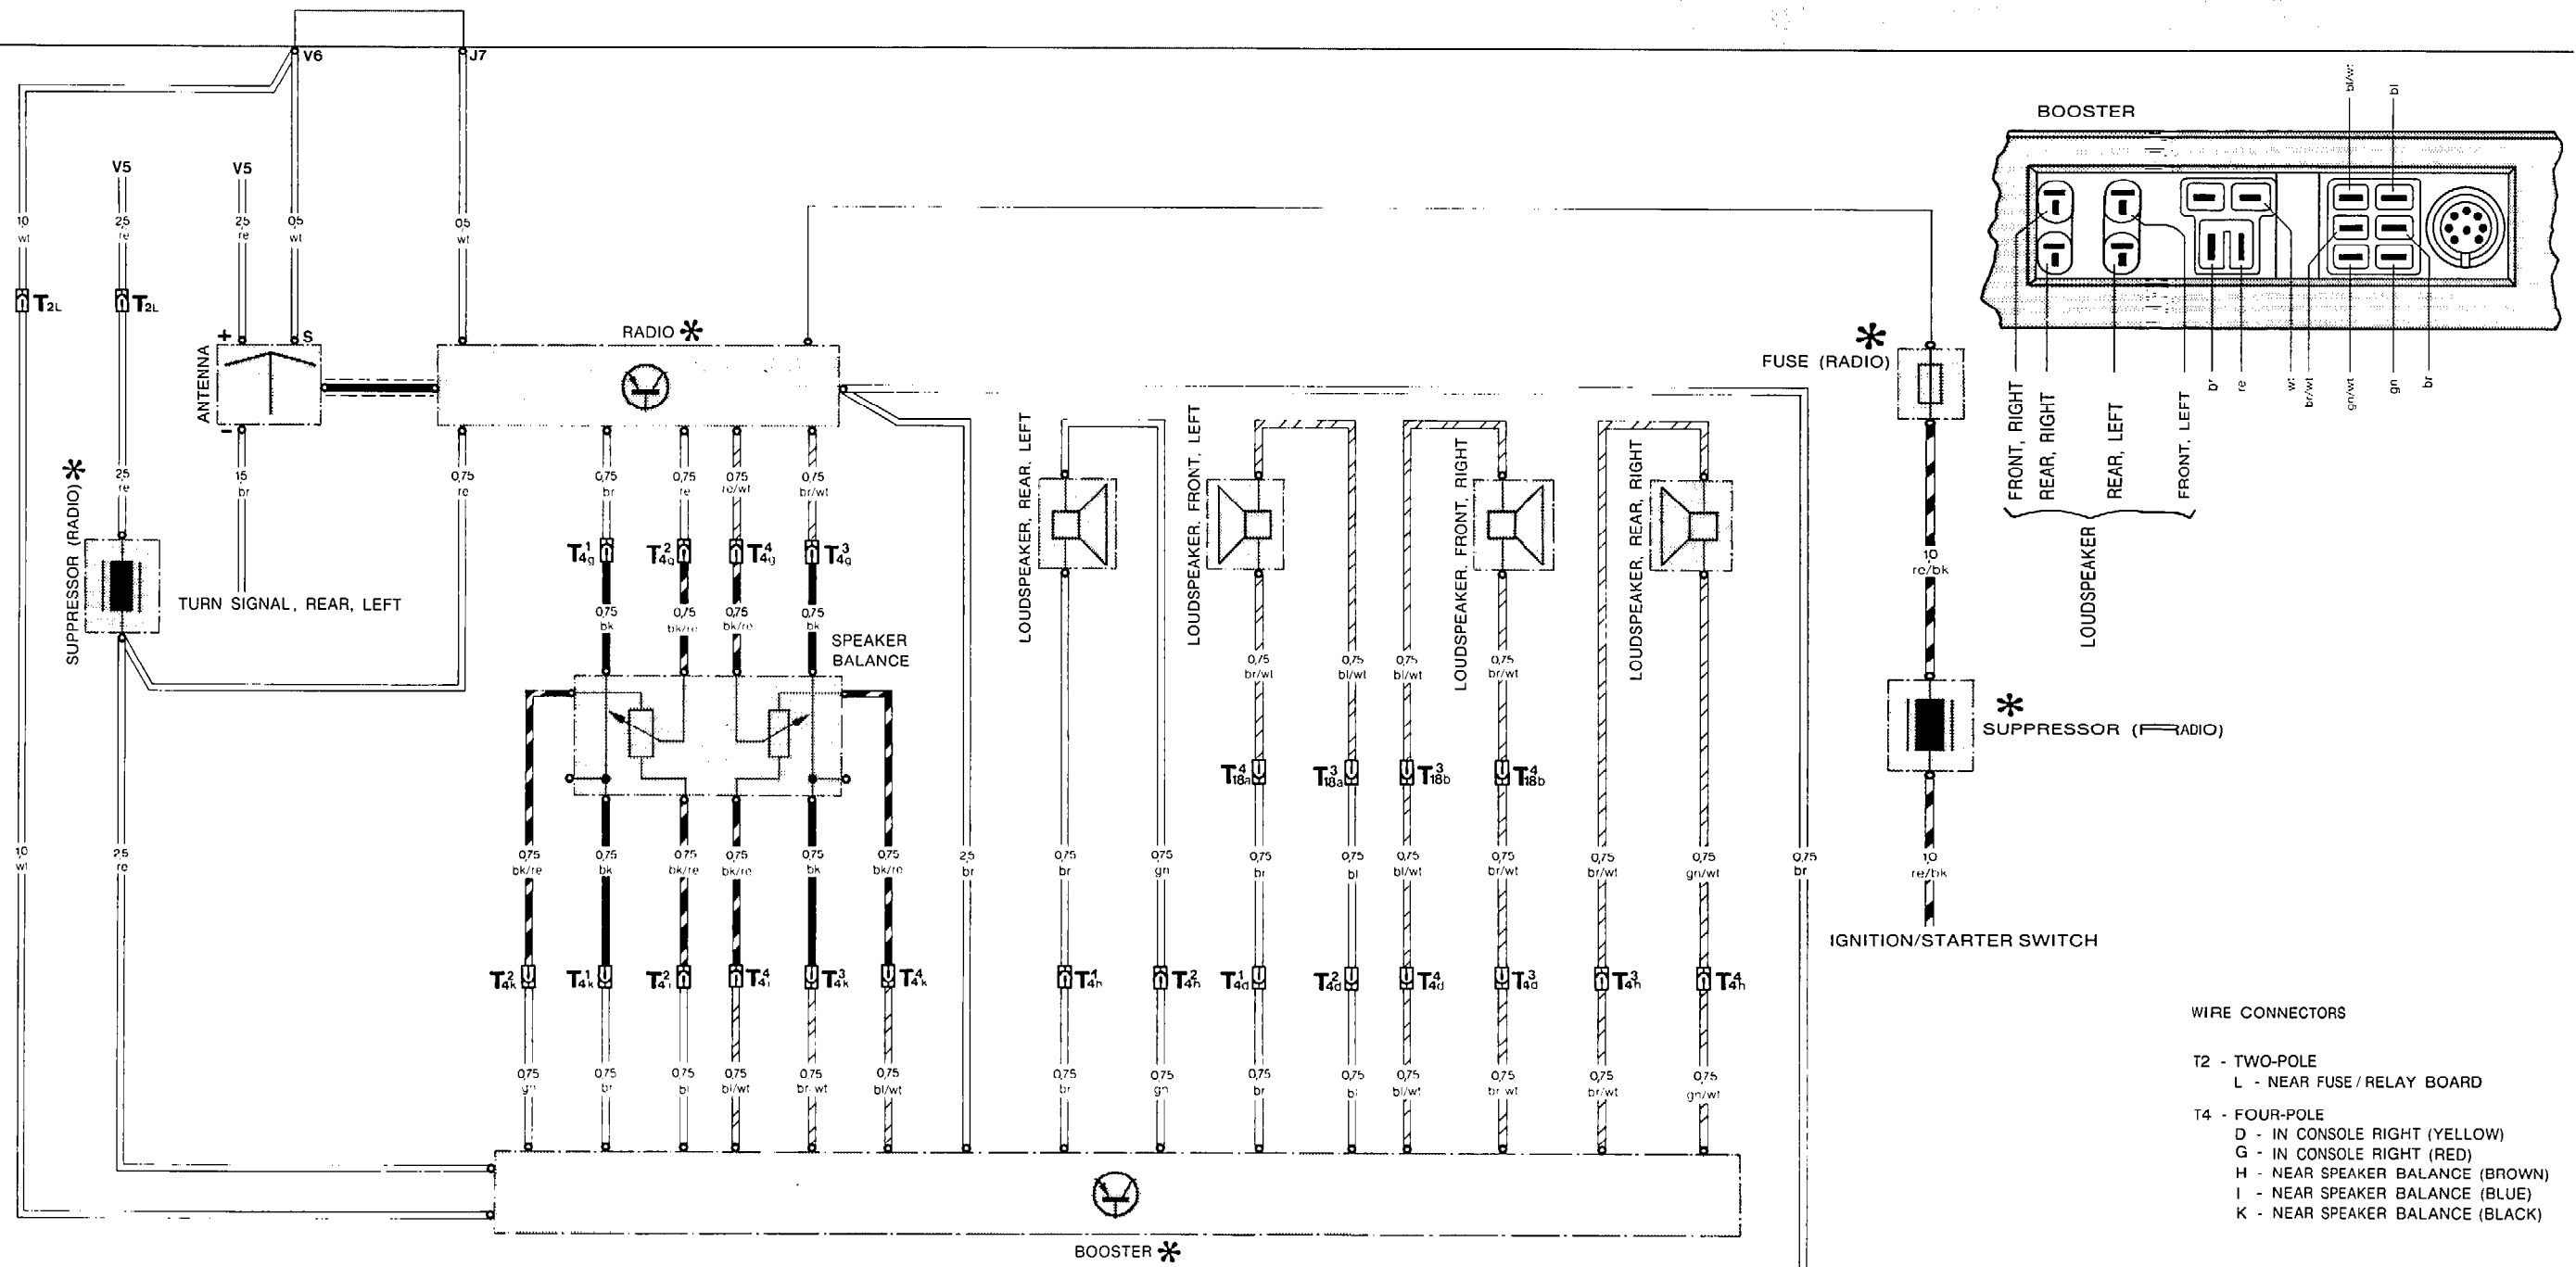

- WIRE CONNECTORS
- T2 - TWO-POLE
L - NEAR FUSE / RELAY BOARD
 - T4 - FOUR-POLE
D - IN CONSOLE RIGHT (YELLOW)
G - IN CONSOLE RIGHT (RED)
H - NEAR SPEAKER BALANCE (BROWN)
I - NEAR SPEAKER BALANCE (BLUE)
K - NEAR SPEAKER BALANCE (BLACK)

* OPTIONAL