

Wiring Diagram Type 928 S Model 84

PAGE 01	CENTRAL ELECTRIC
PAGE 02	CENTRAL ELECTRIC (USA, JAPAN)
PAGE 1	FRONT END AND ENGINE, ELECTRONIC IGNITION/LH INJECTION
PAGE 1A	FRONT END AND ENGINE (USA, JAPAN)
PAGE 2	PASSENGER COMPARTMENT AND INSTRUMENTS
PAGE 3	PASSENGER COMPARTMENT
PAGE 4	PASSENGER COMPARTMENT AND REAR END
PAGE 5	HEATING — VENTILATING — AIR CONDITIONING
PAGE 6	RADIO
PAGE 7	ABS
PAGE 8	ADDITIONAL WIRING DIAGRAM FOR BURGLAR ALARM


Wiring Diagram Type 928 S Model 84

PAGE 01	CENTRAL ELECTRIC
PAGE 02	CENTRAL ELECTRIC (USA, JAPAN)
PAGE 1	FRONT END AND ENGINE, ELECTRONIC IGNITION/LH INJECTION
PAGE 1A	FRONT END AND ENGINE (USA, JAPAN)
PAGE 2	PASSENGER COMPARTMENT AND INSTRUMENTS
PAGE 3	PASSENGER COMPARTMENT
PAGE 4	PASSENGER COMPARTMENT AND REAR END
PAGE 5	HEATING — VENTILATING — AIR CONDITIONING
PAGE 6	RADIO
PAGE 7	ABS
PAGE 8	ADDITIONAL WIRING DIAGRAM FOR BURGLAR ALARM

Wiring Diagram Type 928 S
Model 84 page 01

CENTRAL ELECTRIC

CENTRAL ELECTRIC

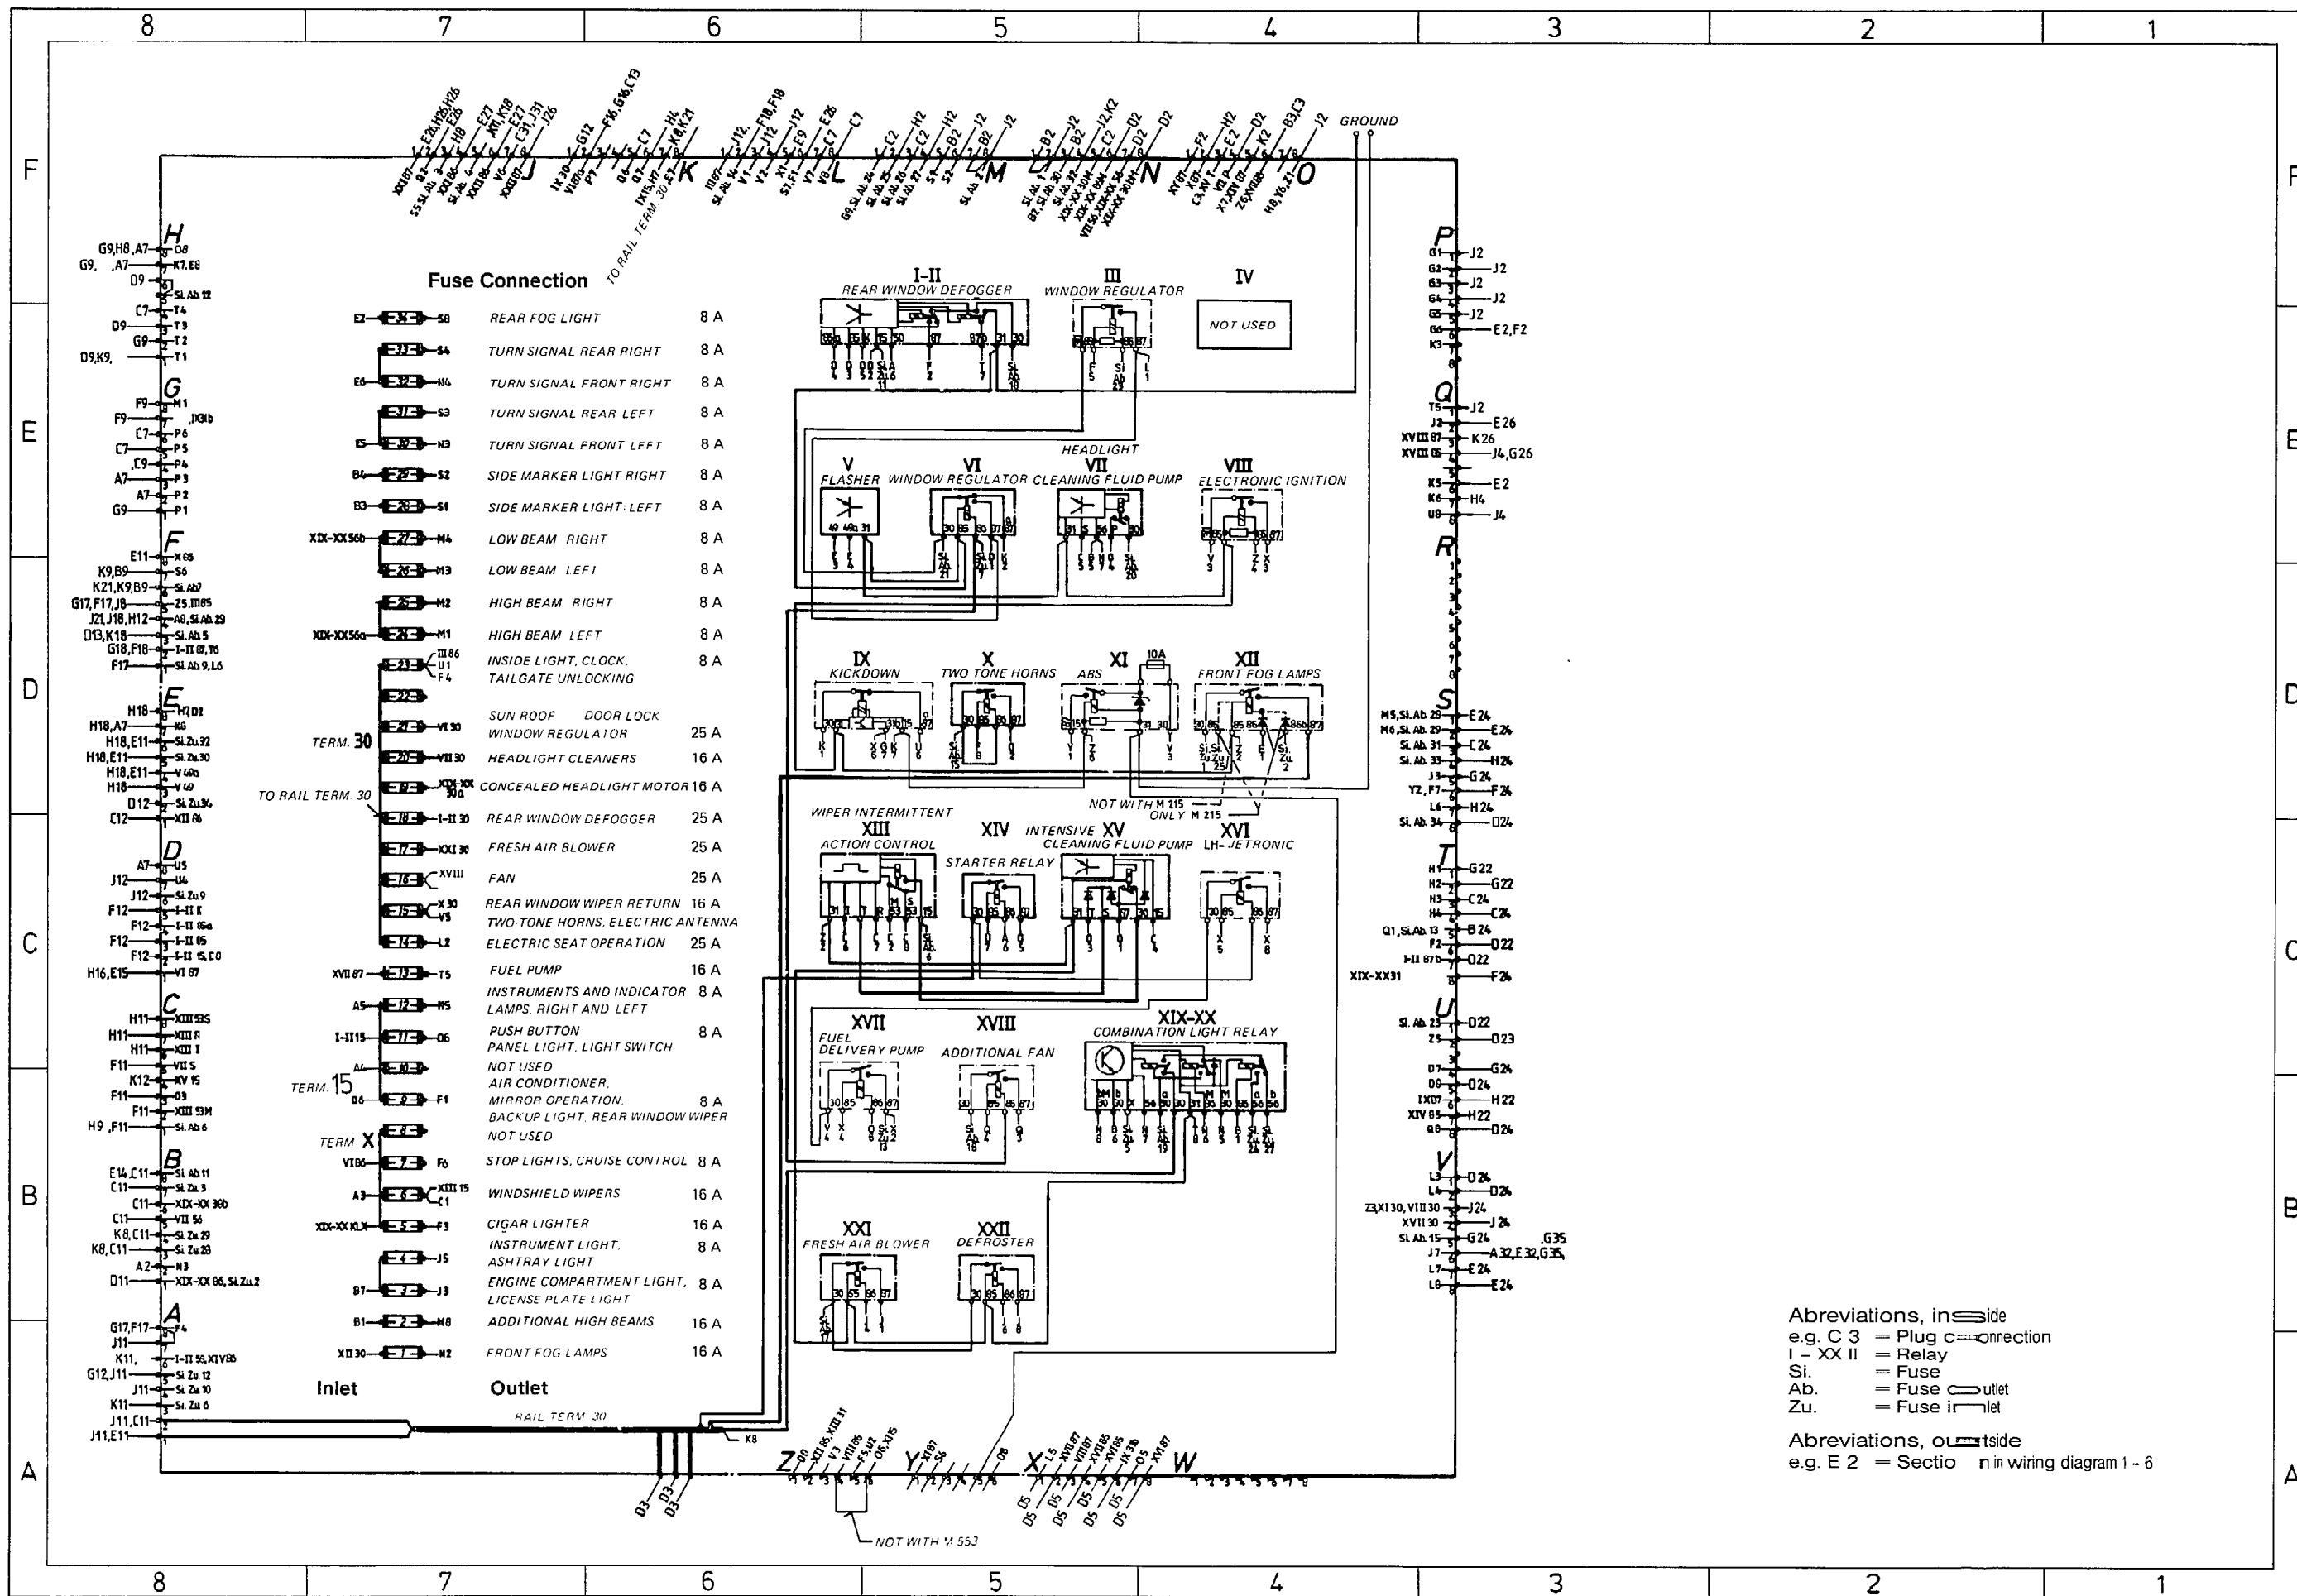


Abbreviations, inside
 e.g. C 3 = Plug connection
 I - XX II = Relay
 Si. = Fuse
 Ab. = Fuse outlet
 Zu. = Fuse inlet

Abbreviations, outside
 e.g. E 2 = Section in wiring diagram 1 - 6

Wiring Diagram Type 928 S Model 84 page 02

CENTRAL ELECTRIC (USA, JAPAN)


CENTRAL ELECTRIC (USA, JAPAN)

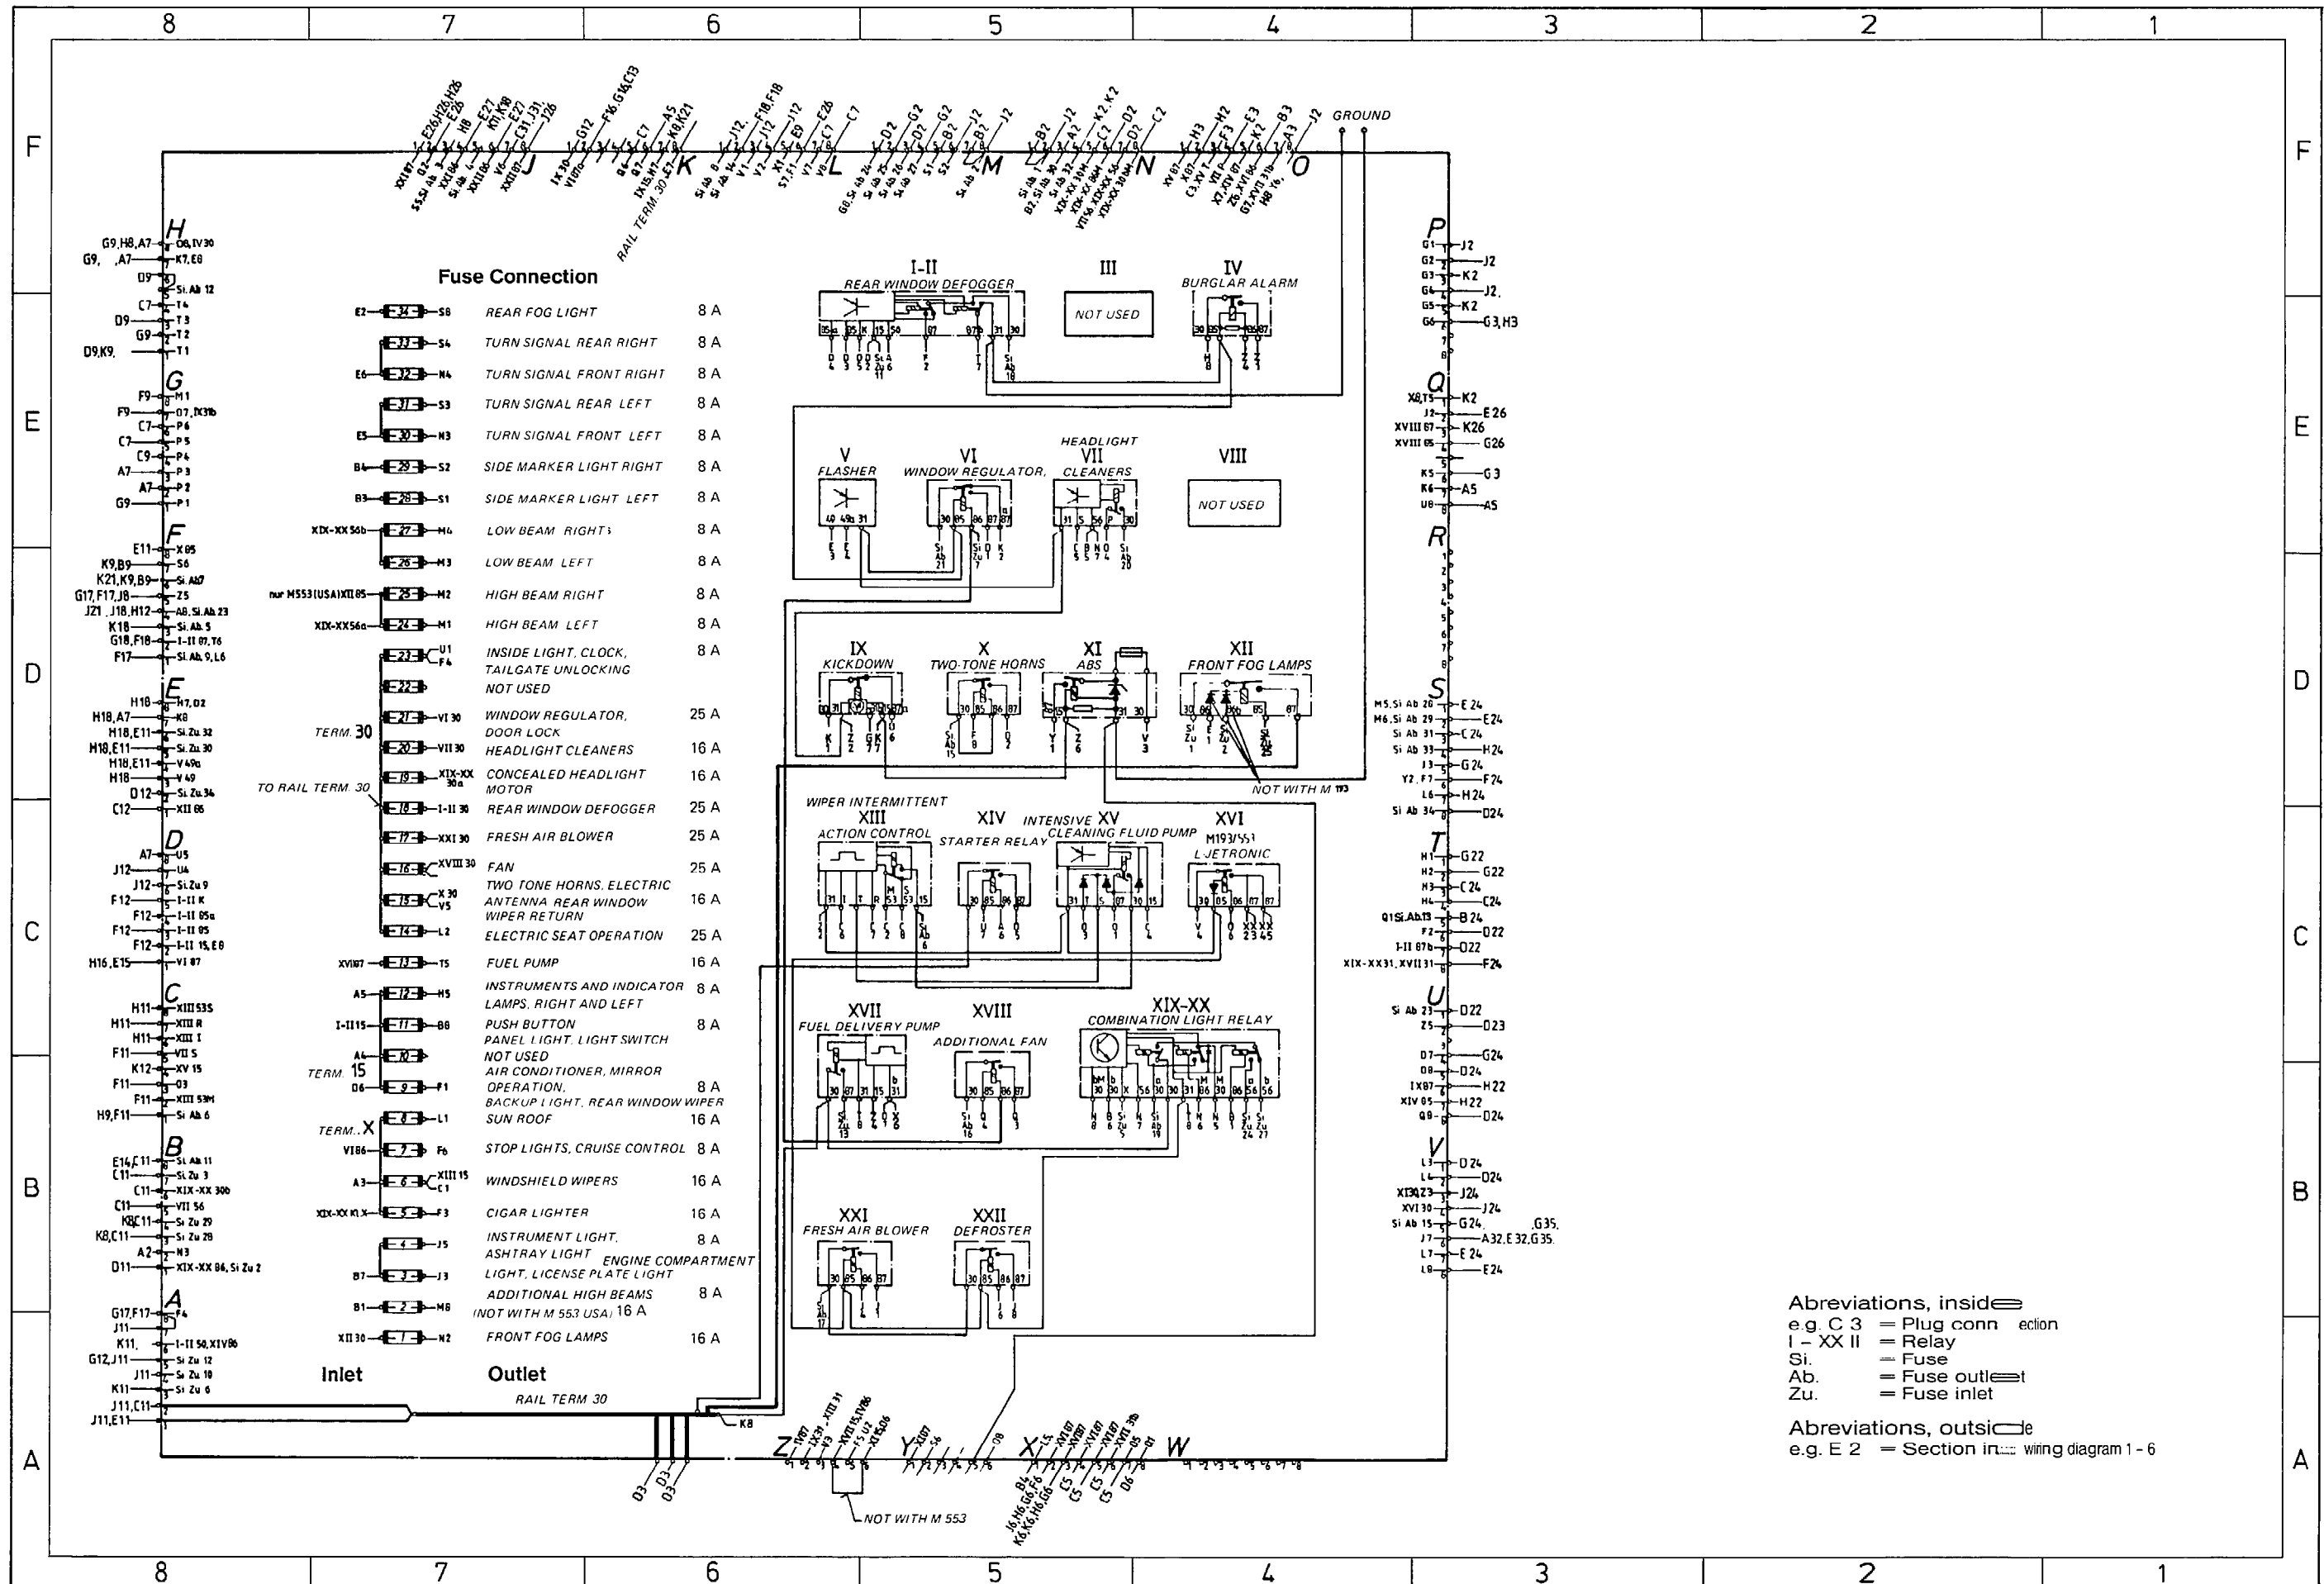

Wiring Diagram Type 928 S Model 84 page 1

FRONT END AND ENGINE, ELECTRONIC
IGNITION/LH INJECTION


FRONT END AND ENGINE, ELECTRONIC IGNITION/LH INJECTION

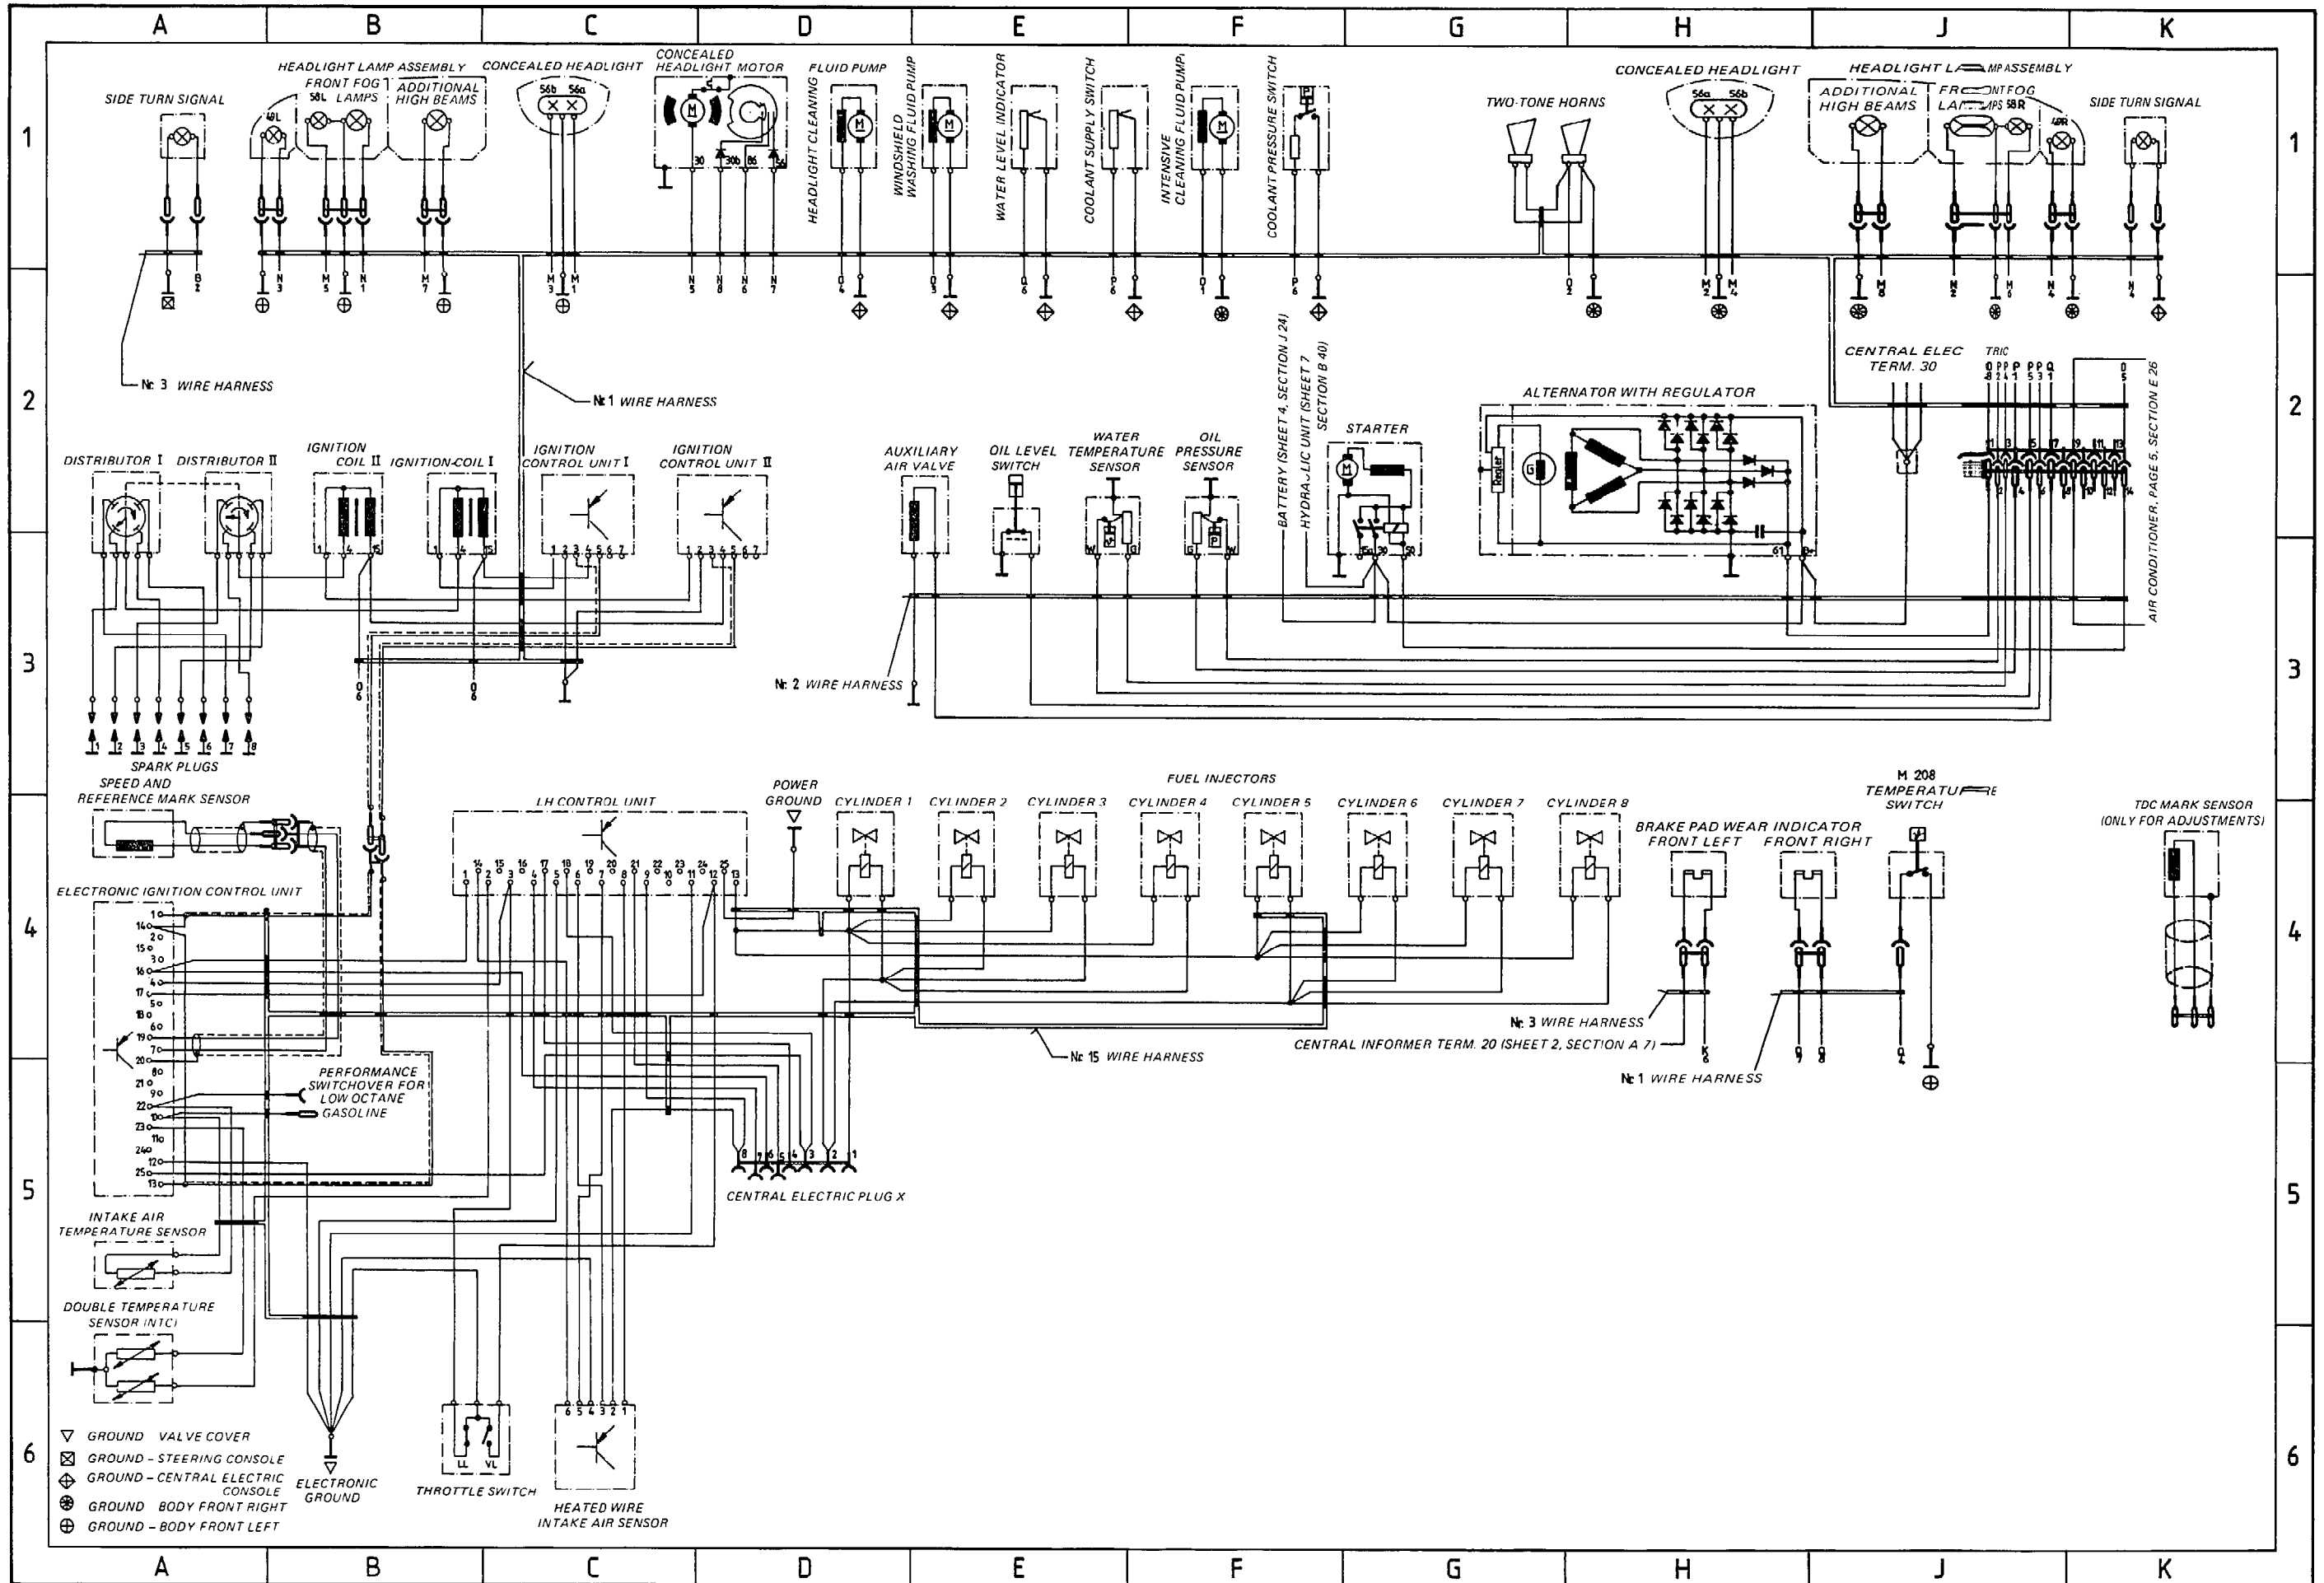

Wiring Diagram Type 928 S Model 84 page 1A

FRONT END AND ENGINE (USA, JAPAN)


FRONT END AND ENGINE (USA, JAPAN)

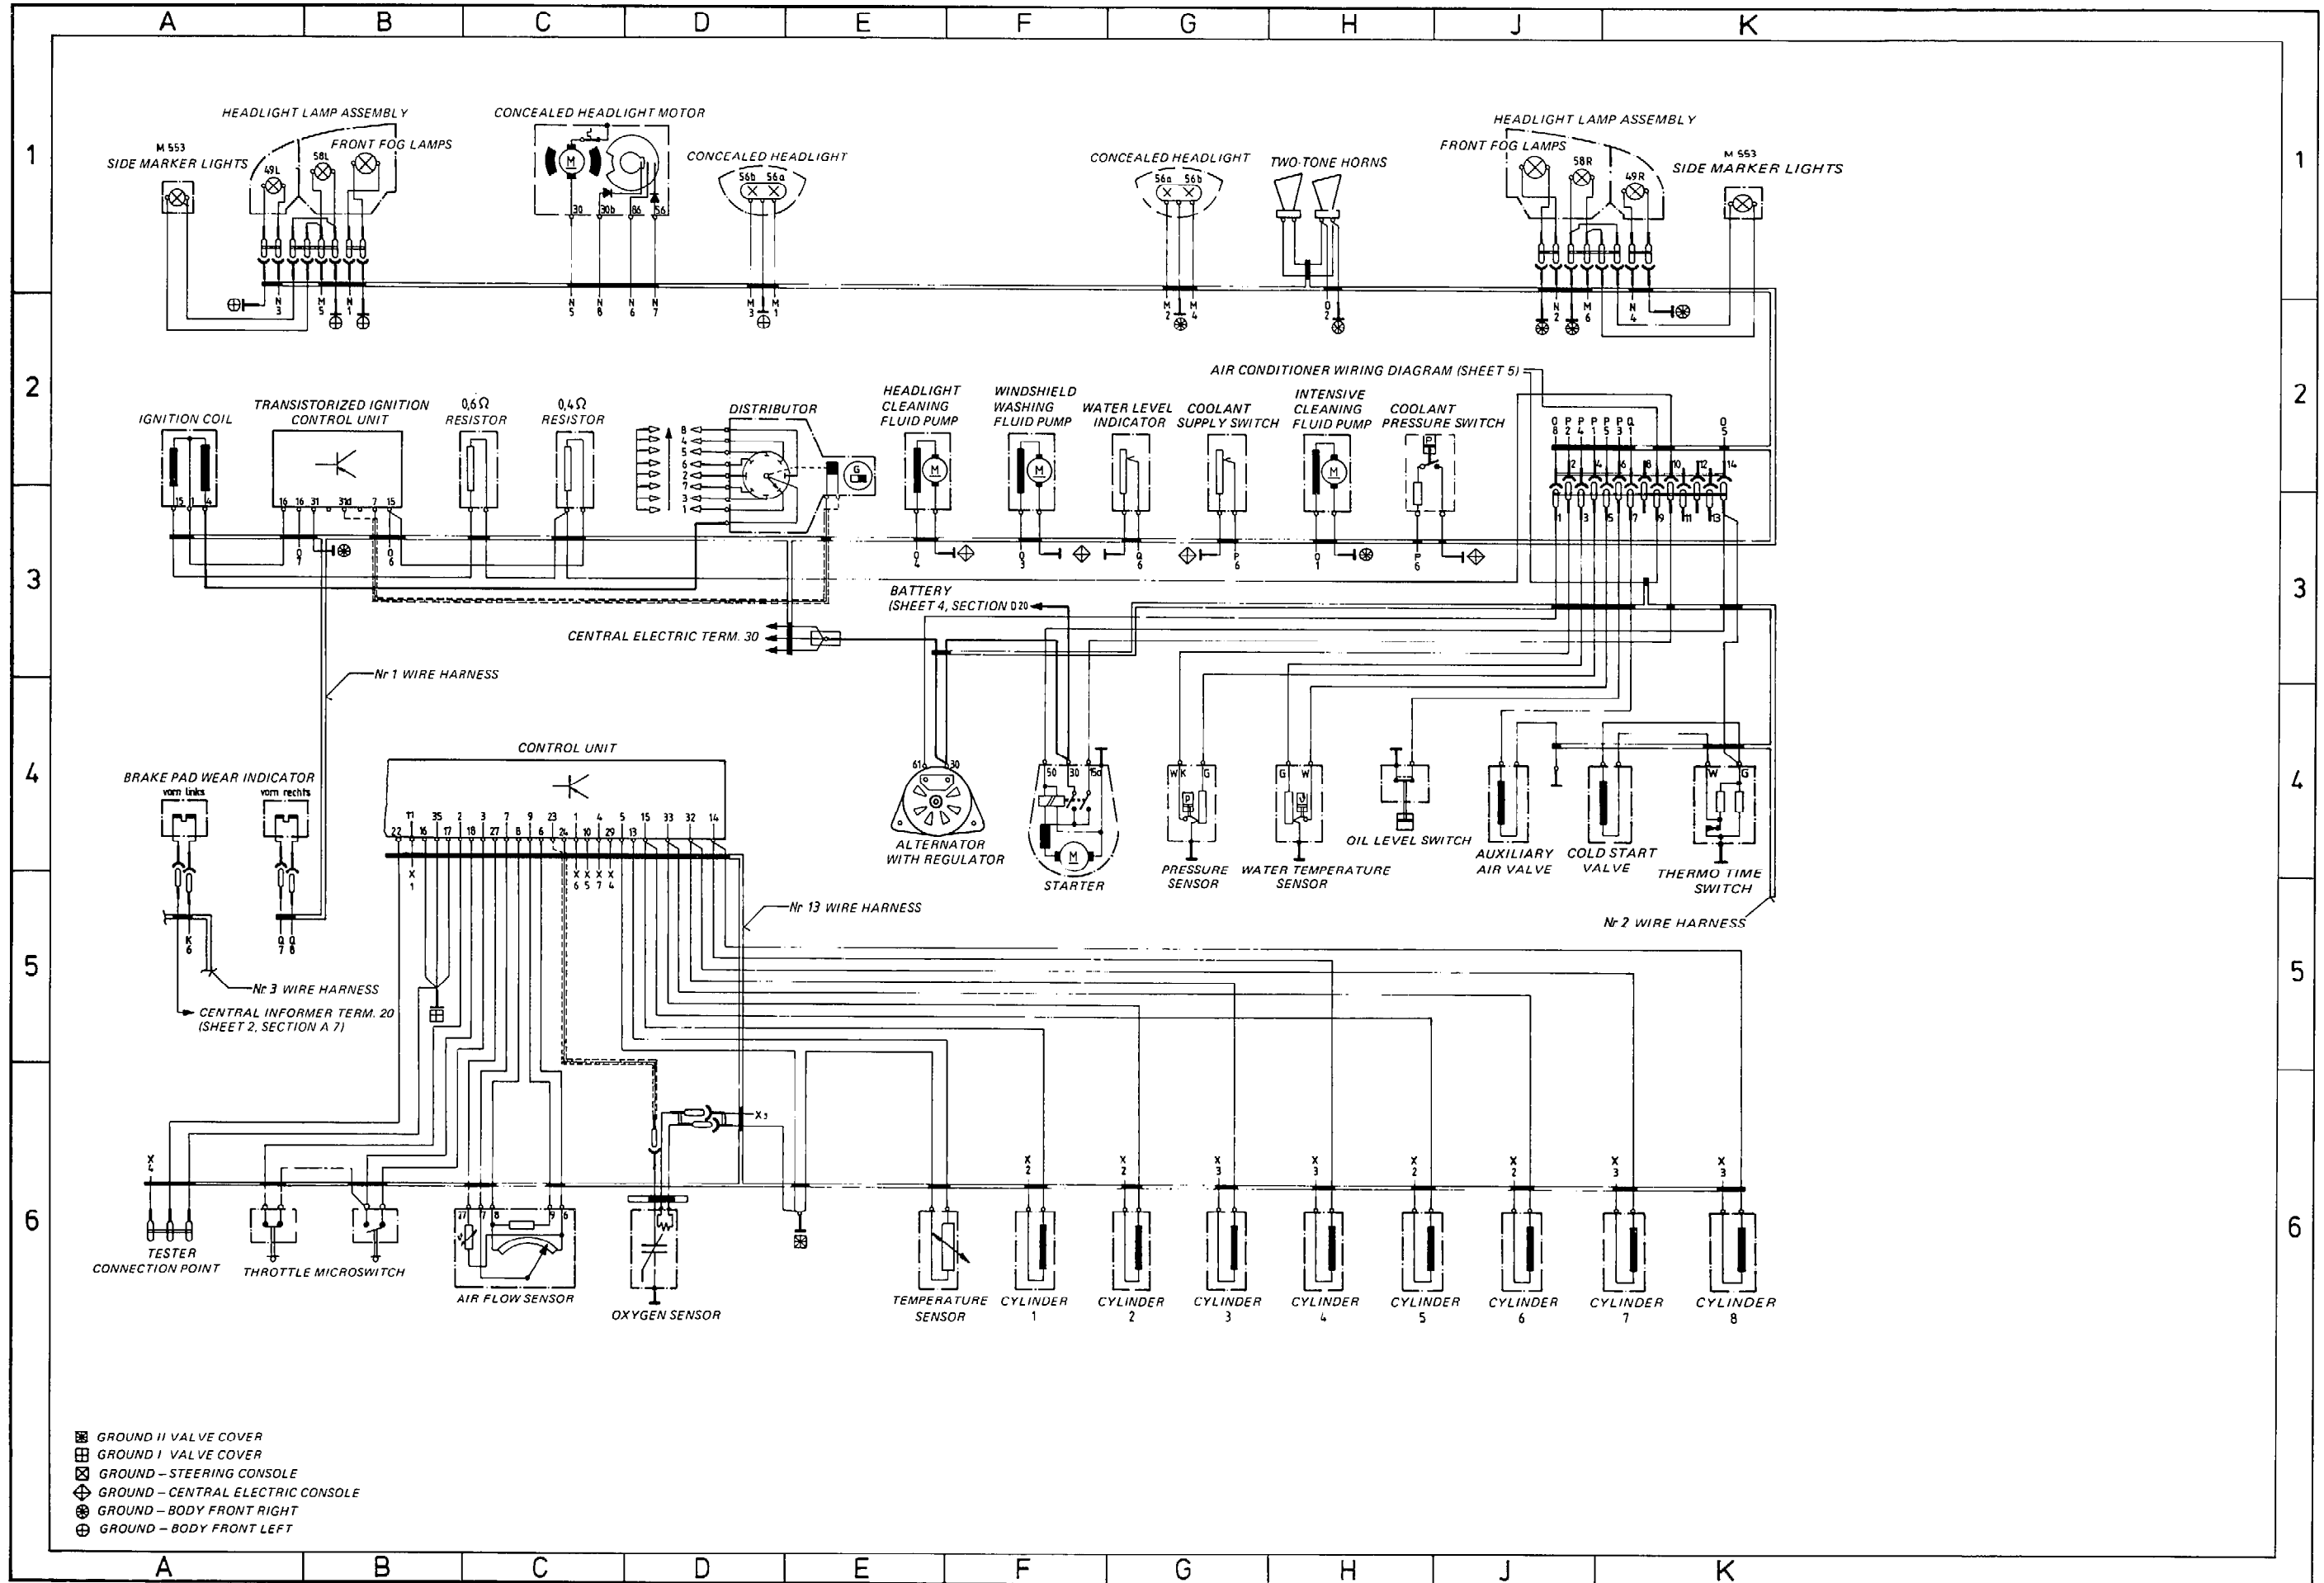

Wiring Diagram Type 928 S Model 84 page 2

PASSENGER COMPARTMENT AND INSTRUMENTS


PASSENGER COMPARTMENT AND INSTRUMENTS

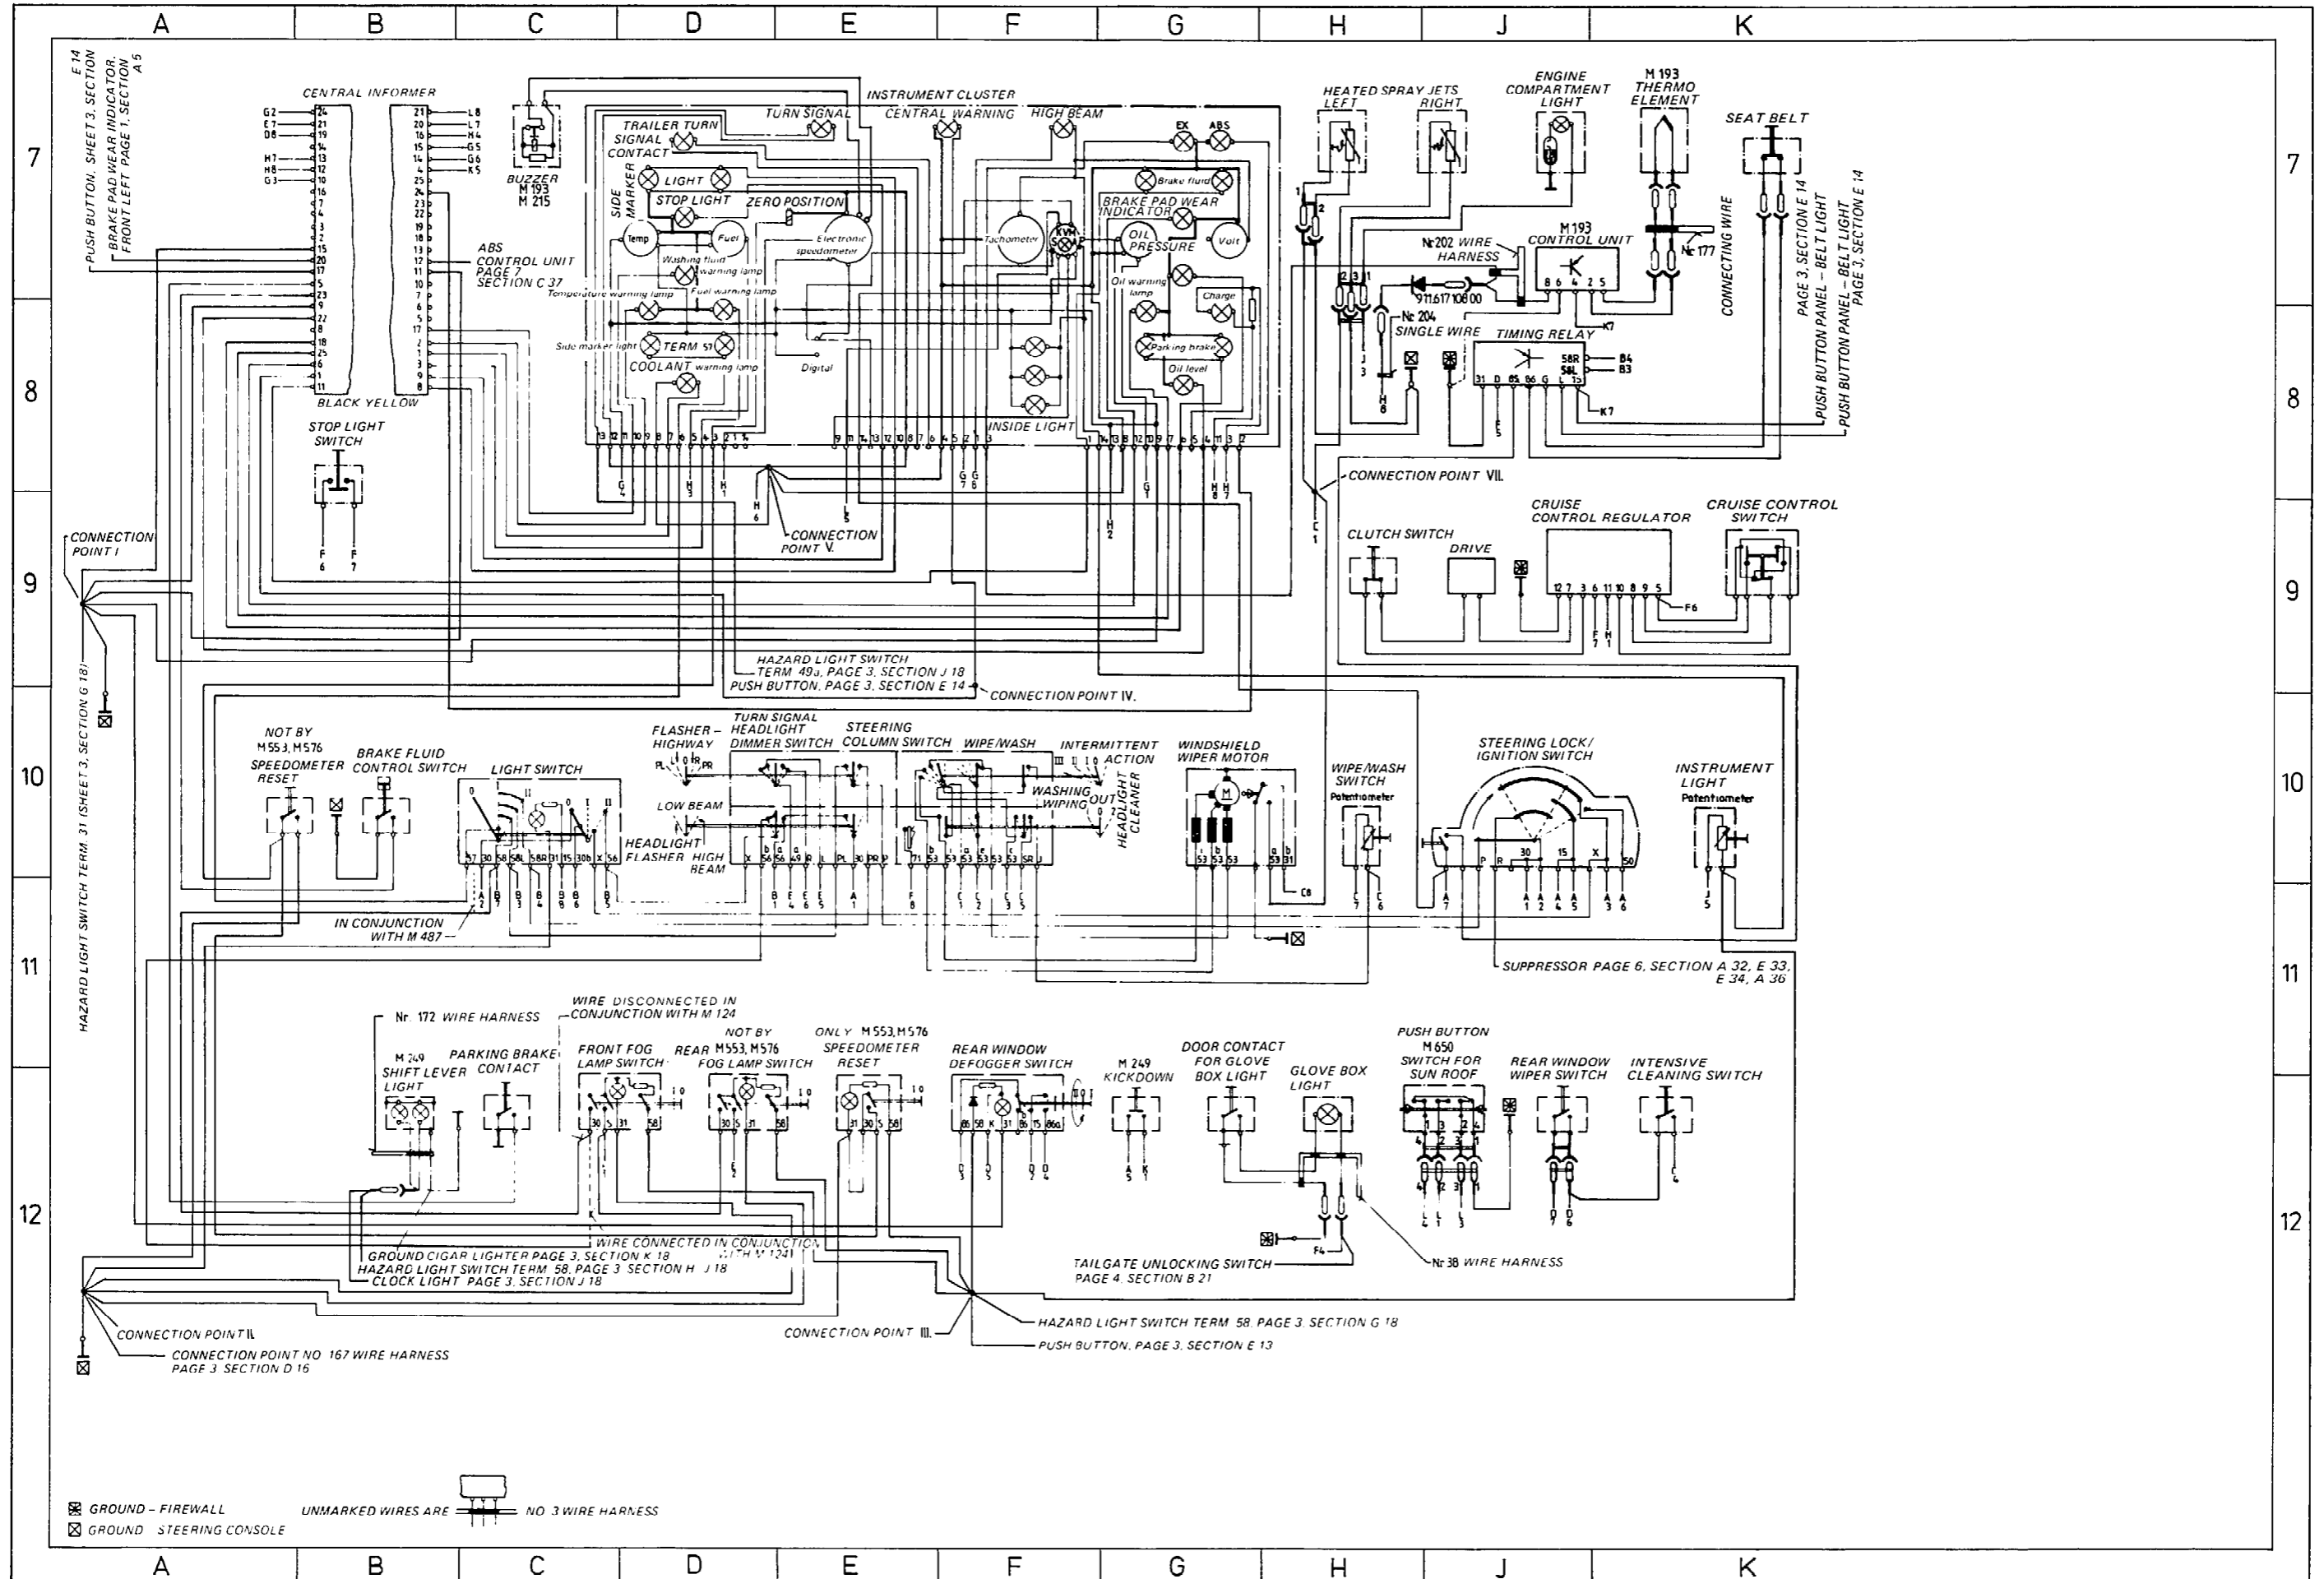

Wiring Diagram Type 928 S
Model 84 page 3

PASSENGER COMPARTMENT


PASSENGER COMPARTMENT

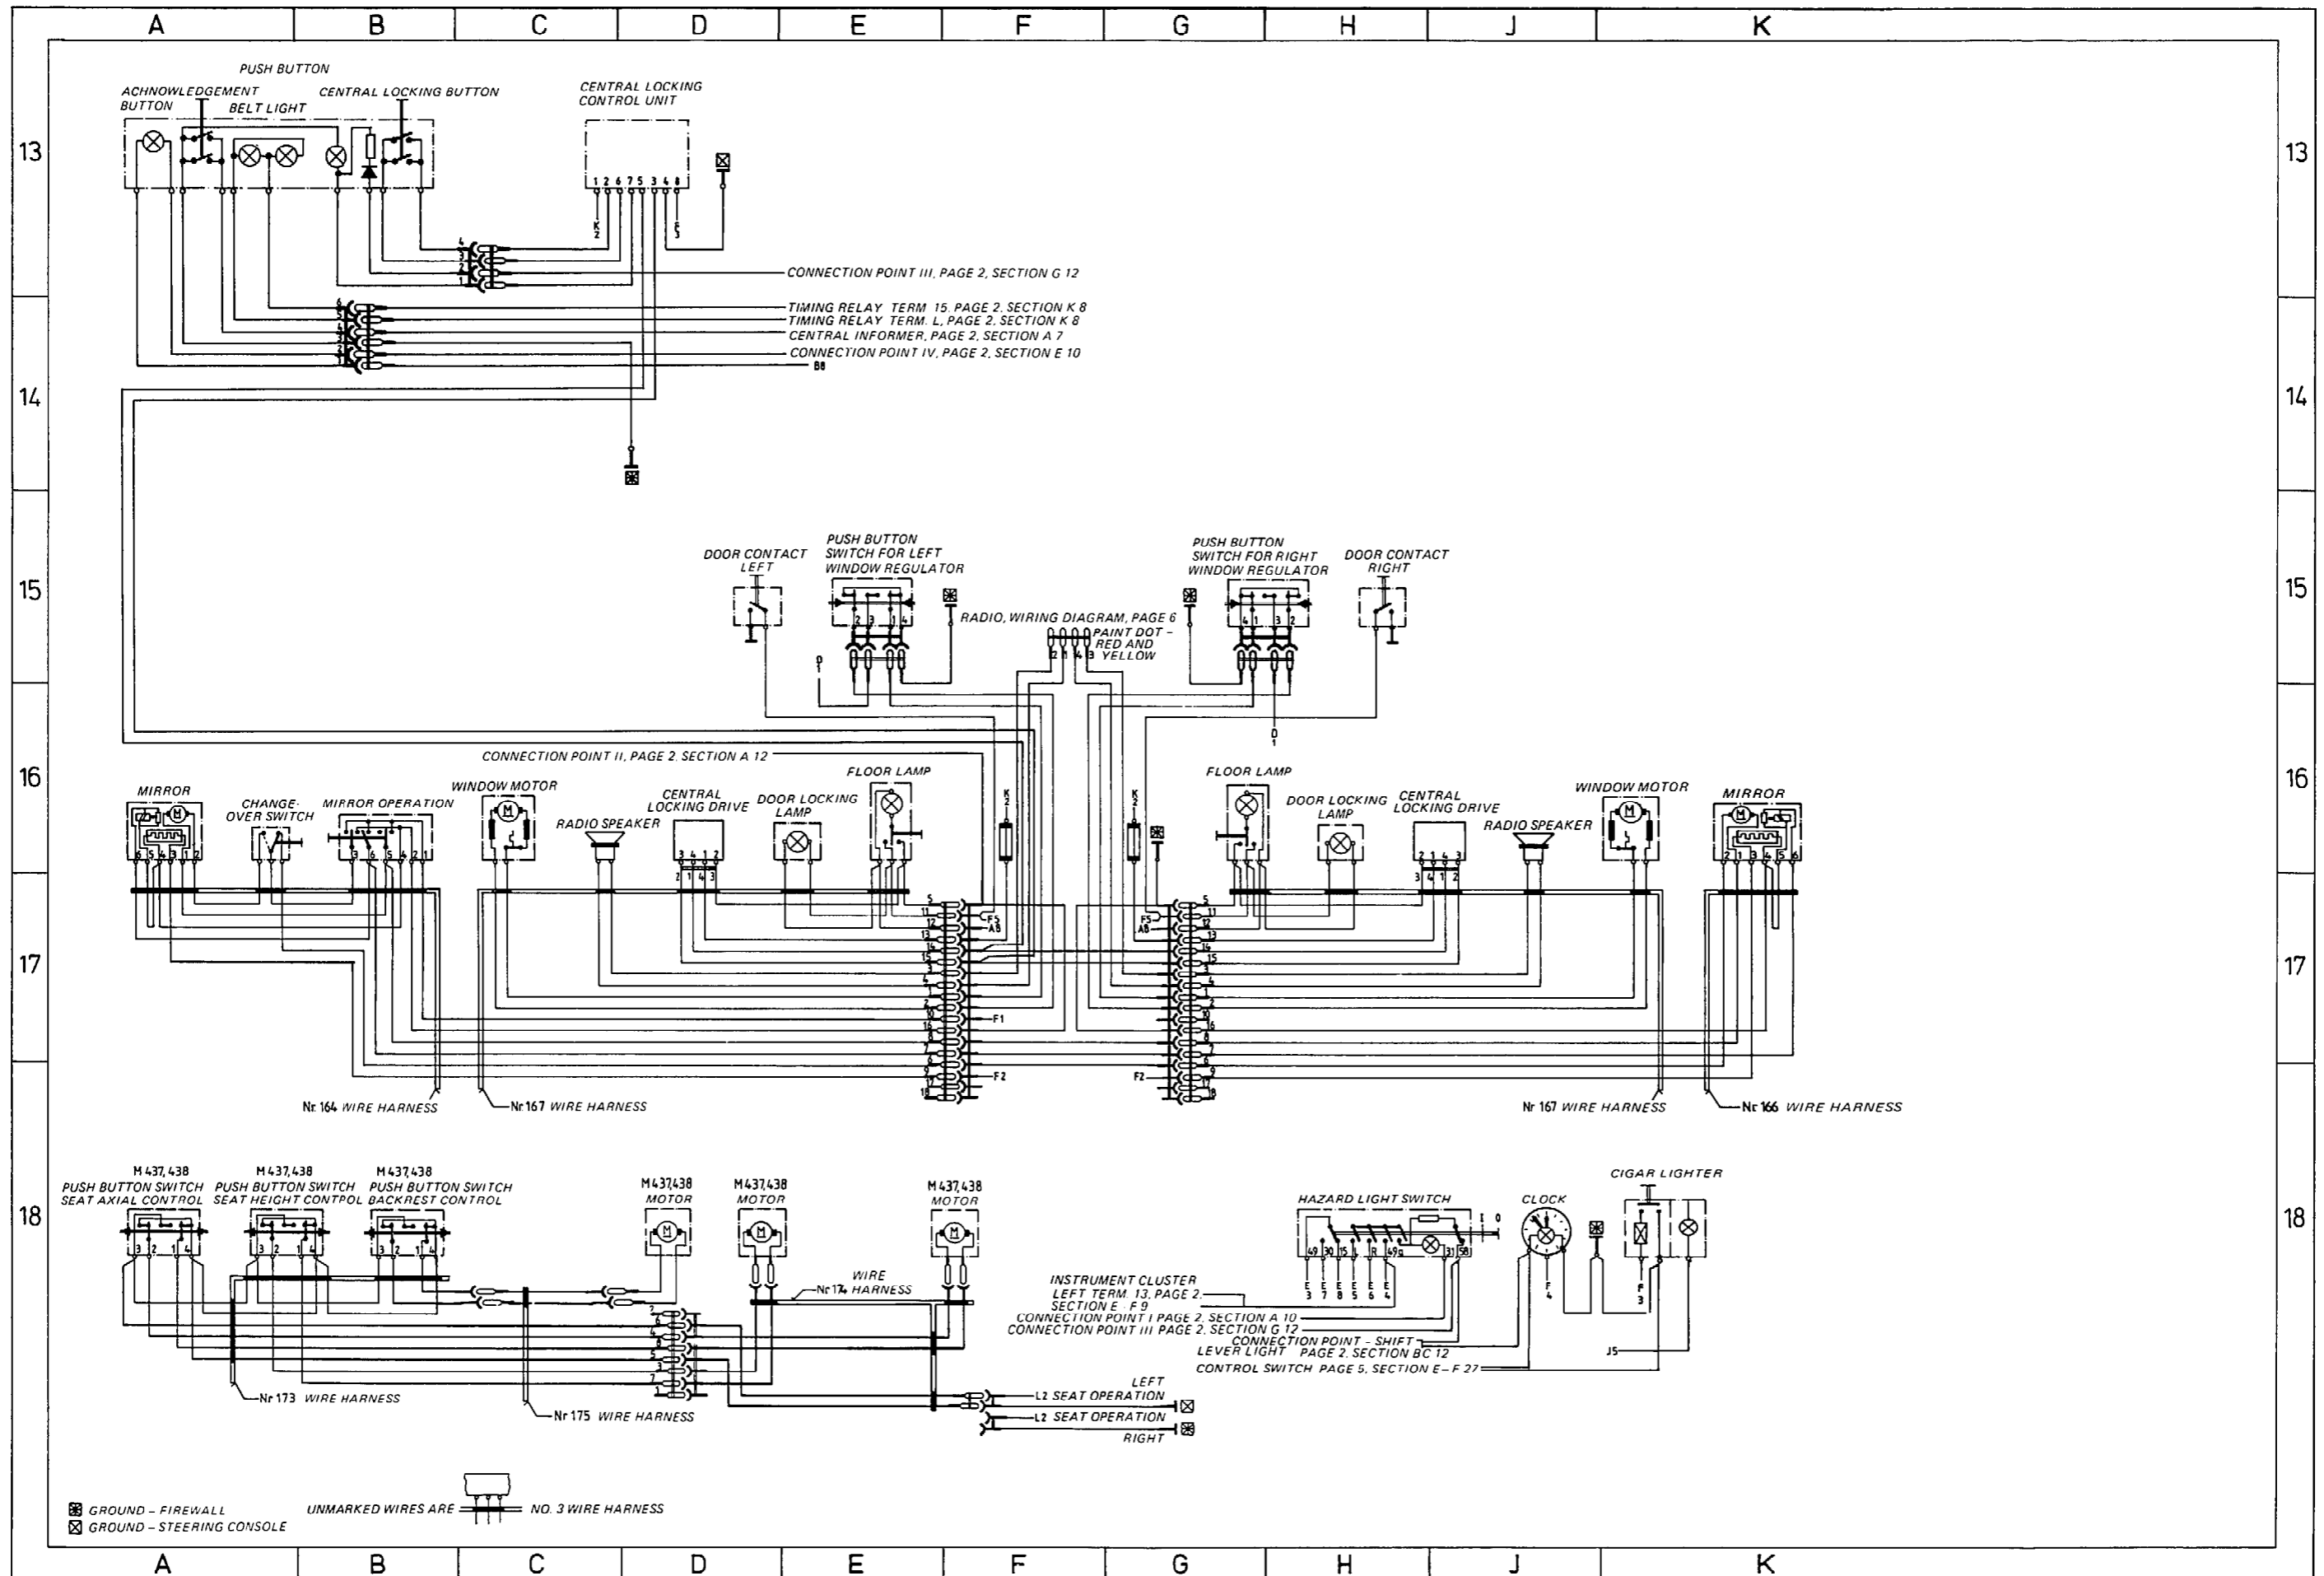

Wiring Diagram Type 928 S Model 84 page 4

PASSENGER COMPARTMENT AND REAR END


PASSENGER COMPARTMENT AND REAR END

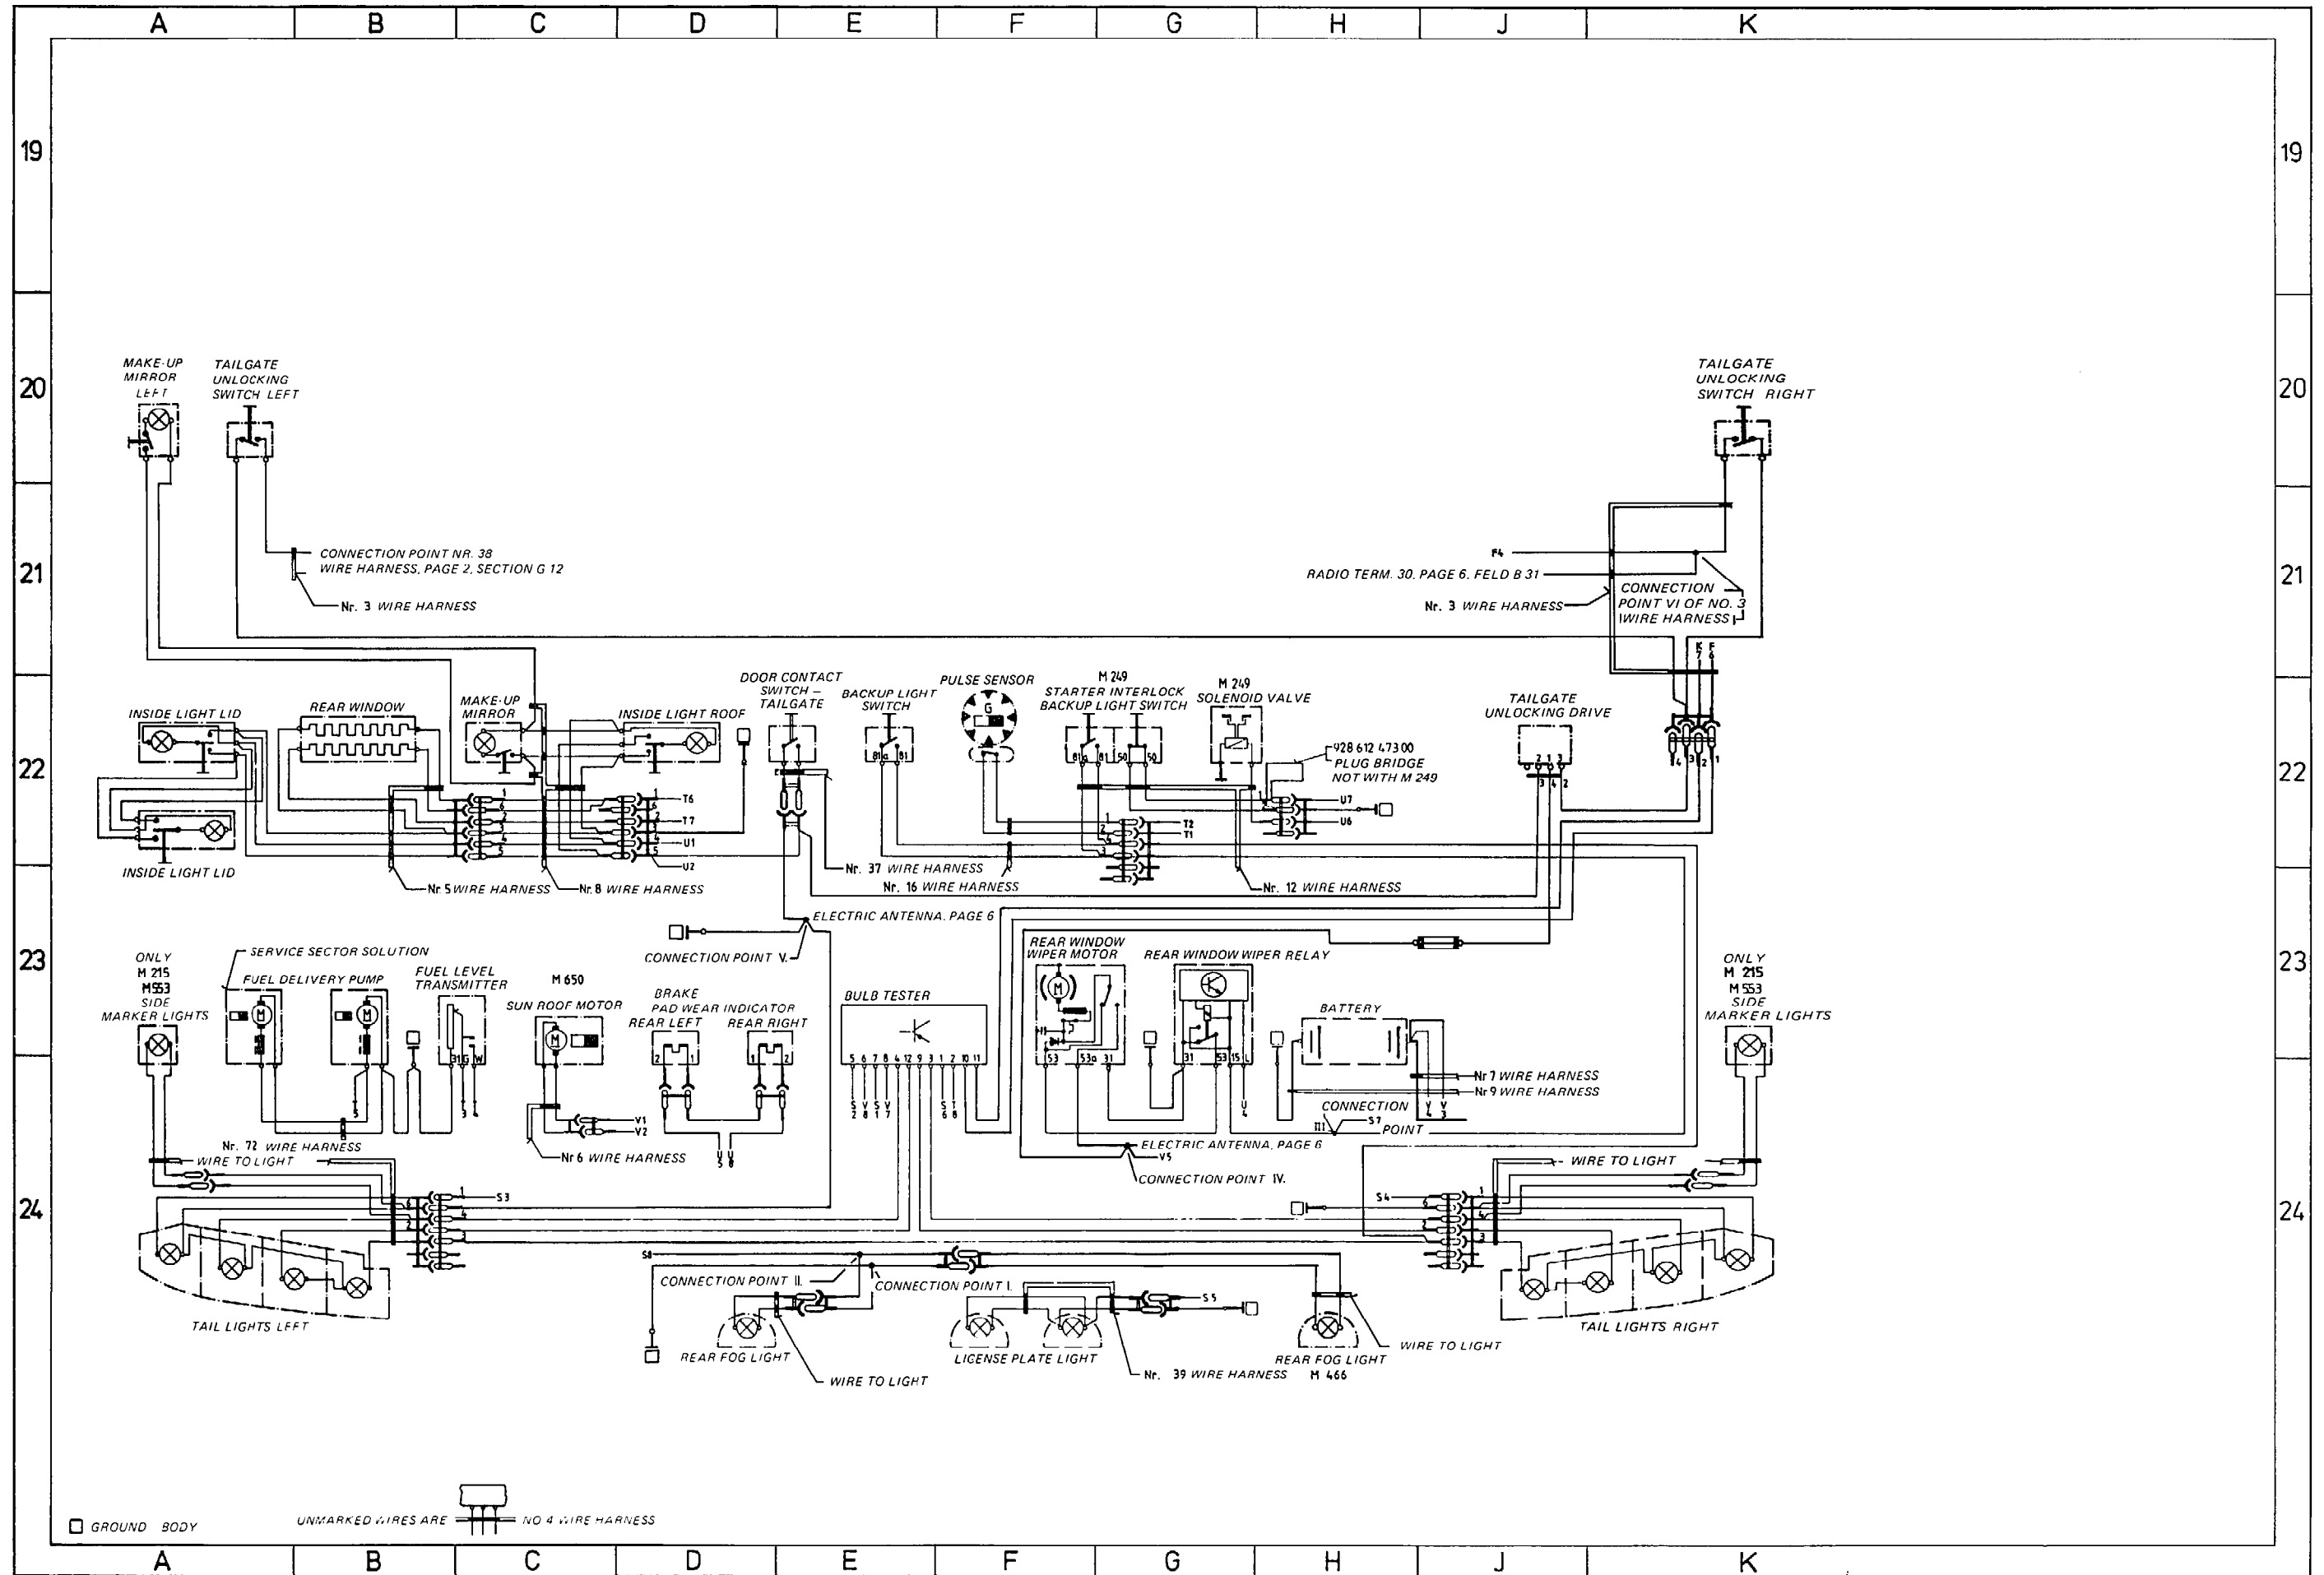

Wiring Diagram Type 928 S Model 84 page 5

HEATING — VENTILATING — AIR CONDITIONING


HEATING - VENTILATING - AIR CONDITIONING

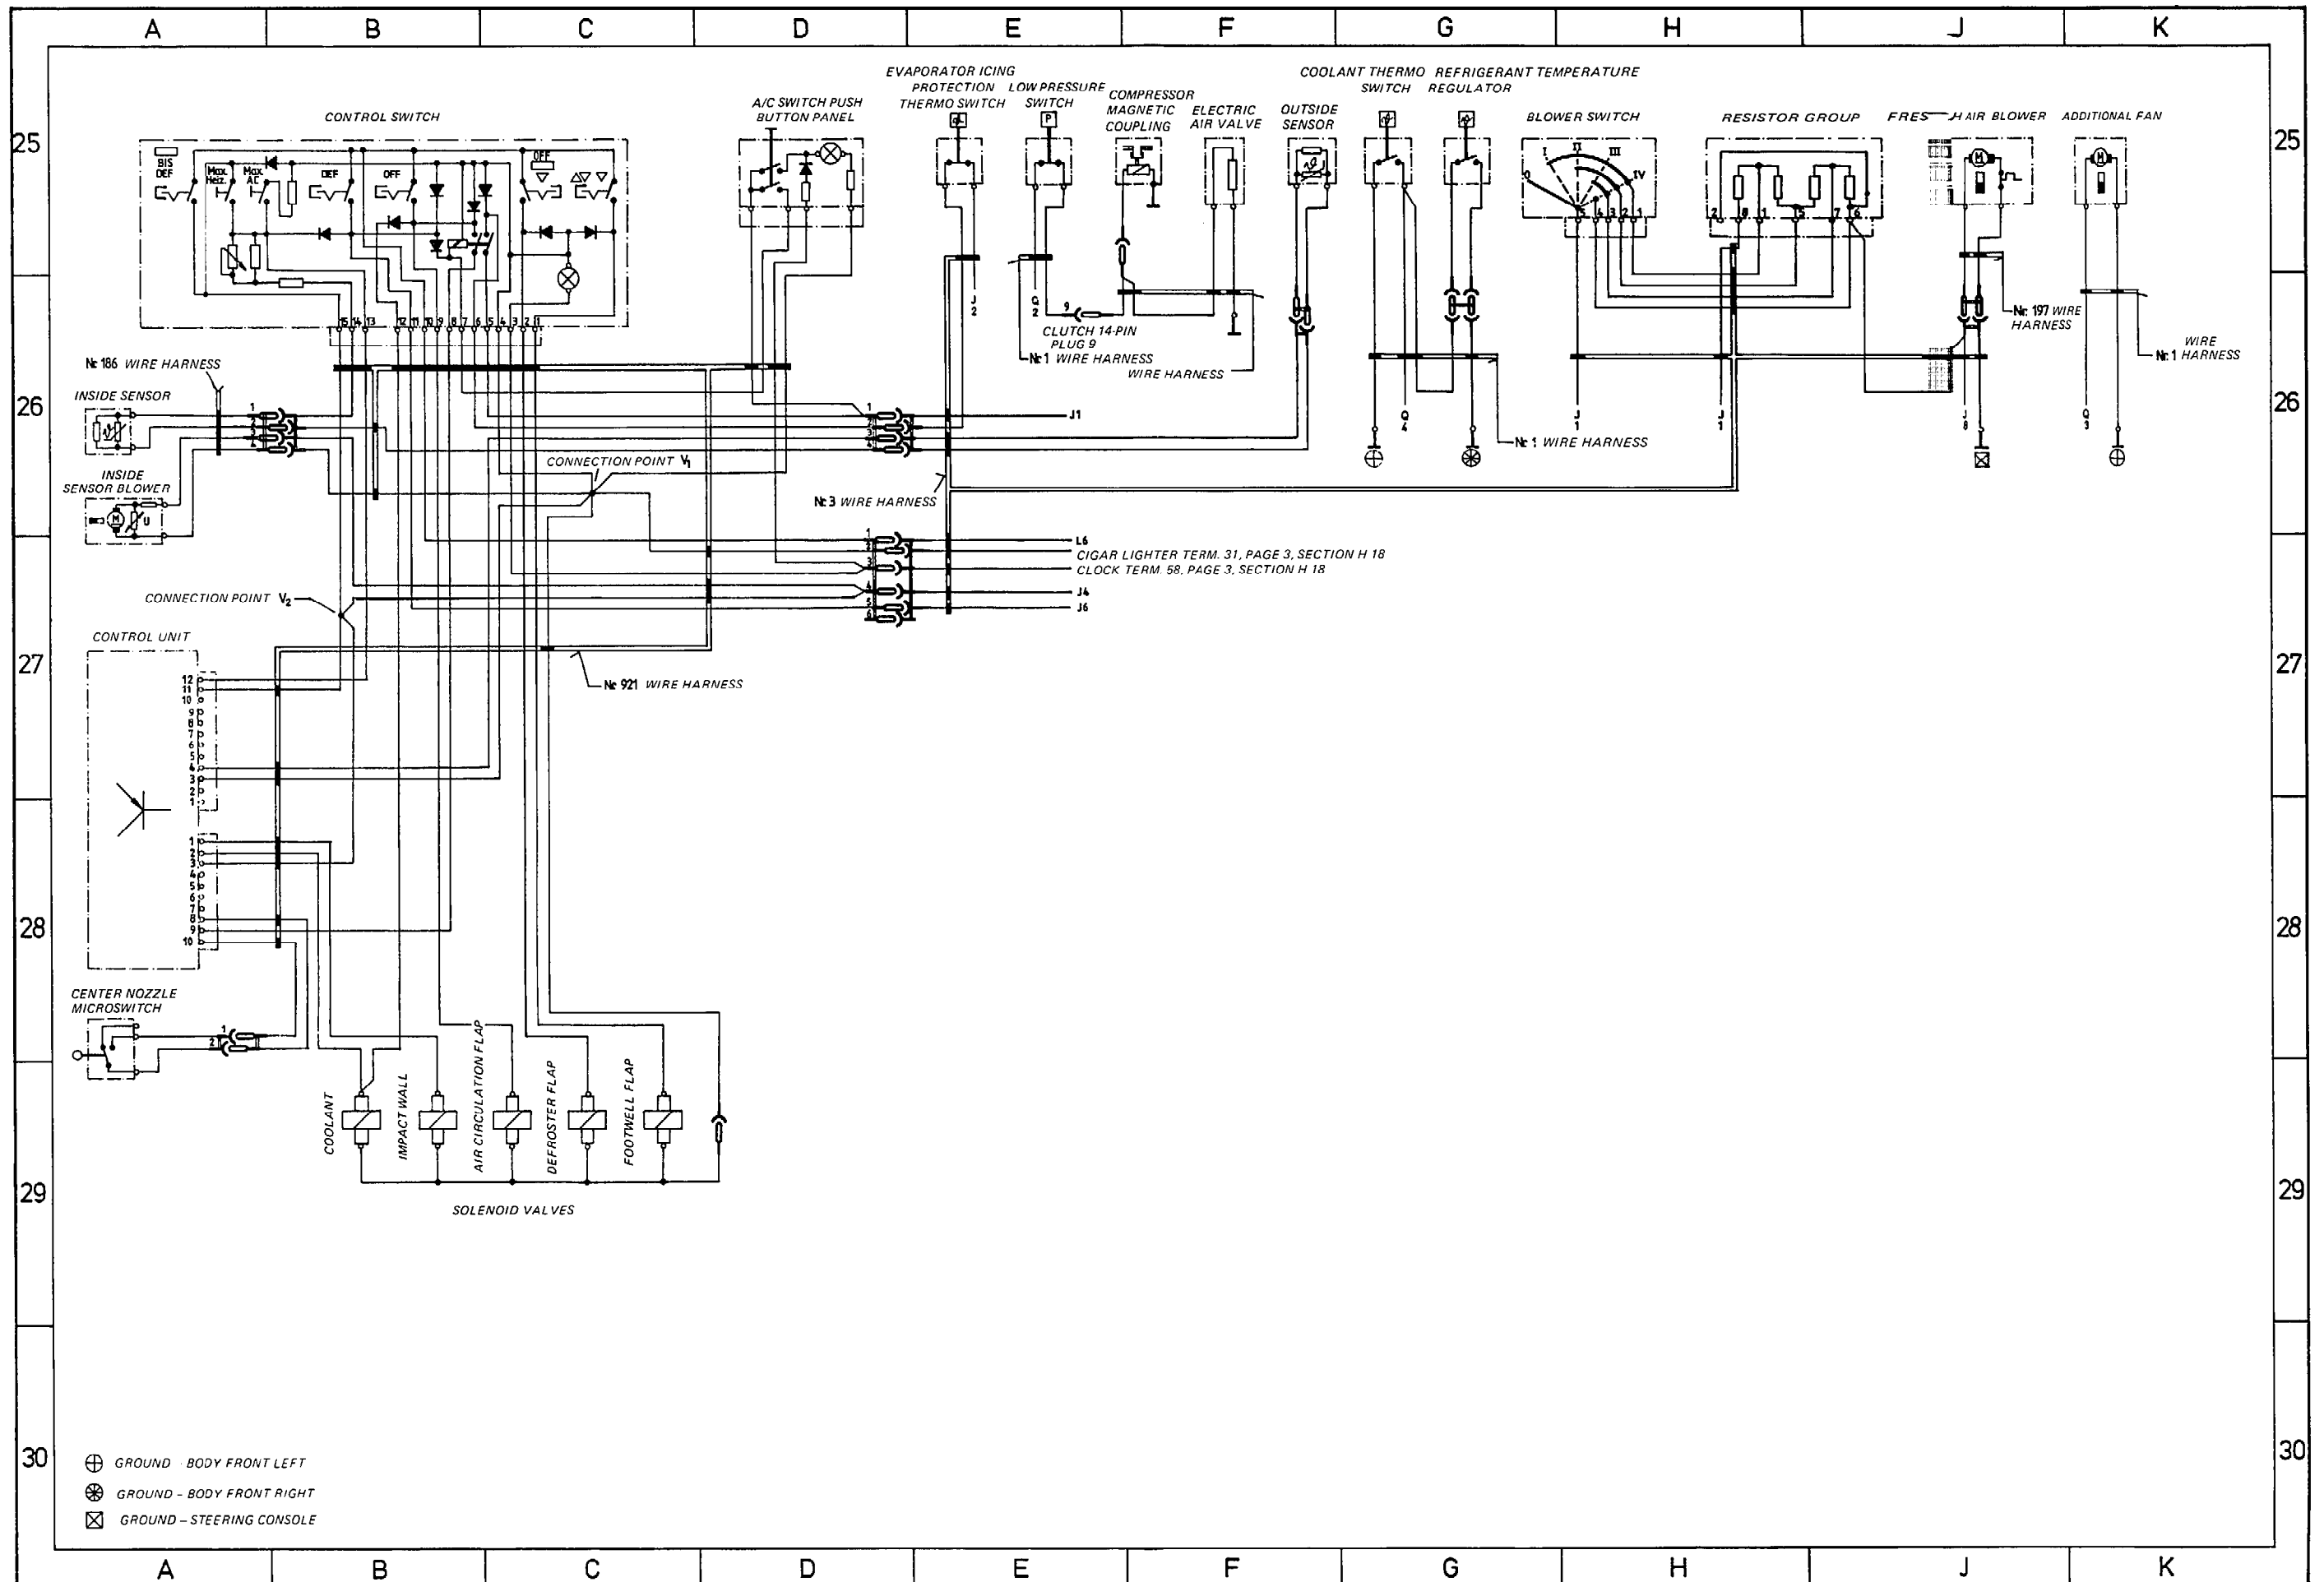

Wiring Diagram Type 928 S
Model 84 page 6

RADIO


RADIO

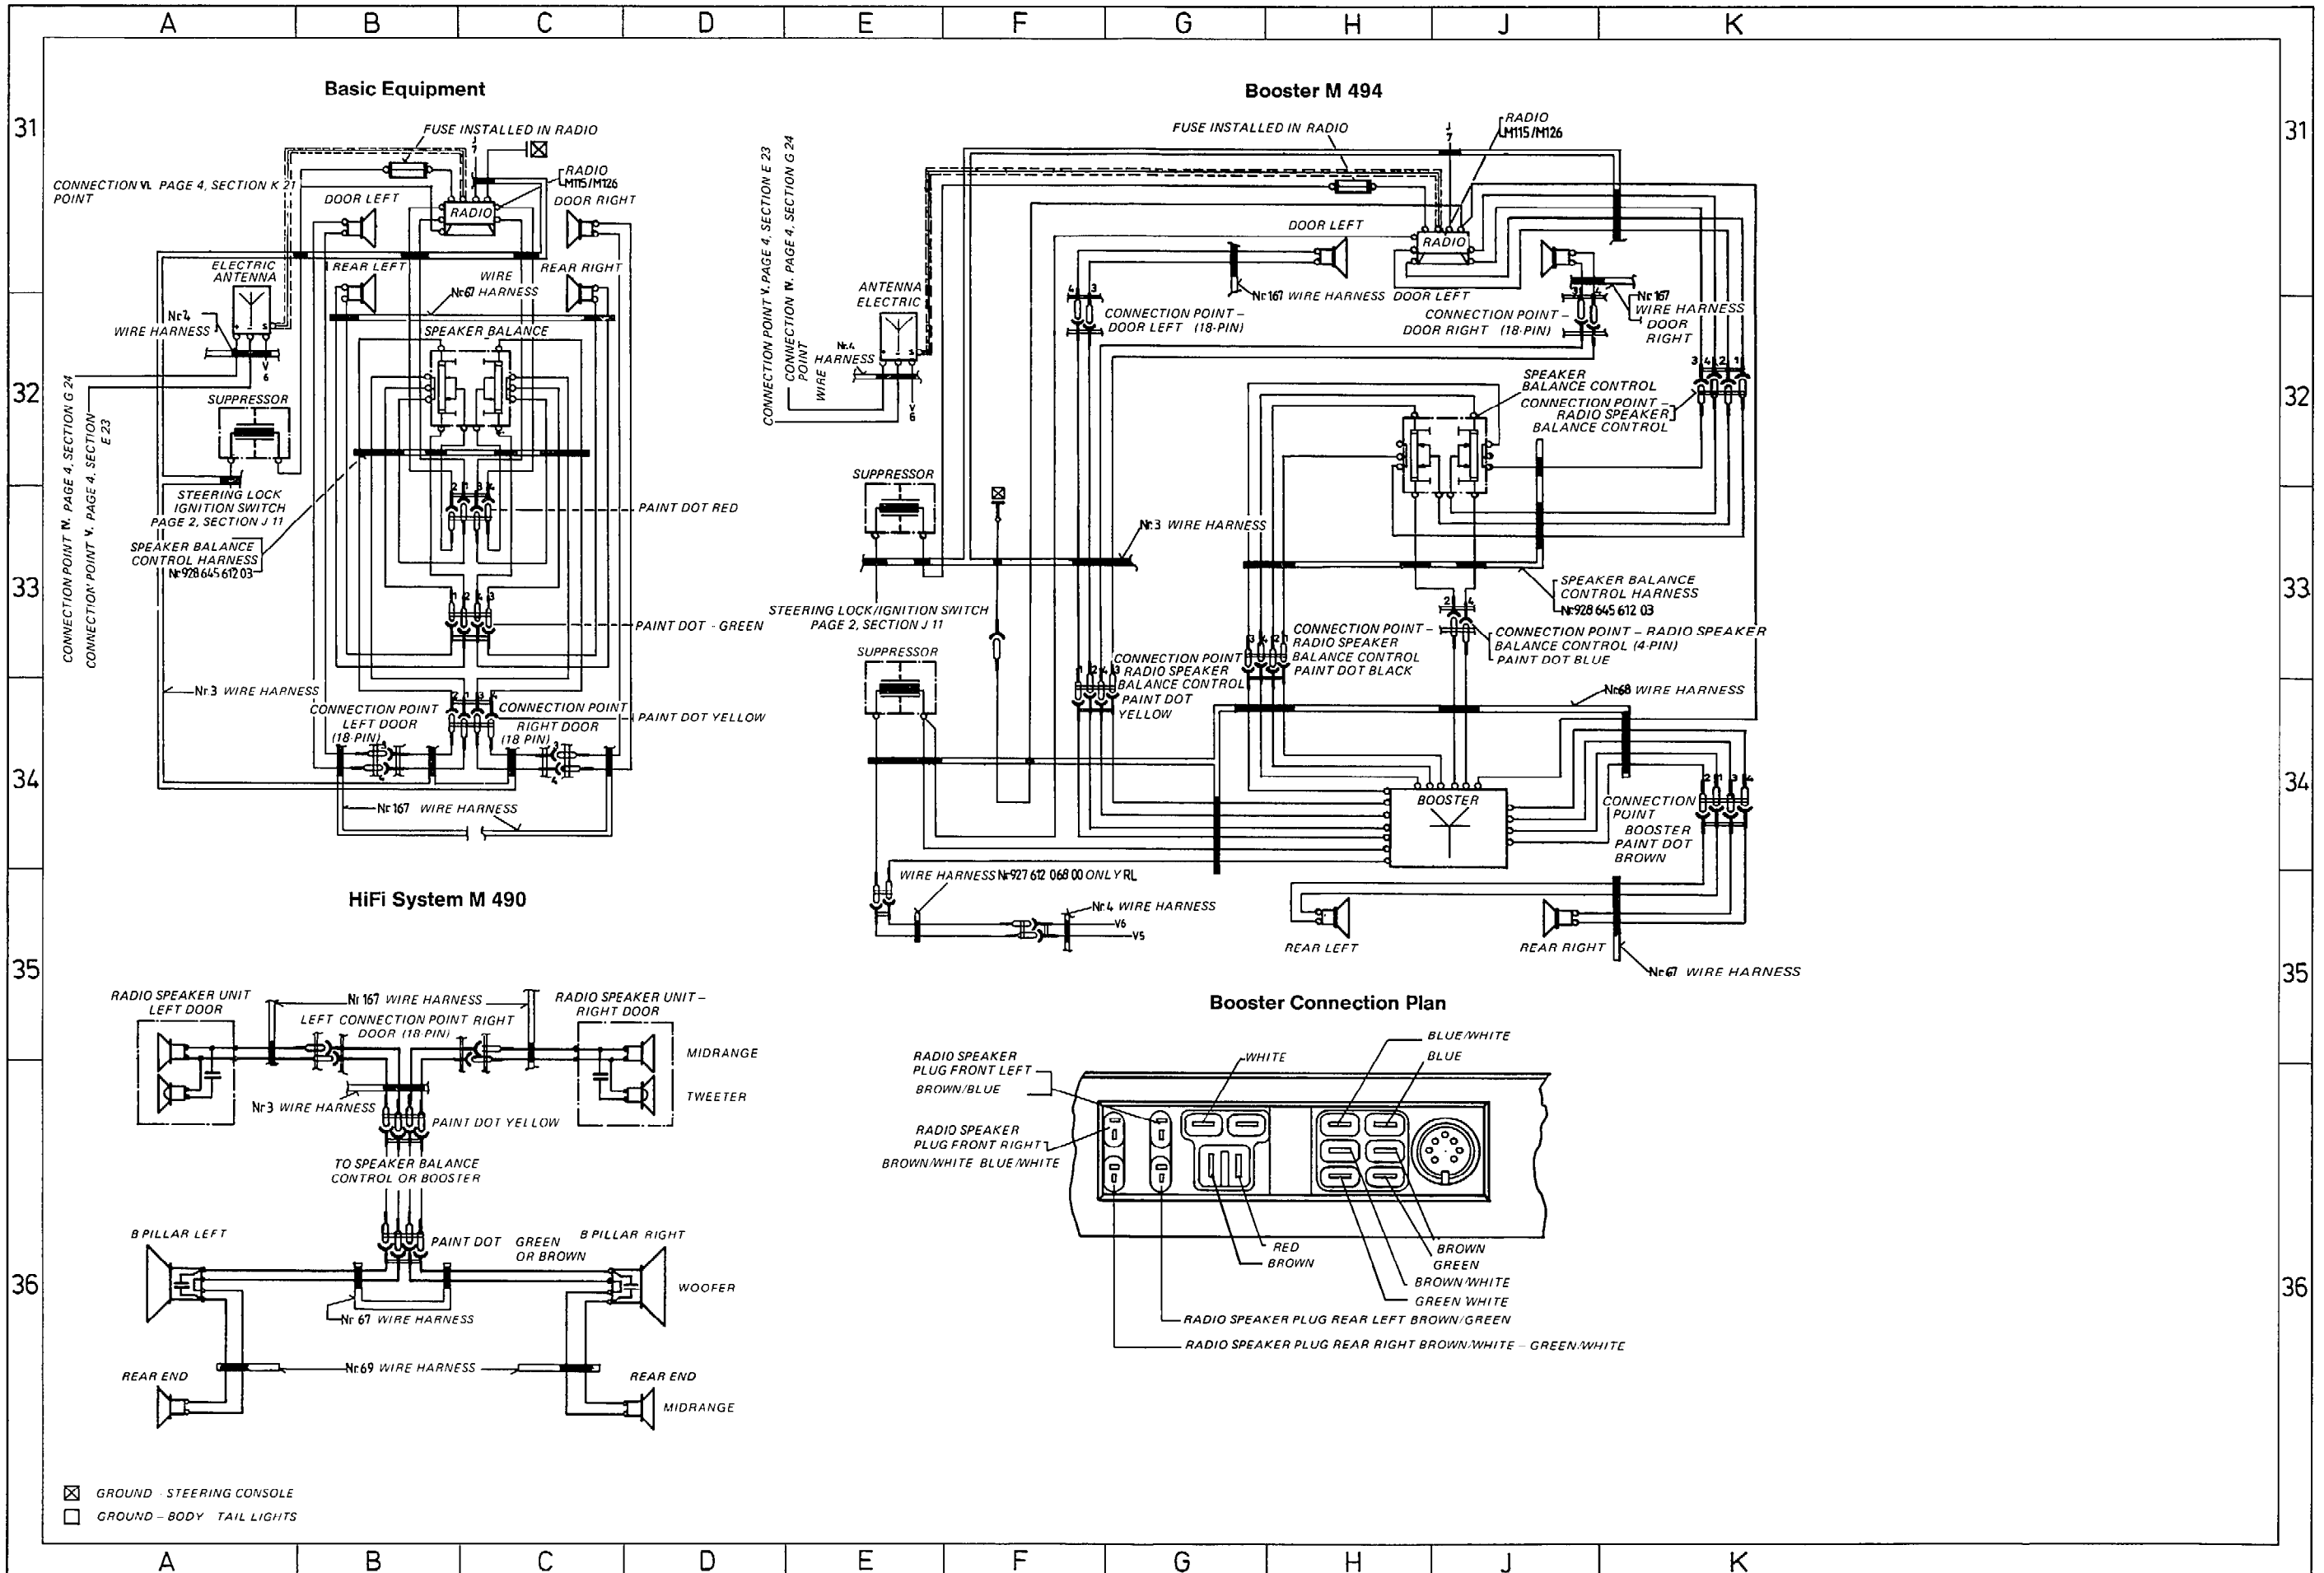

Wiring Diagram Type 928 S
Model 84 page 7

ABS

ABS

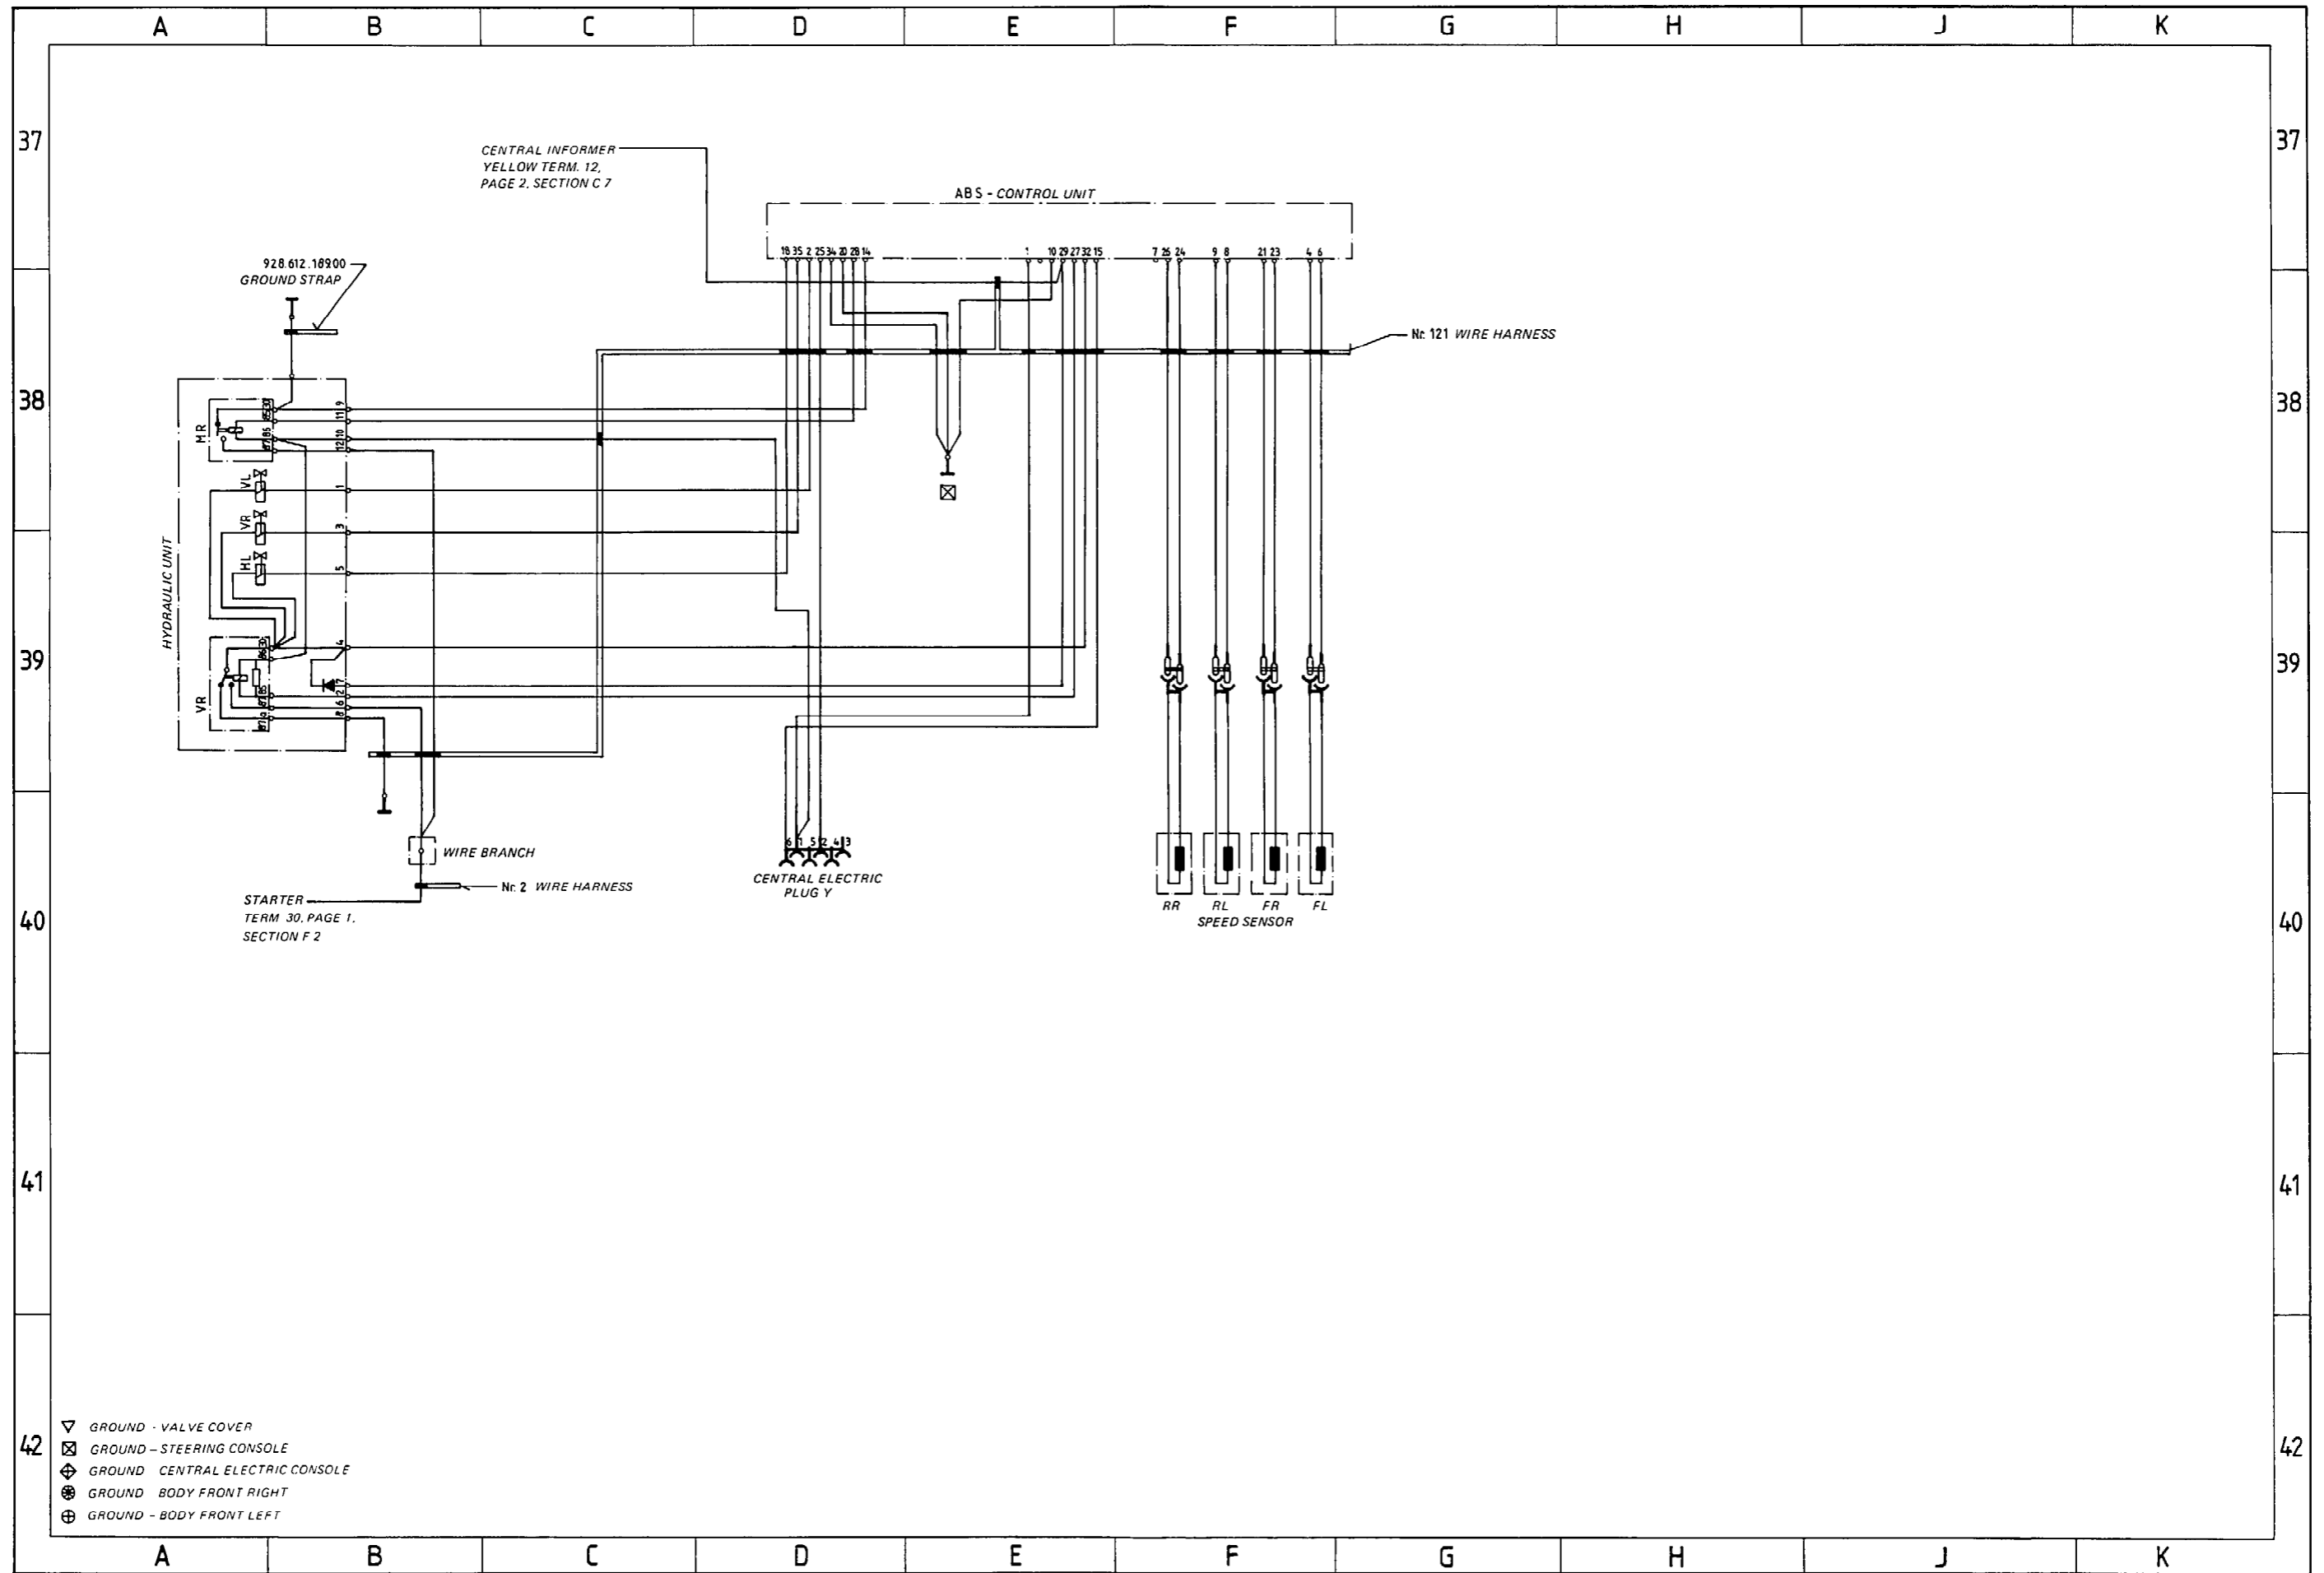

- ▽ GROUND - VALVE COVER
- ⊠ GROUND - STEERING CONSOLE
- ⊞ GROUND - CENTRAL ELECTRIC CONSOLE
- ⊗ GROUND - BODY FRONT RIGHT
- ⊕ GROUND - BODY FRONT LEFT

Wiring Diagram Type 928 S Model 84 page 8

ADDITIONAL WIRING DIAGRAM
FOR BURGLAR ALARM

ADDITIONAL WIRING DIAGRAM FOR BURGLAR ALARM

