

Wiring Diagram Type 928 S Model 87

PAGE 1	LAMPS ROW
PAGE 2	LAMPS USA
PAGE 3	BODY
PAGE 4	INSTRUMENTS AND INDICATORS
PAGE 5	VENTILATION, HEATING, AC
PAGE 6	MIRROR, SEAT ADJUSTMENT
PAGE 7	SEAT- AND MIRROR MEMORY
PAGE 8	RADIO
PAGE 9	ABS, ALARM SYSTEM, TRAILER COUPLING
PAGE 10	ENGINE COMPARTMENT, TEMPOSTAT
PAGE 11	CENTRAL ELECTRICAL SYSTEM

Wiring Diagram Type 928 S Model 87

The wiring diagram comprises **11** individual wiring diagrams.
They are subdivided into coordinate fields.

Each individual wiring diagram comprises a part of the central electrical system
within a dash-dot frame.

This part of the central electrical system shows all the lines and relays required for
individual wiring diagram.

The ground-connecting points are designated with "MP" and their location is
shown in a vehicle diagram.

The 10-pole plugs on central electrical system are clipped together
from 3 parts.

Part 1, with the cast-on fastening pin, is the "initial element".

Part 2 is the "module element".

Both parts are identified by the digits 1 . . . 5.

Part 3 is a "coding element".


The designations of the plug connections in wiring diagram for central electrical
system refer e. g. from A 11 . . . 15 to the "initial element", from A 21 . . . 26 to
module element.


Wiring Diagram Type 928 S
Model 87 page 1

LAMPS ROW

Wiring Diagram Type 928S Model 87 page 1

LAMPS ROW

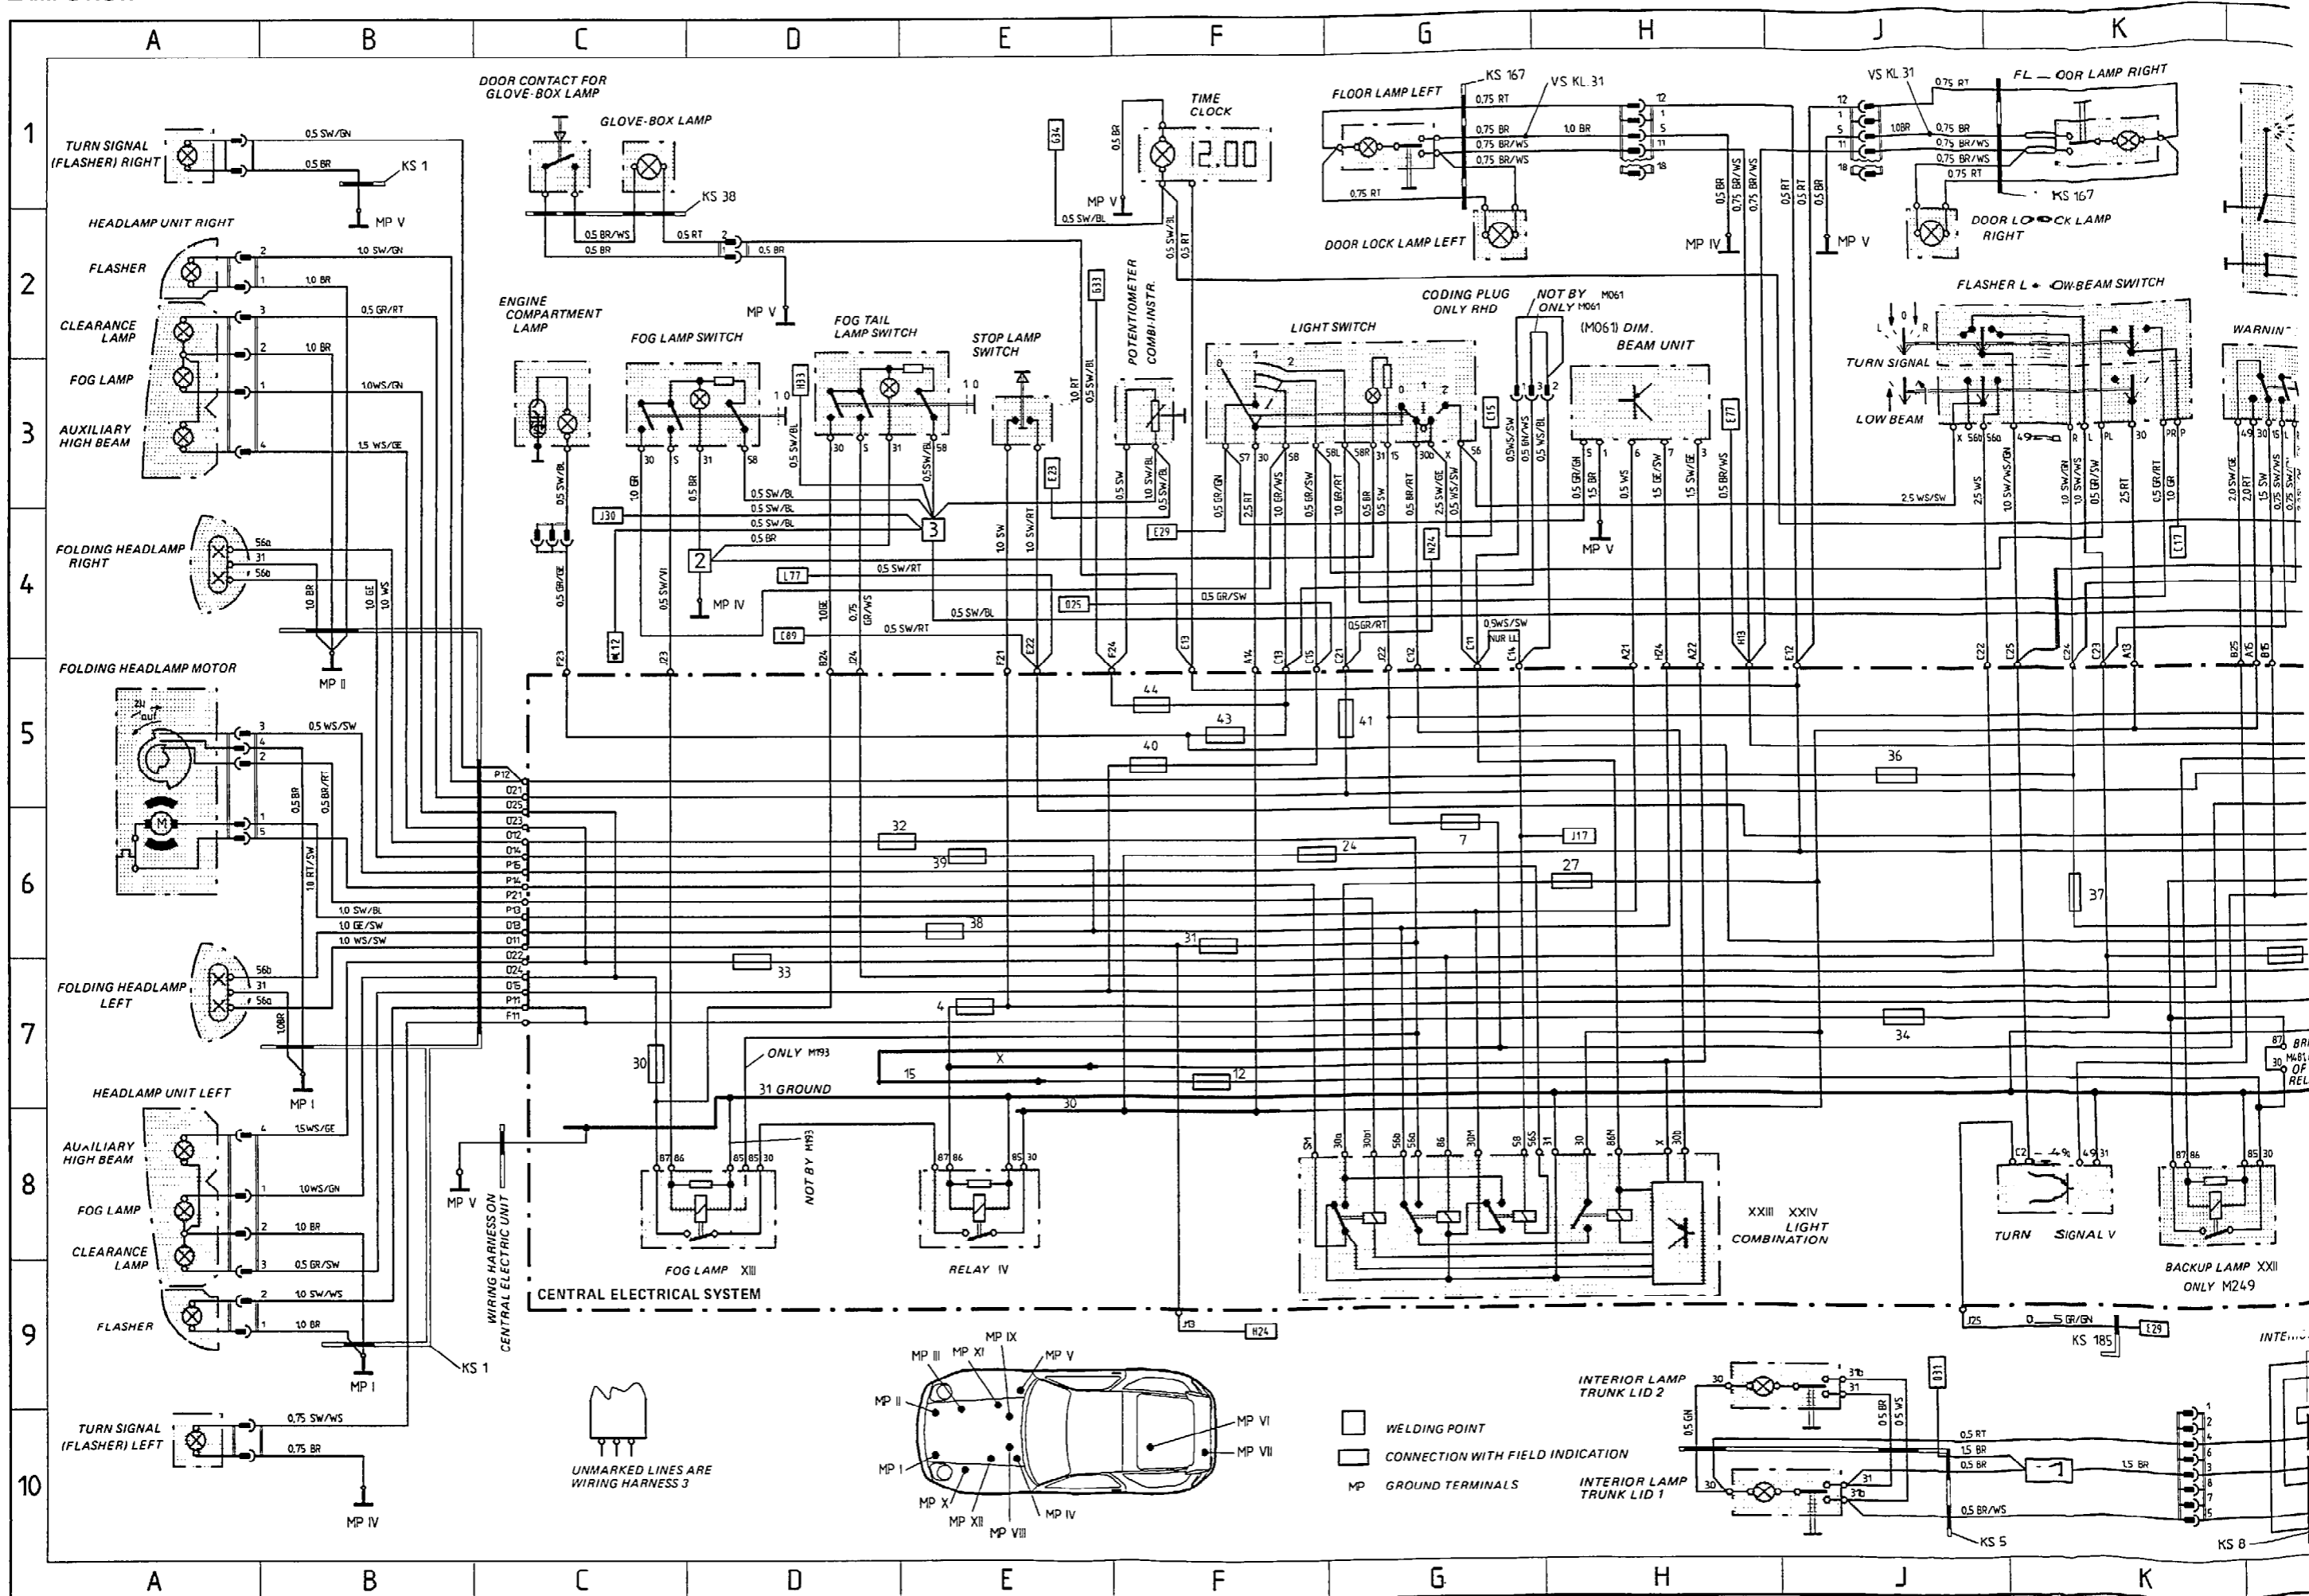

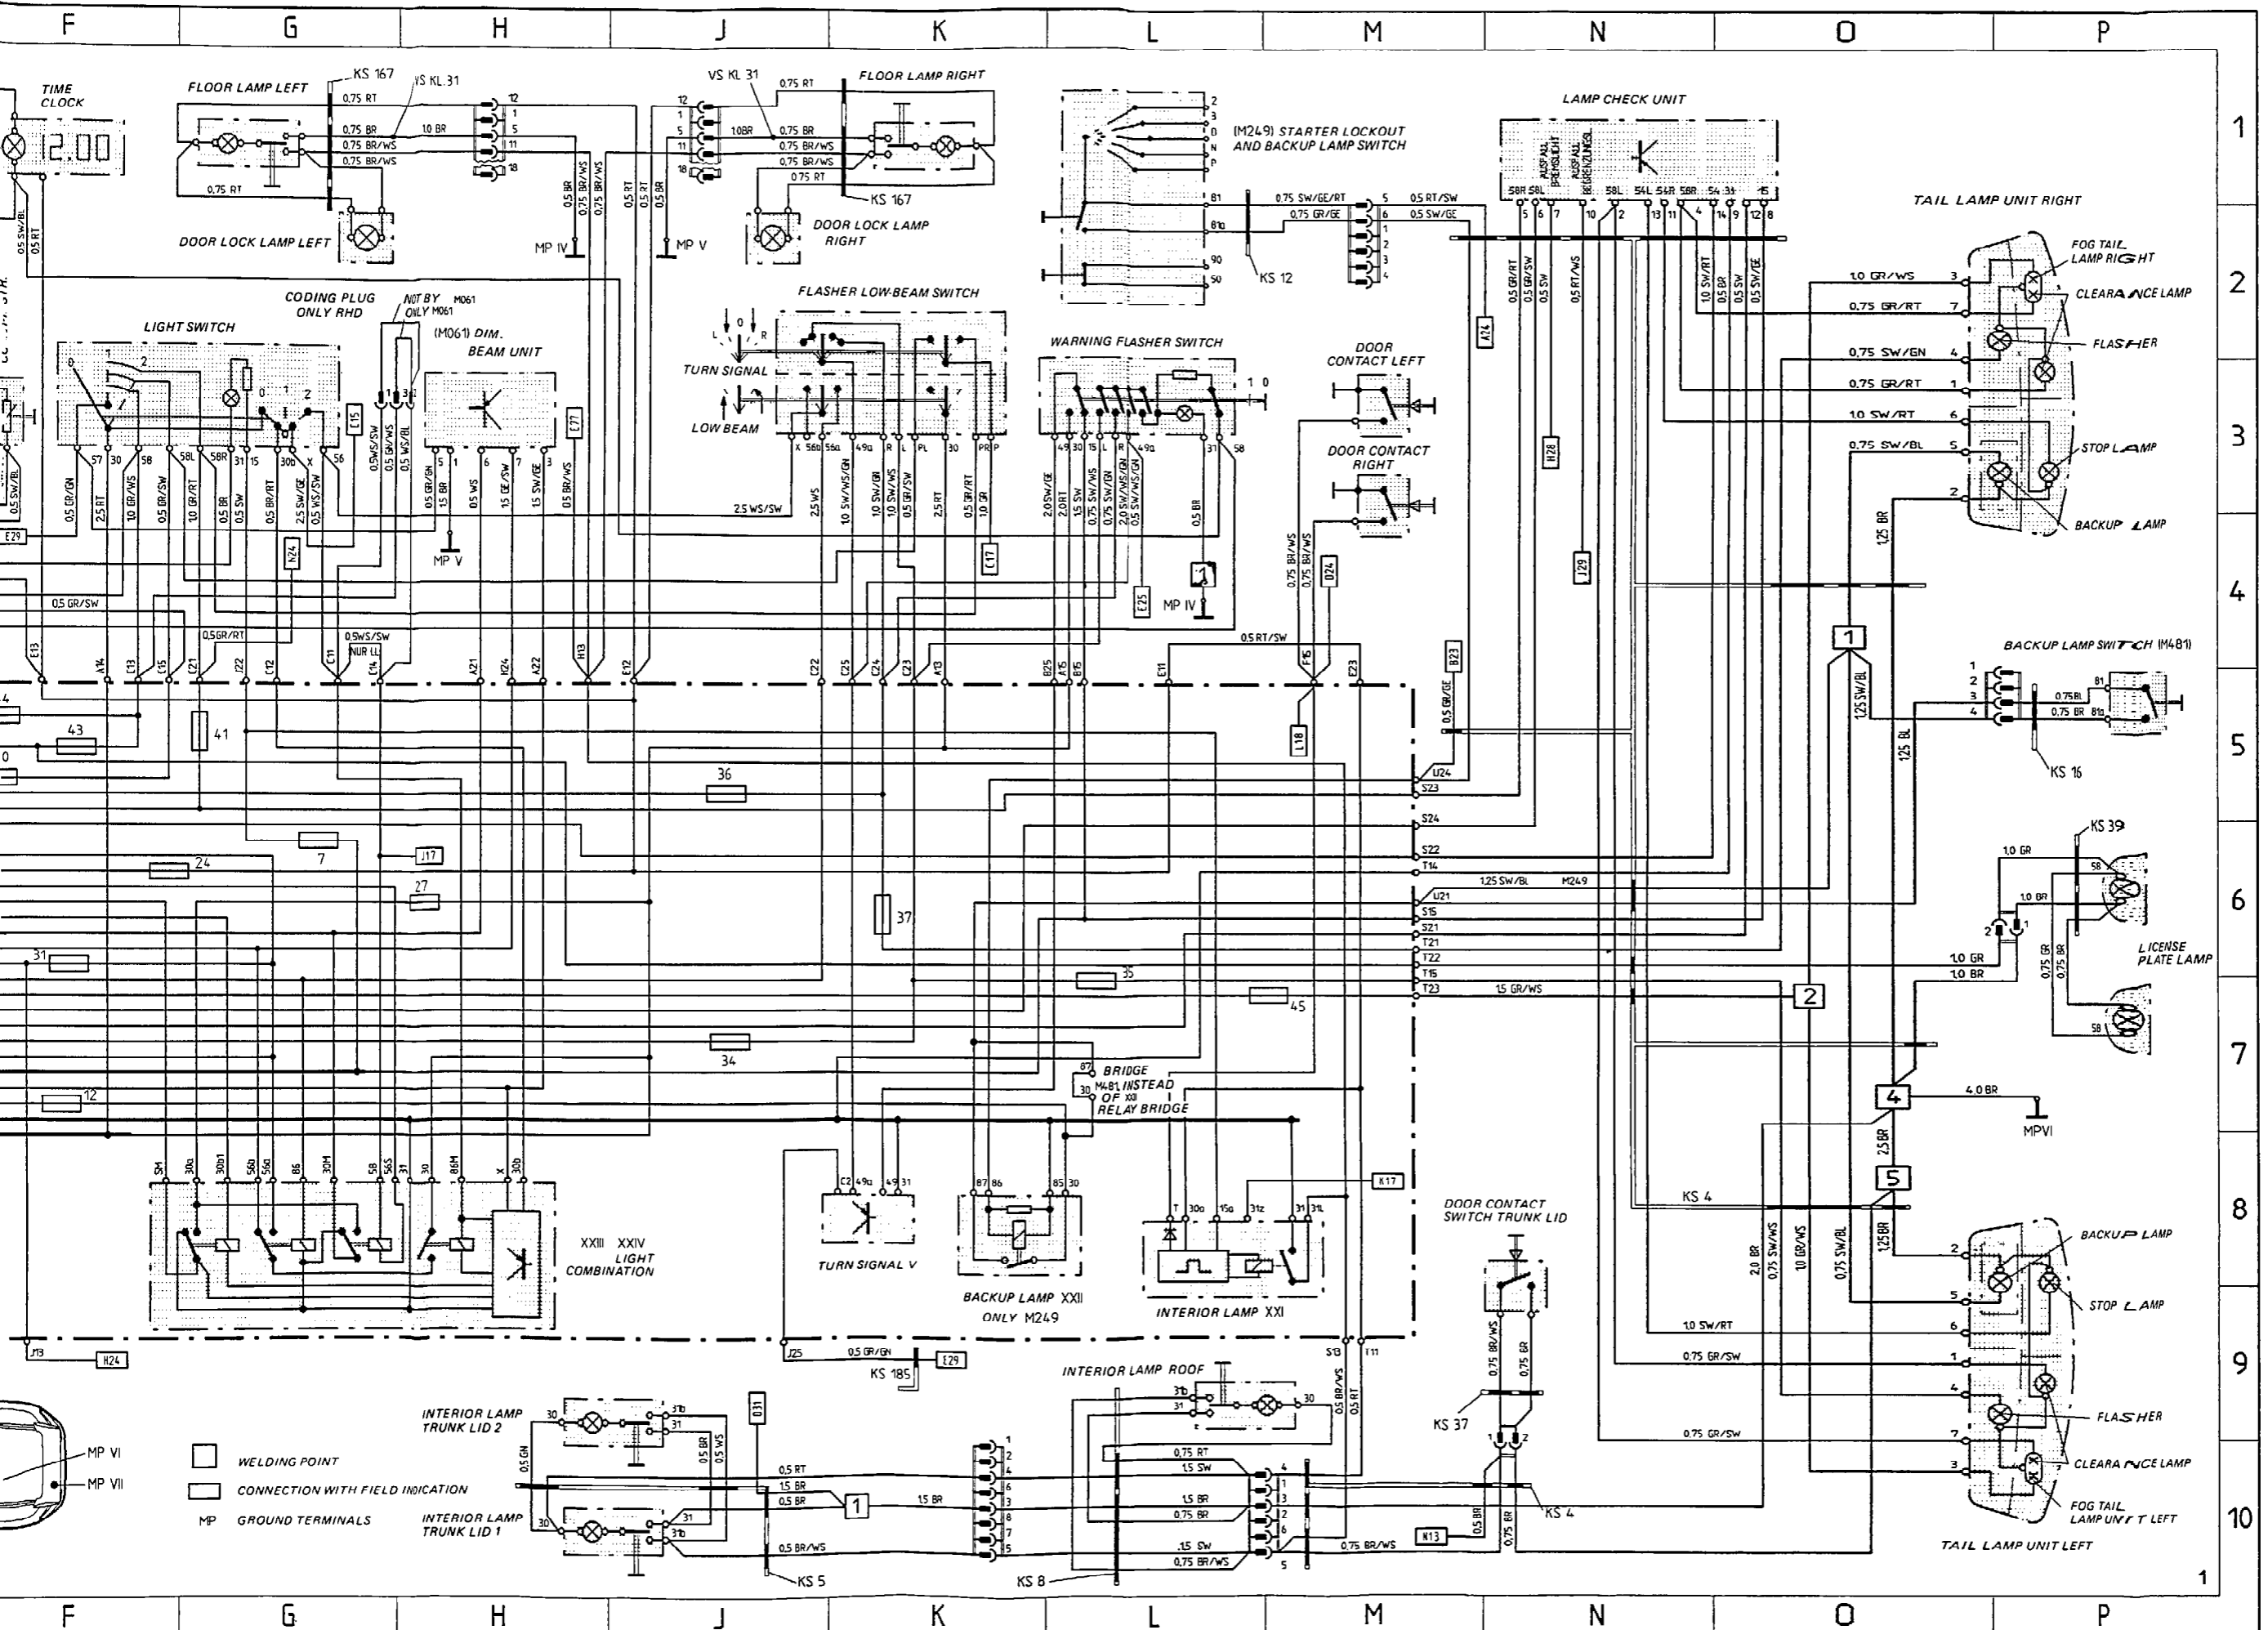

WELDING POINT
 CONNECTION WITH FIELD INDICATION
 MP GROUND TERMINALS


WS - WHITE RT - RED GN - GREEN GE - YELLOW GR - GREY BR - BROWN BL - BLUE LI - VIOLET


Wiring Diagram Type 928 S
Model 87 page 2

LAMPS USA

Wiring Diagram Type 928S Model 87 page 2

LAMPS USA

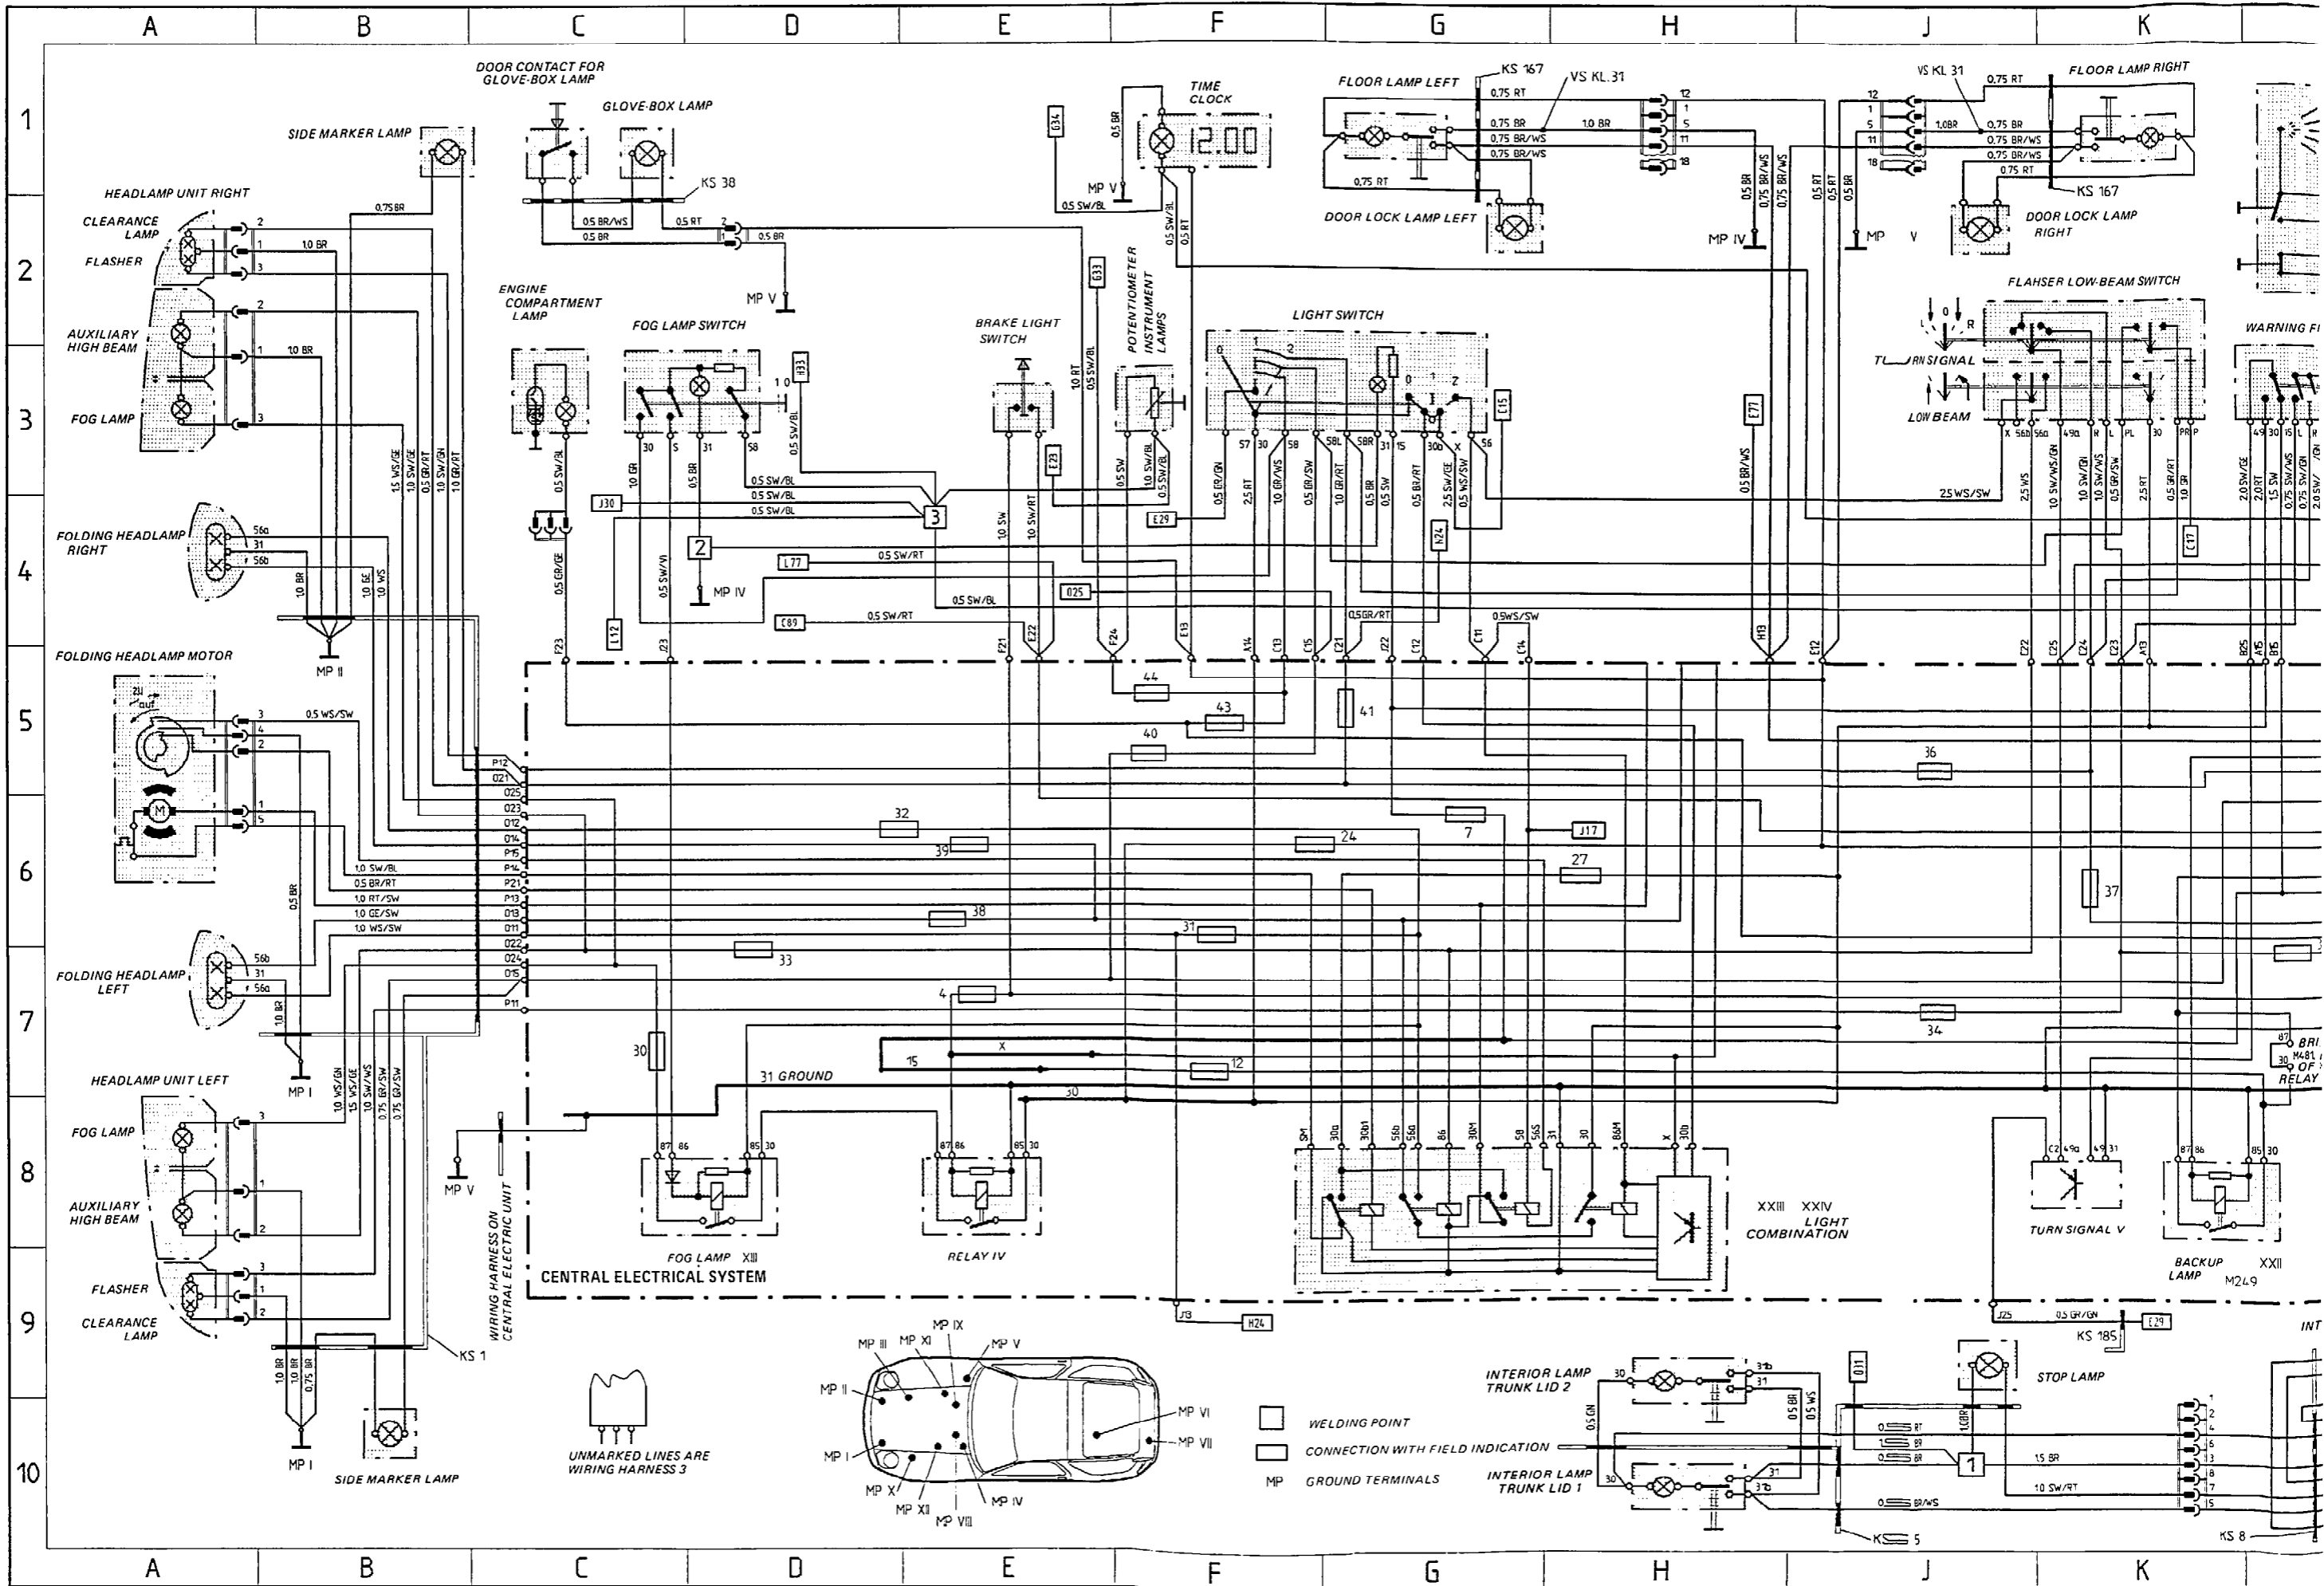

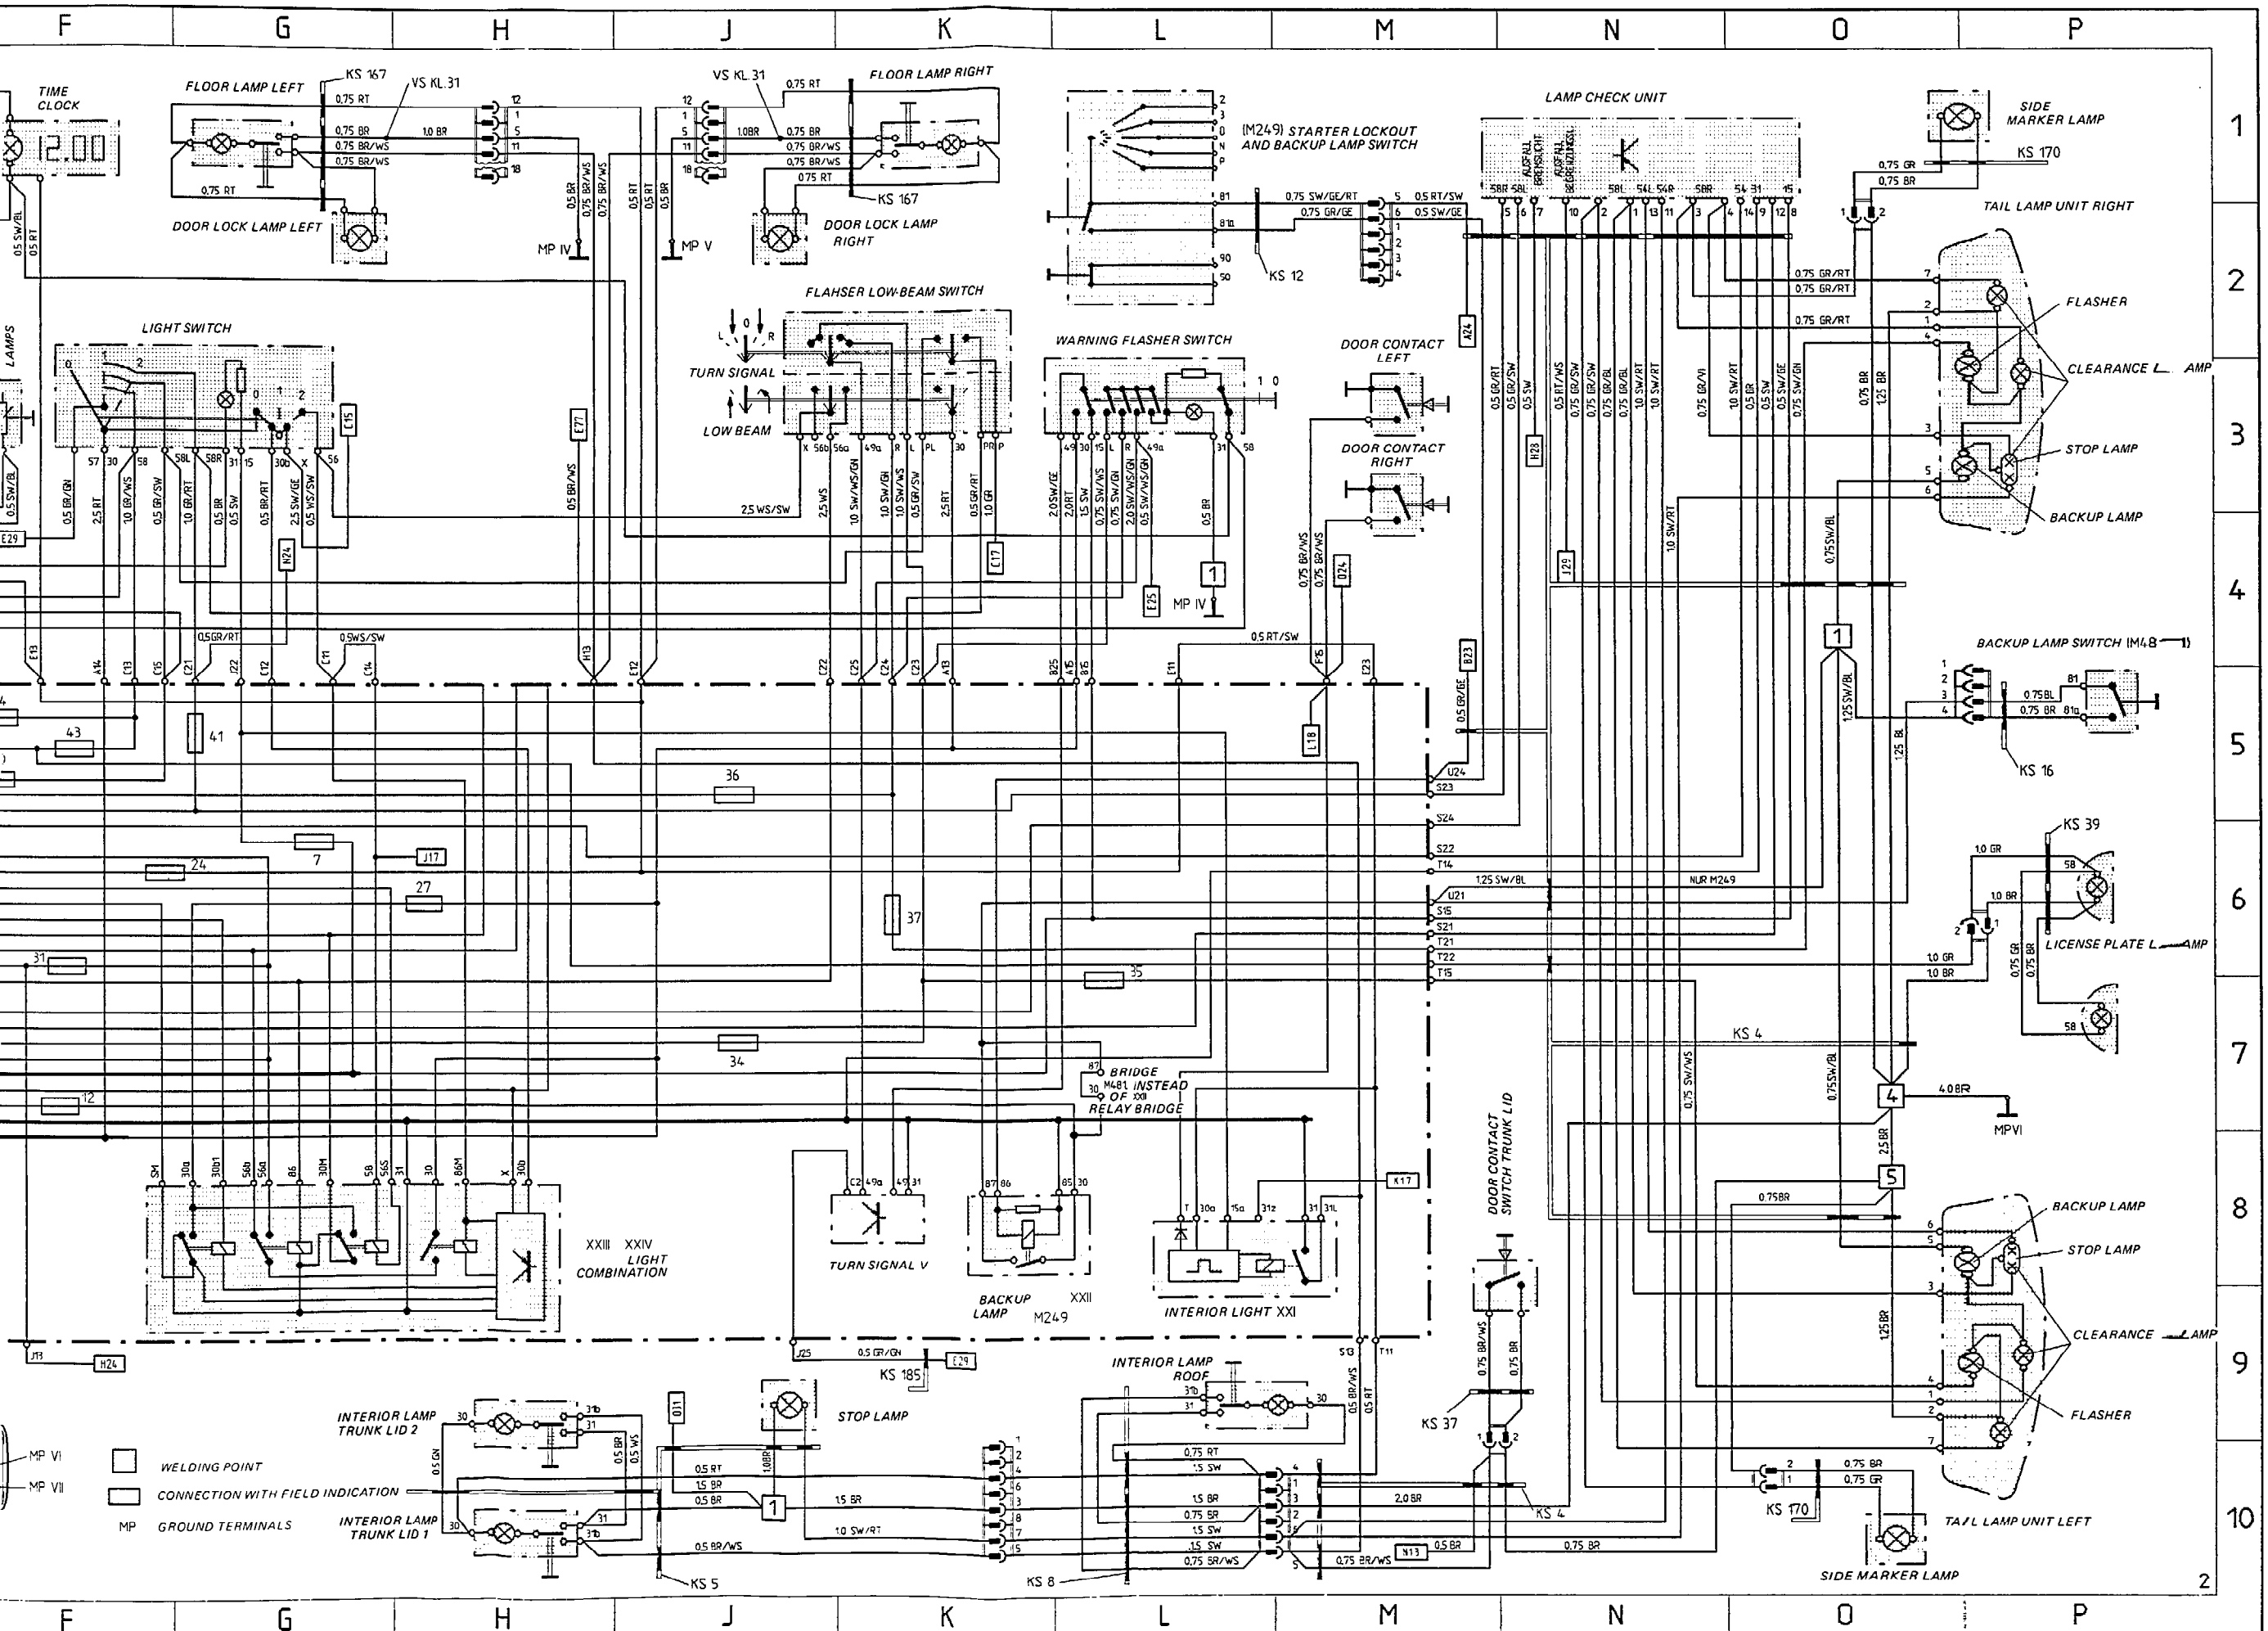



Wiring Diagram Type 928 S
Model 87 page 3

BODY


Wiring Diagram Type 928 S Model 8/ page 3

BODY

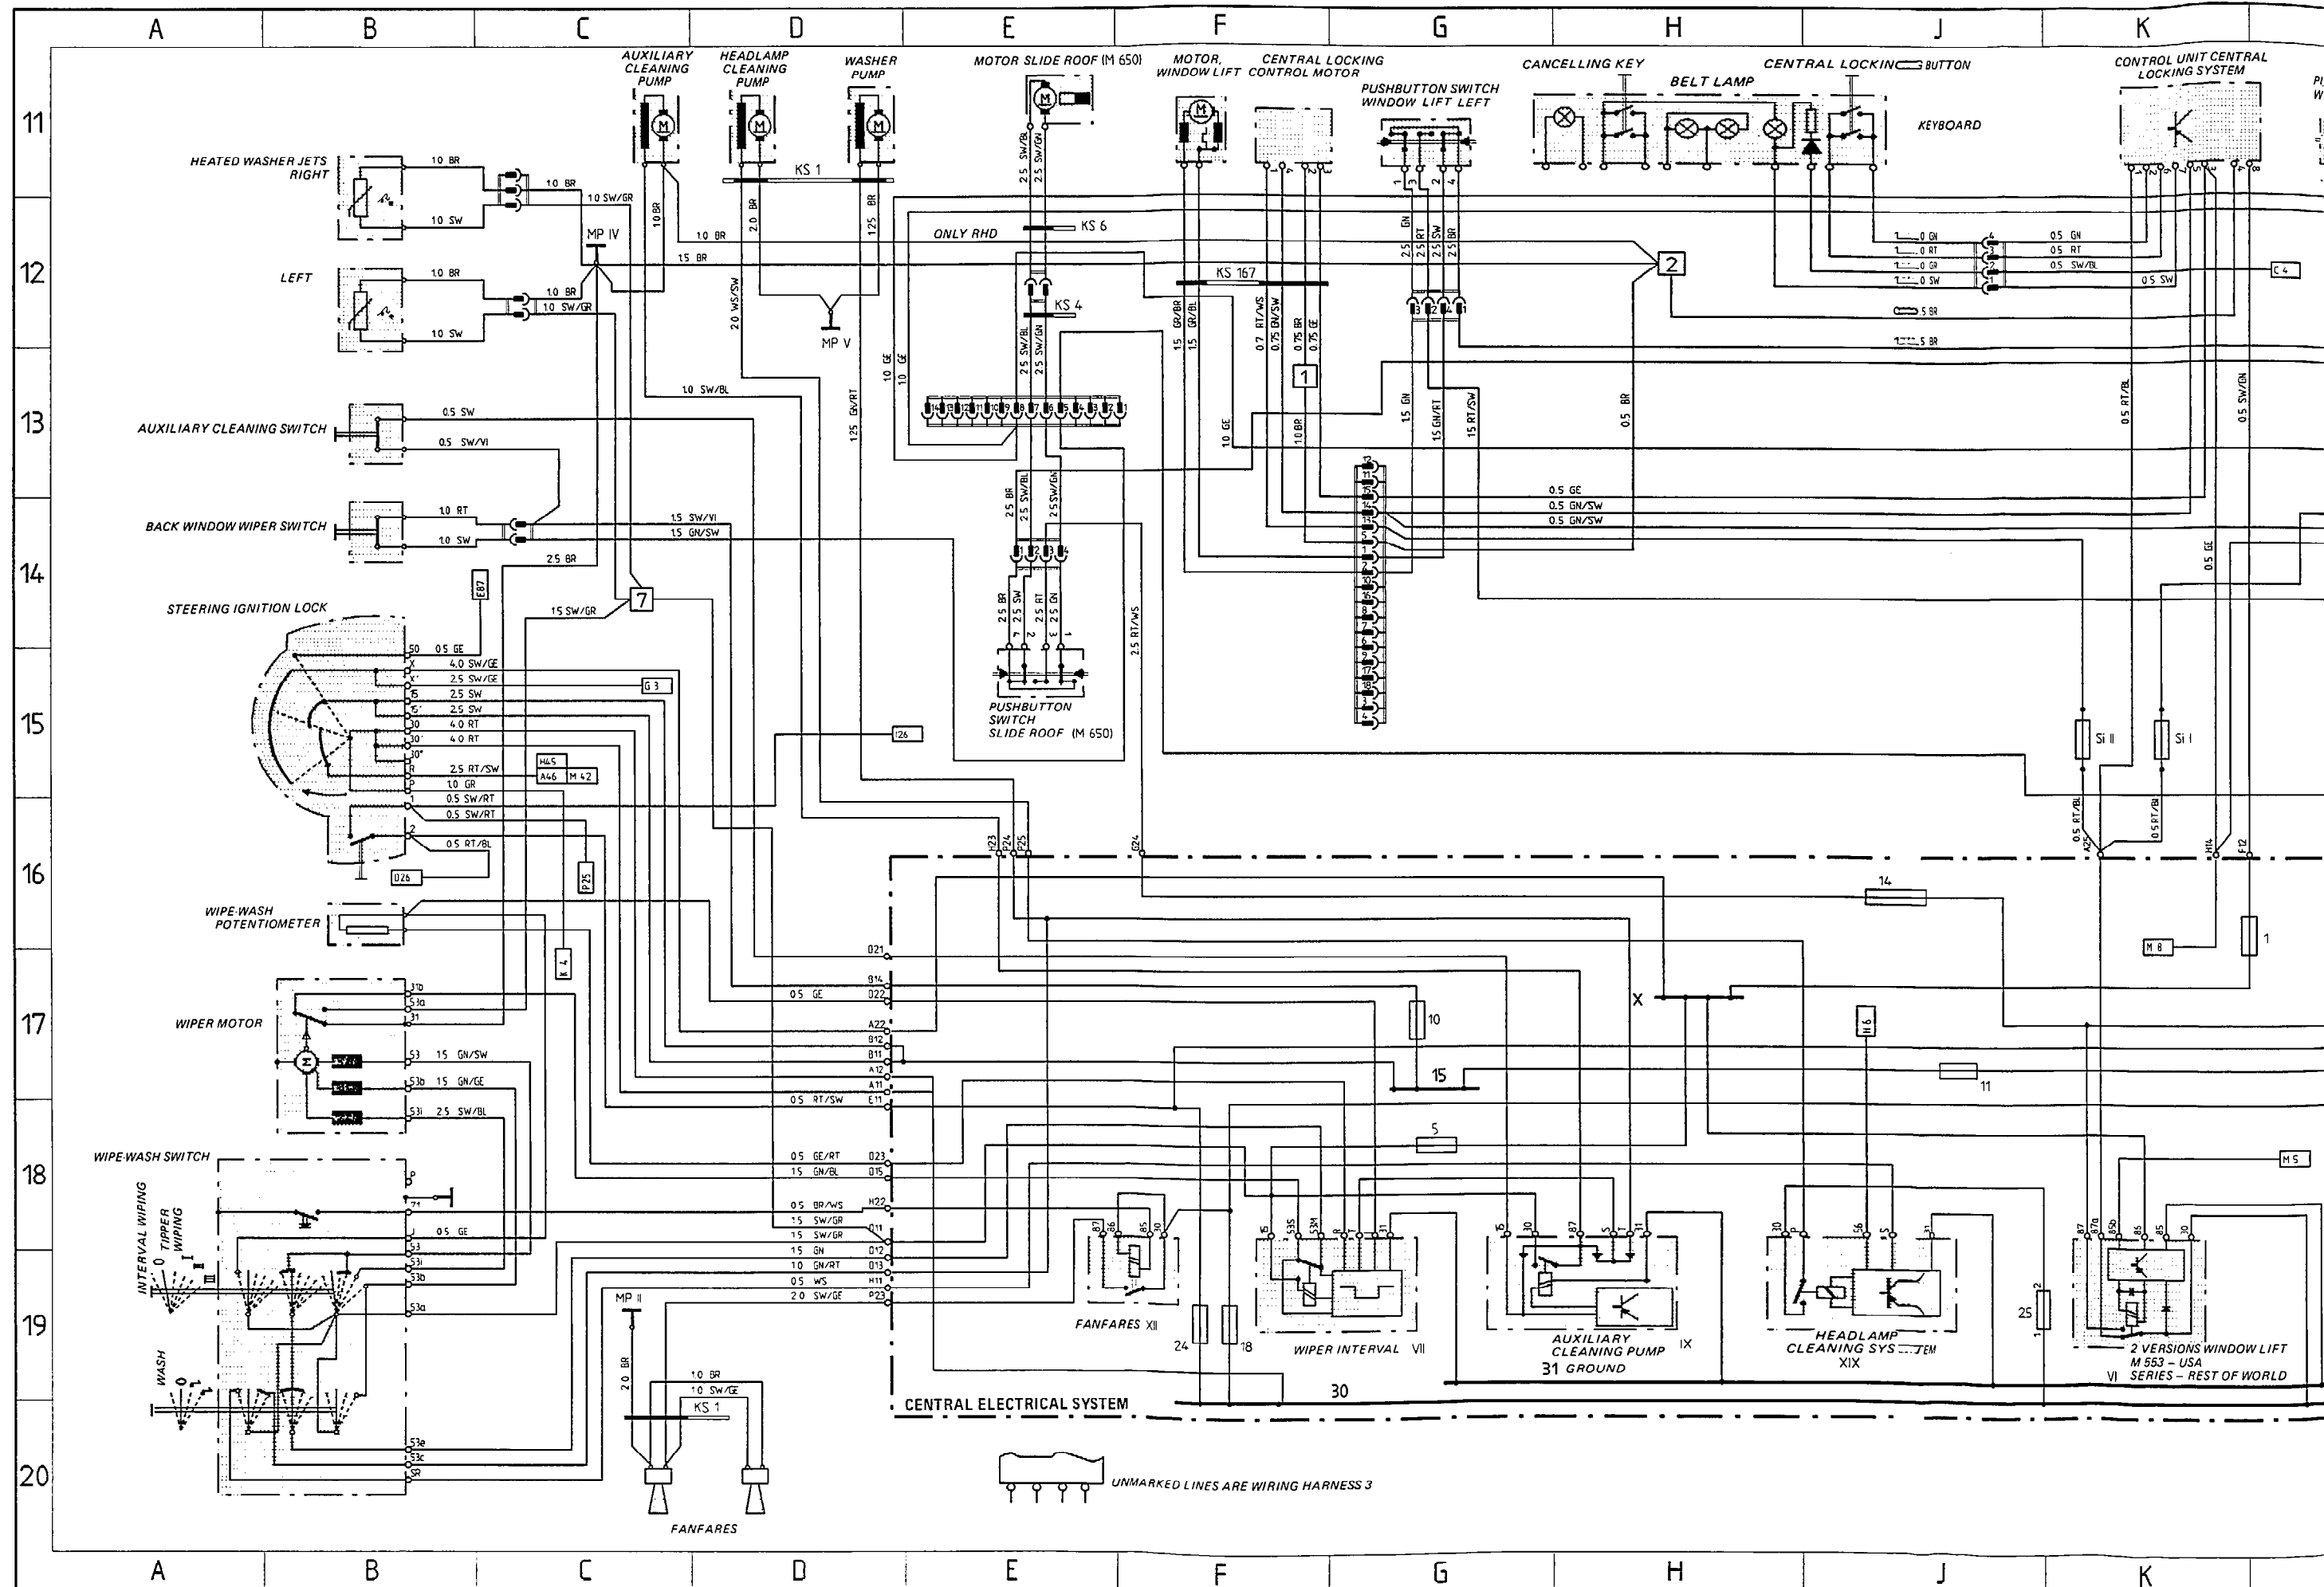

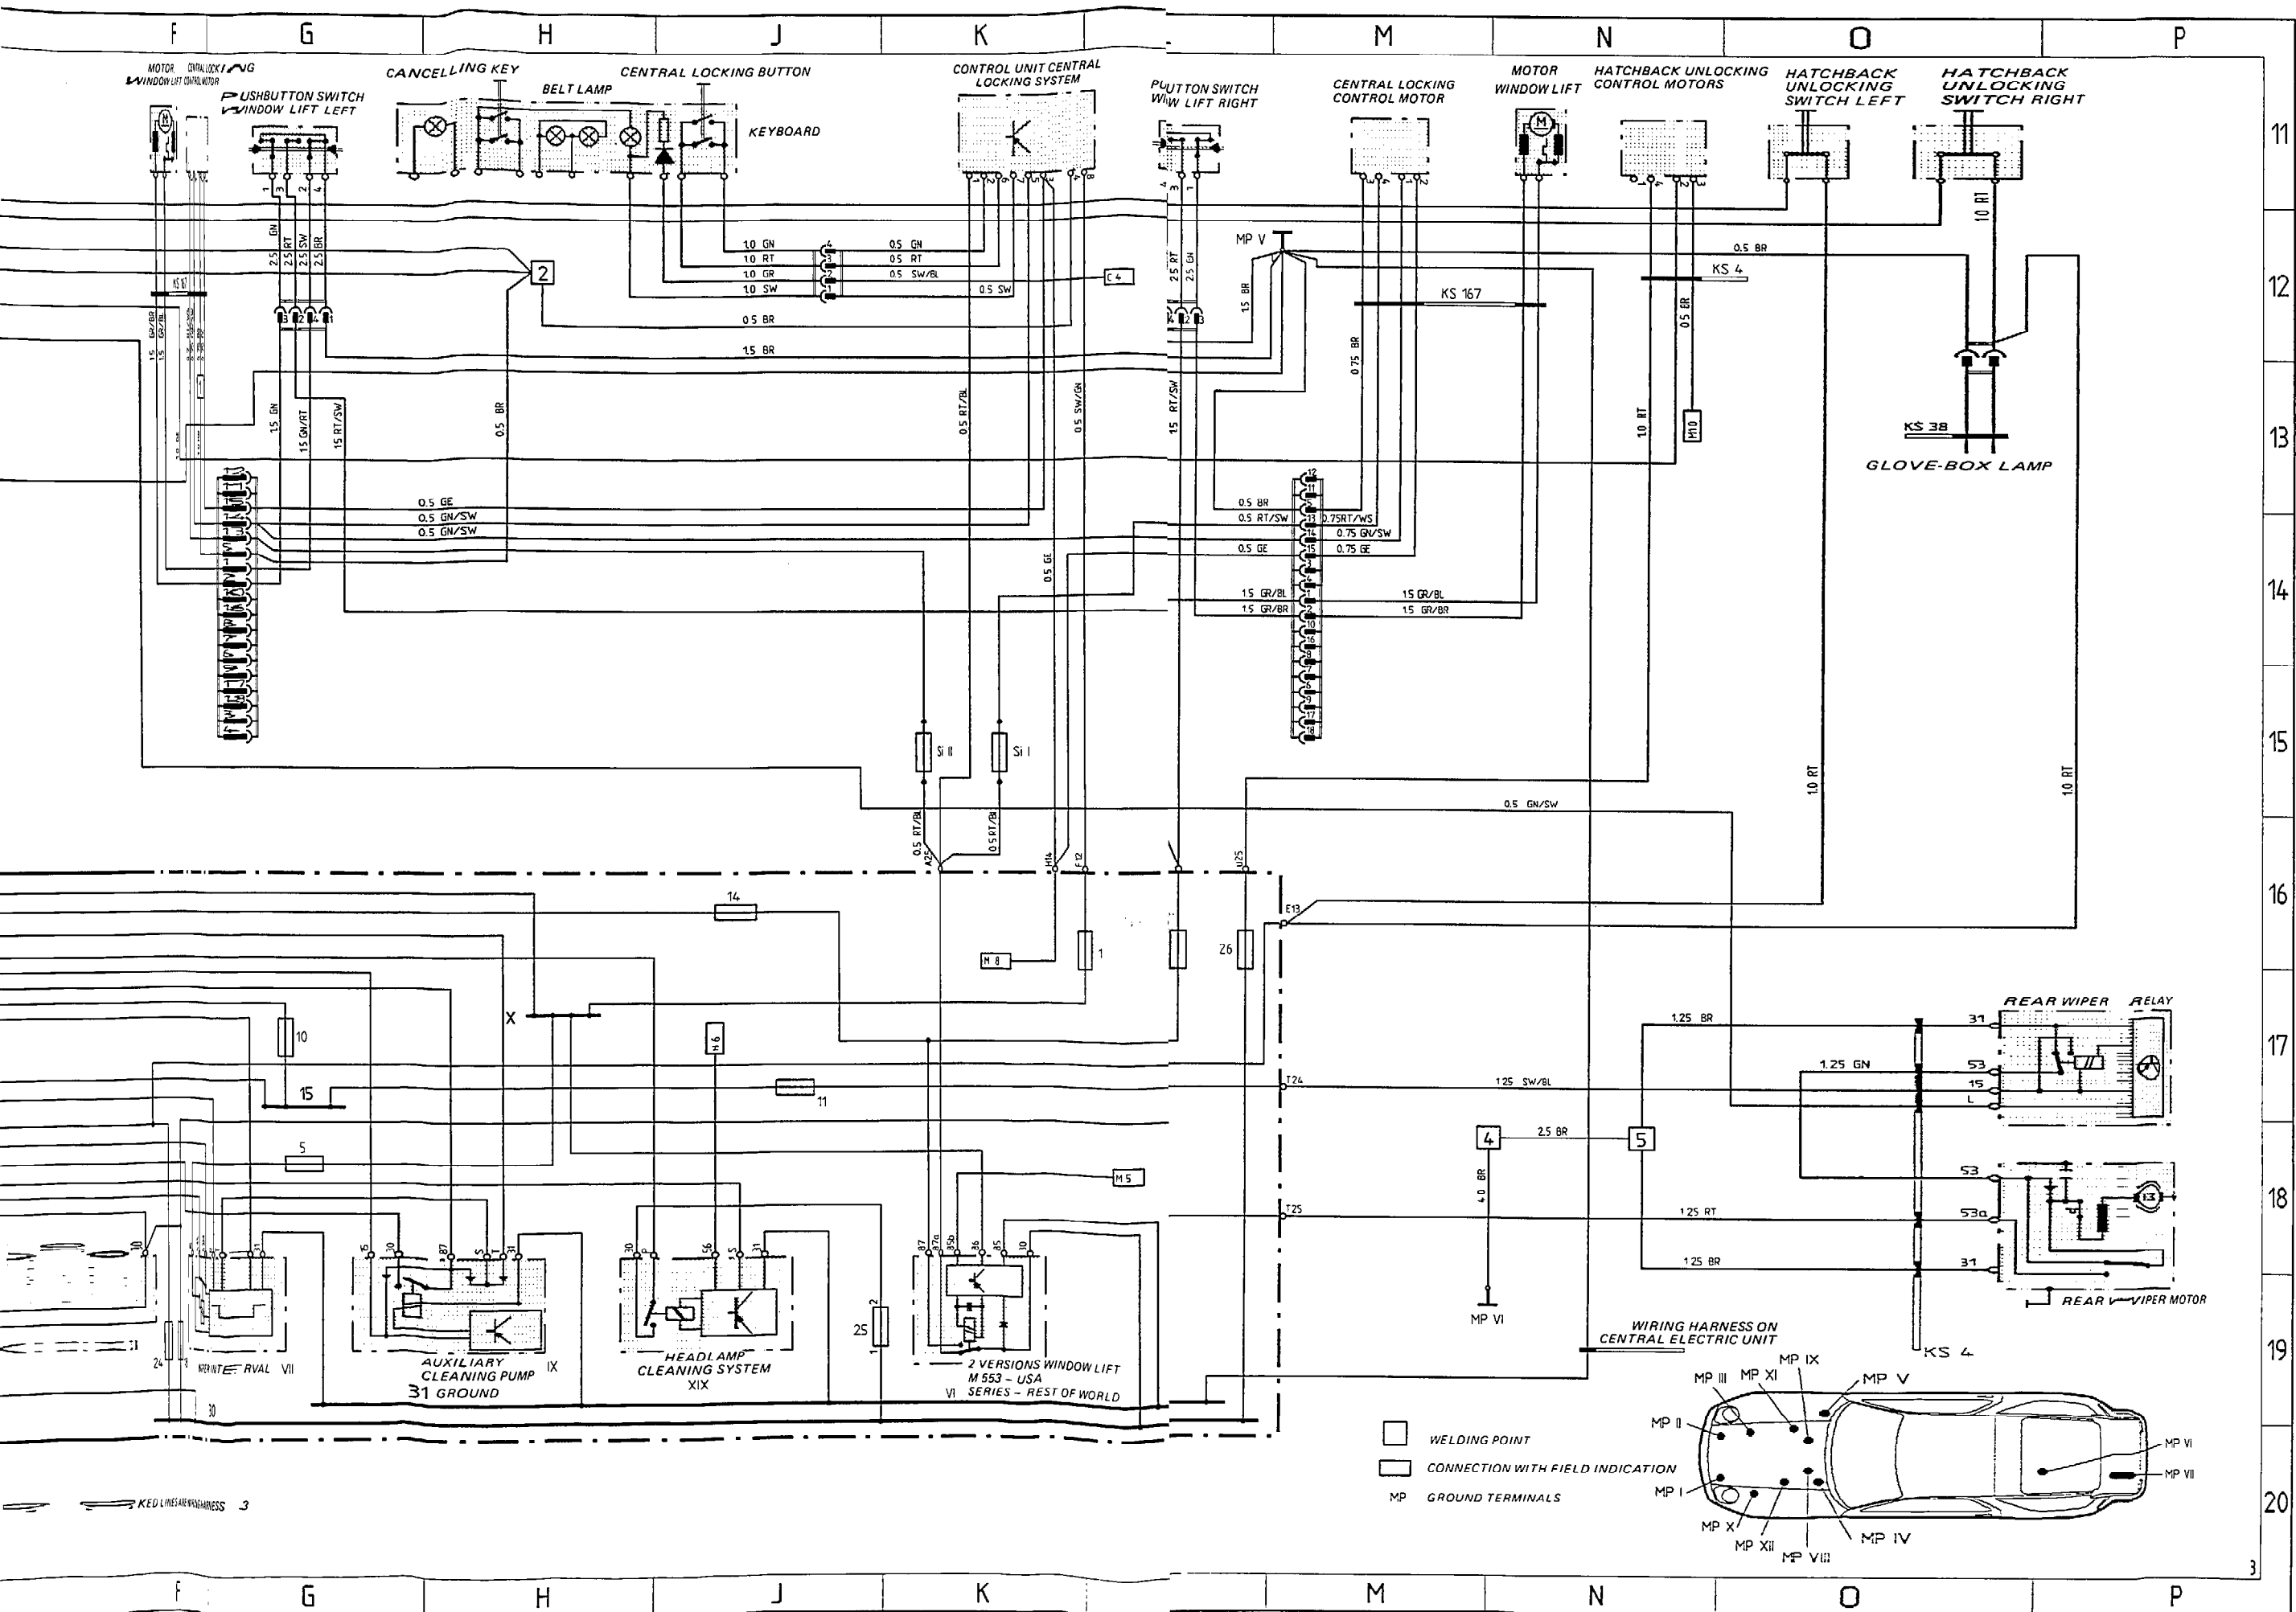

- WELDING POINT
- CONNECTION WITH FIELD INDICATION
- MP GROUND TERMINALS

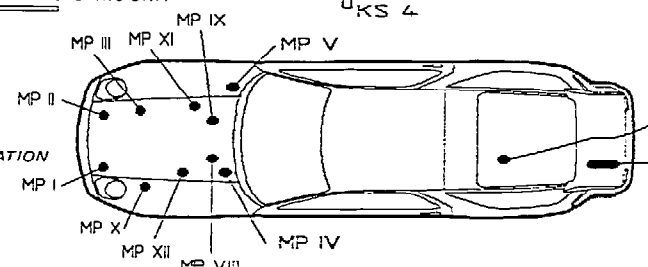



Wiring Diagram Type 928 S
Model 87 page 4

INSTRUMENTS AND INDICATORS

Wiring Diagram Type 928 S Model 87 page 4

INSTRUMENTS AND INDICATORS

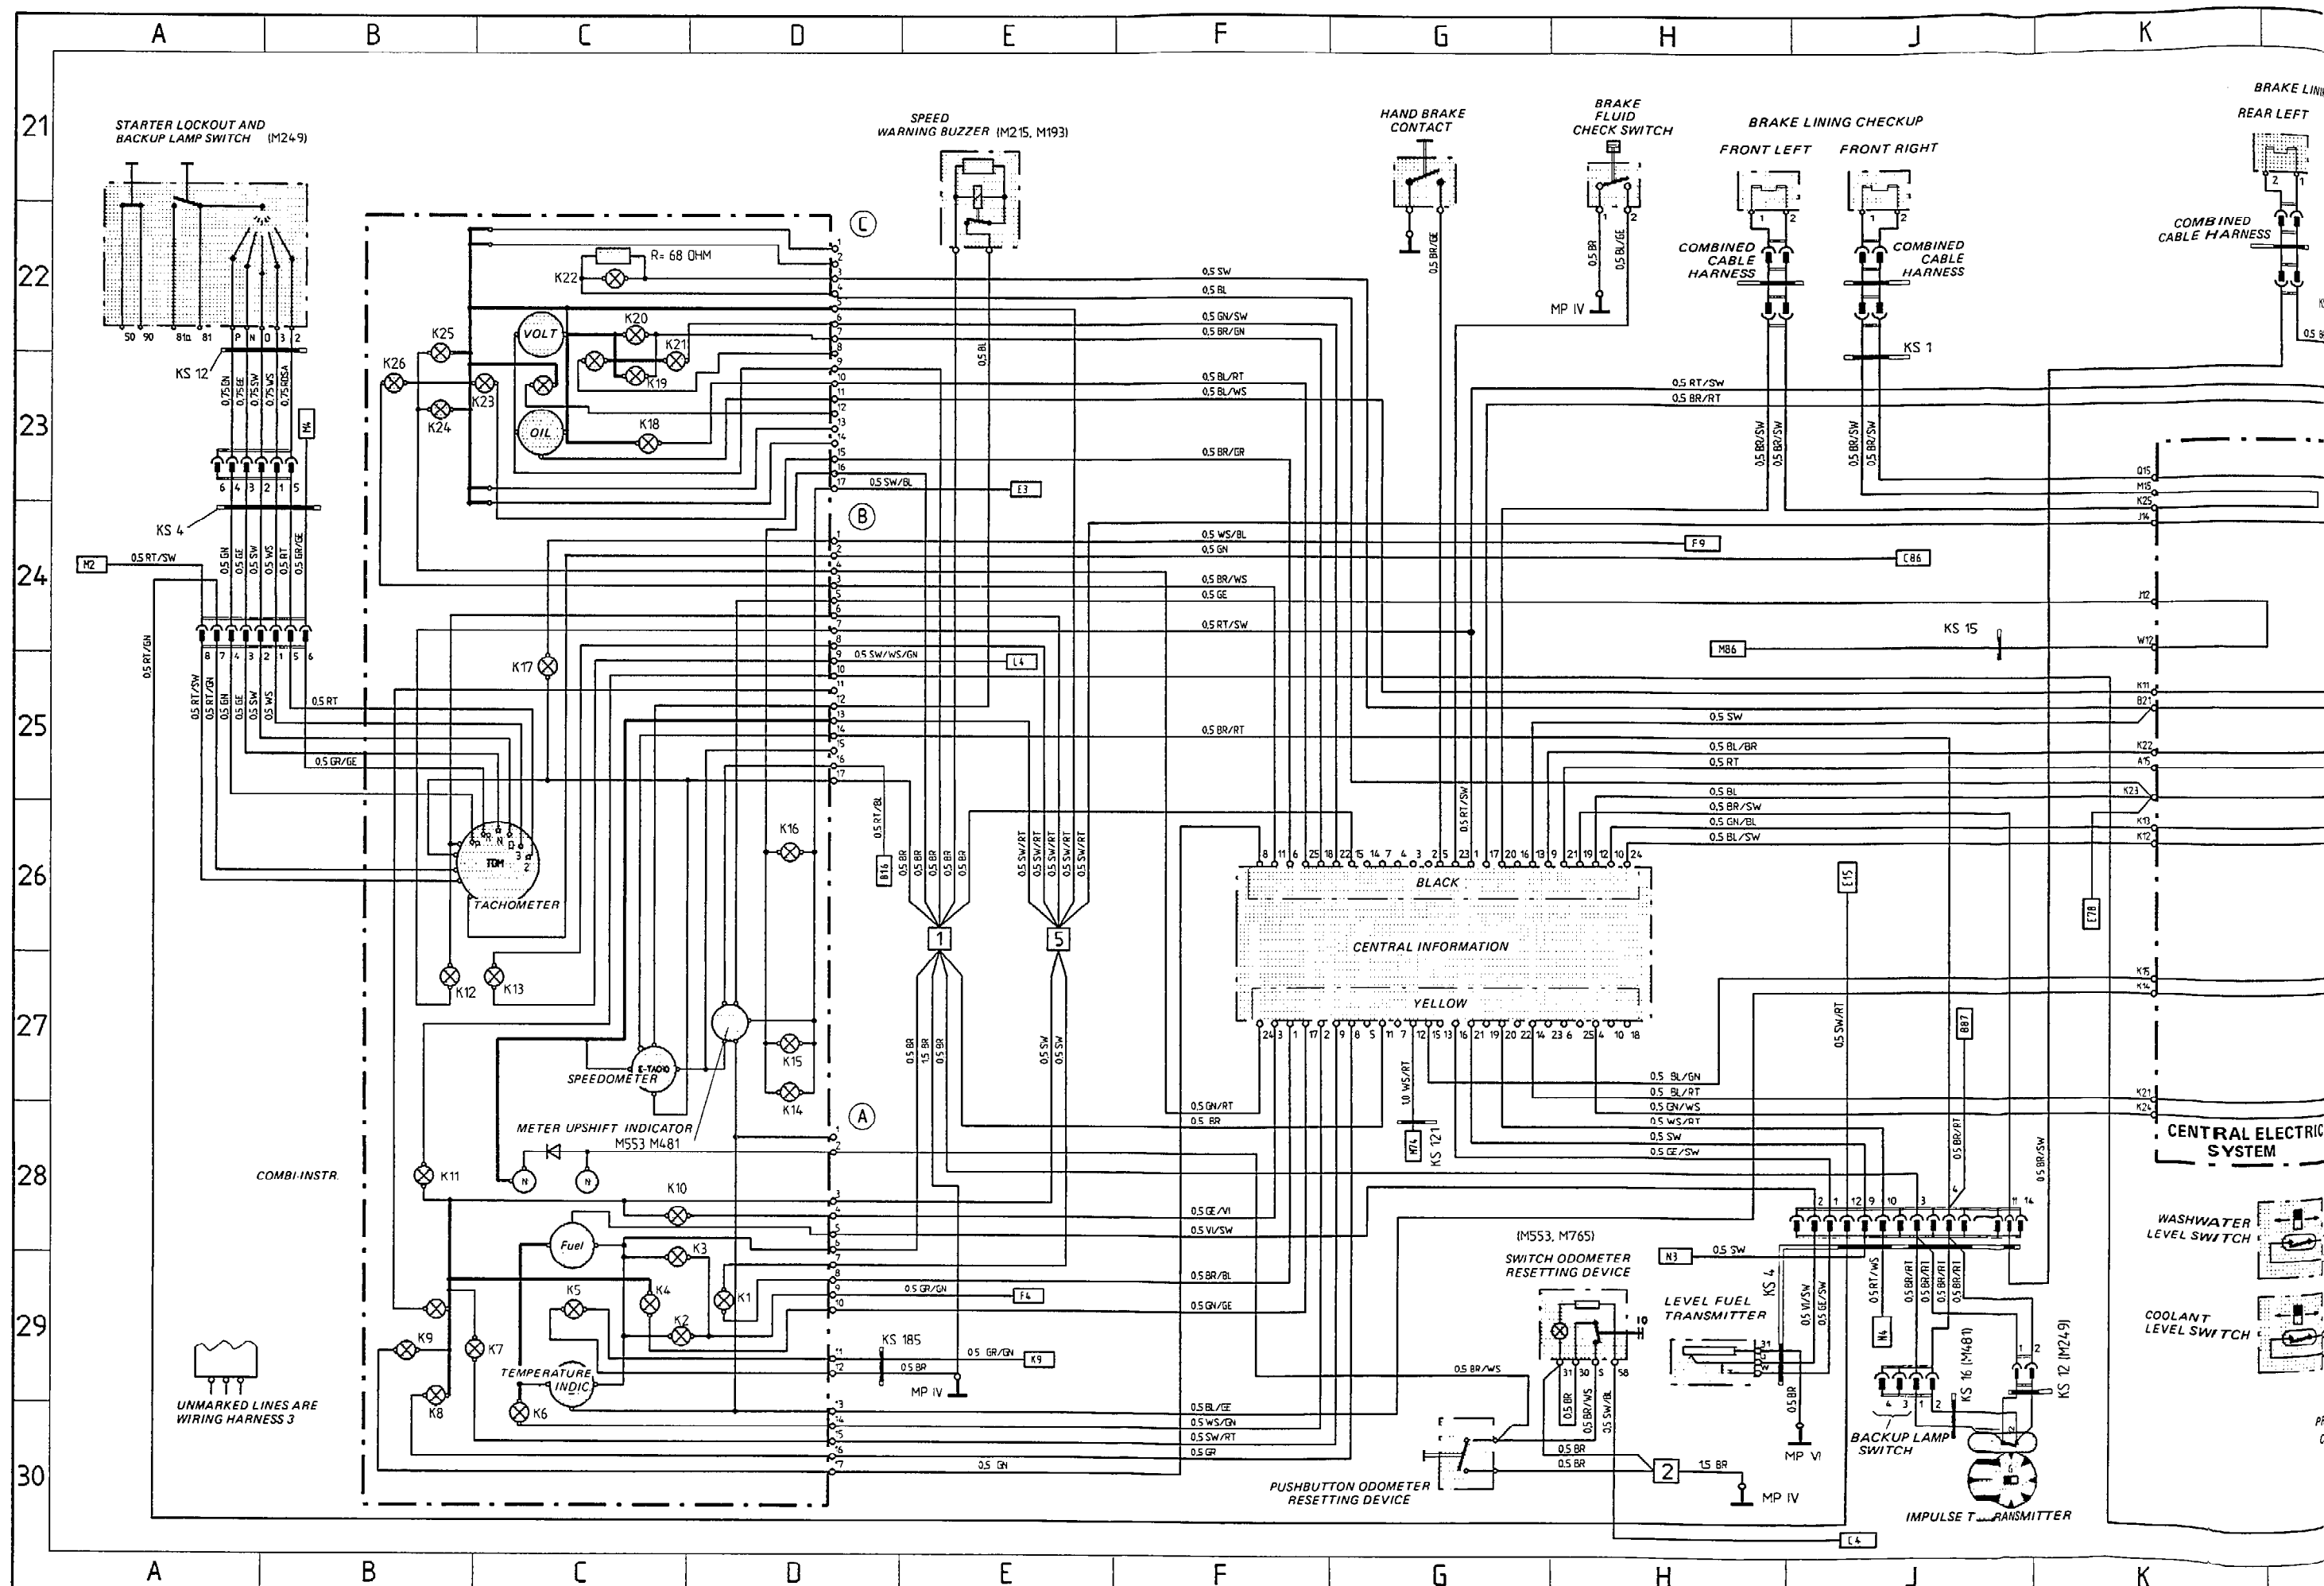

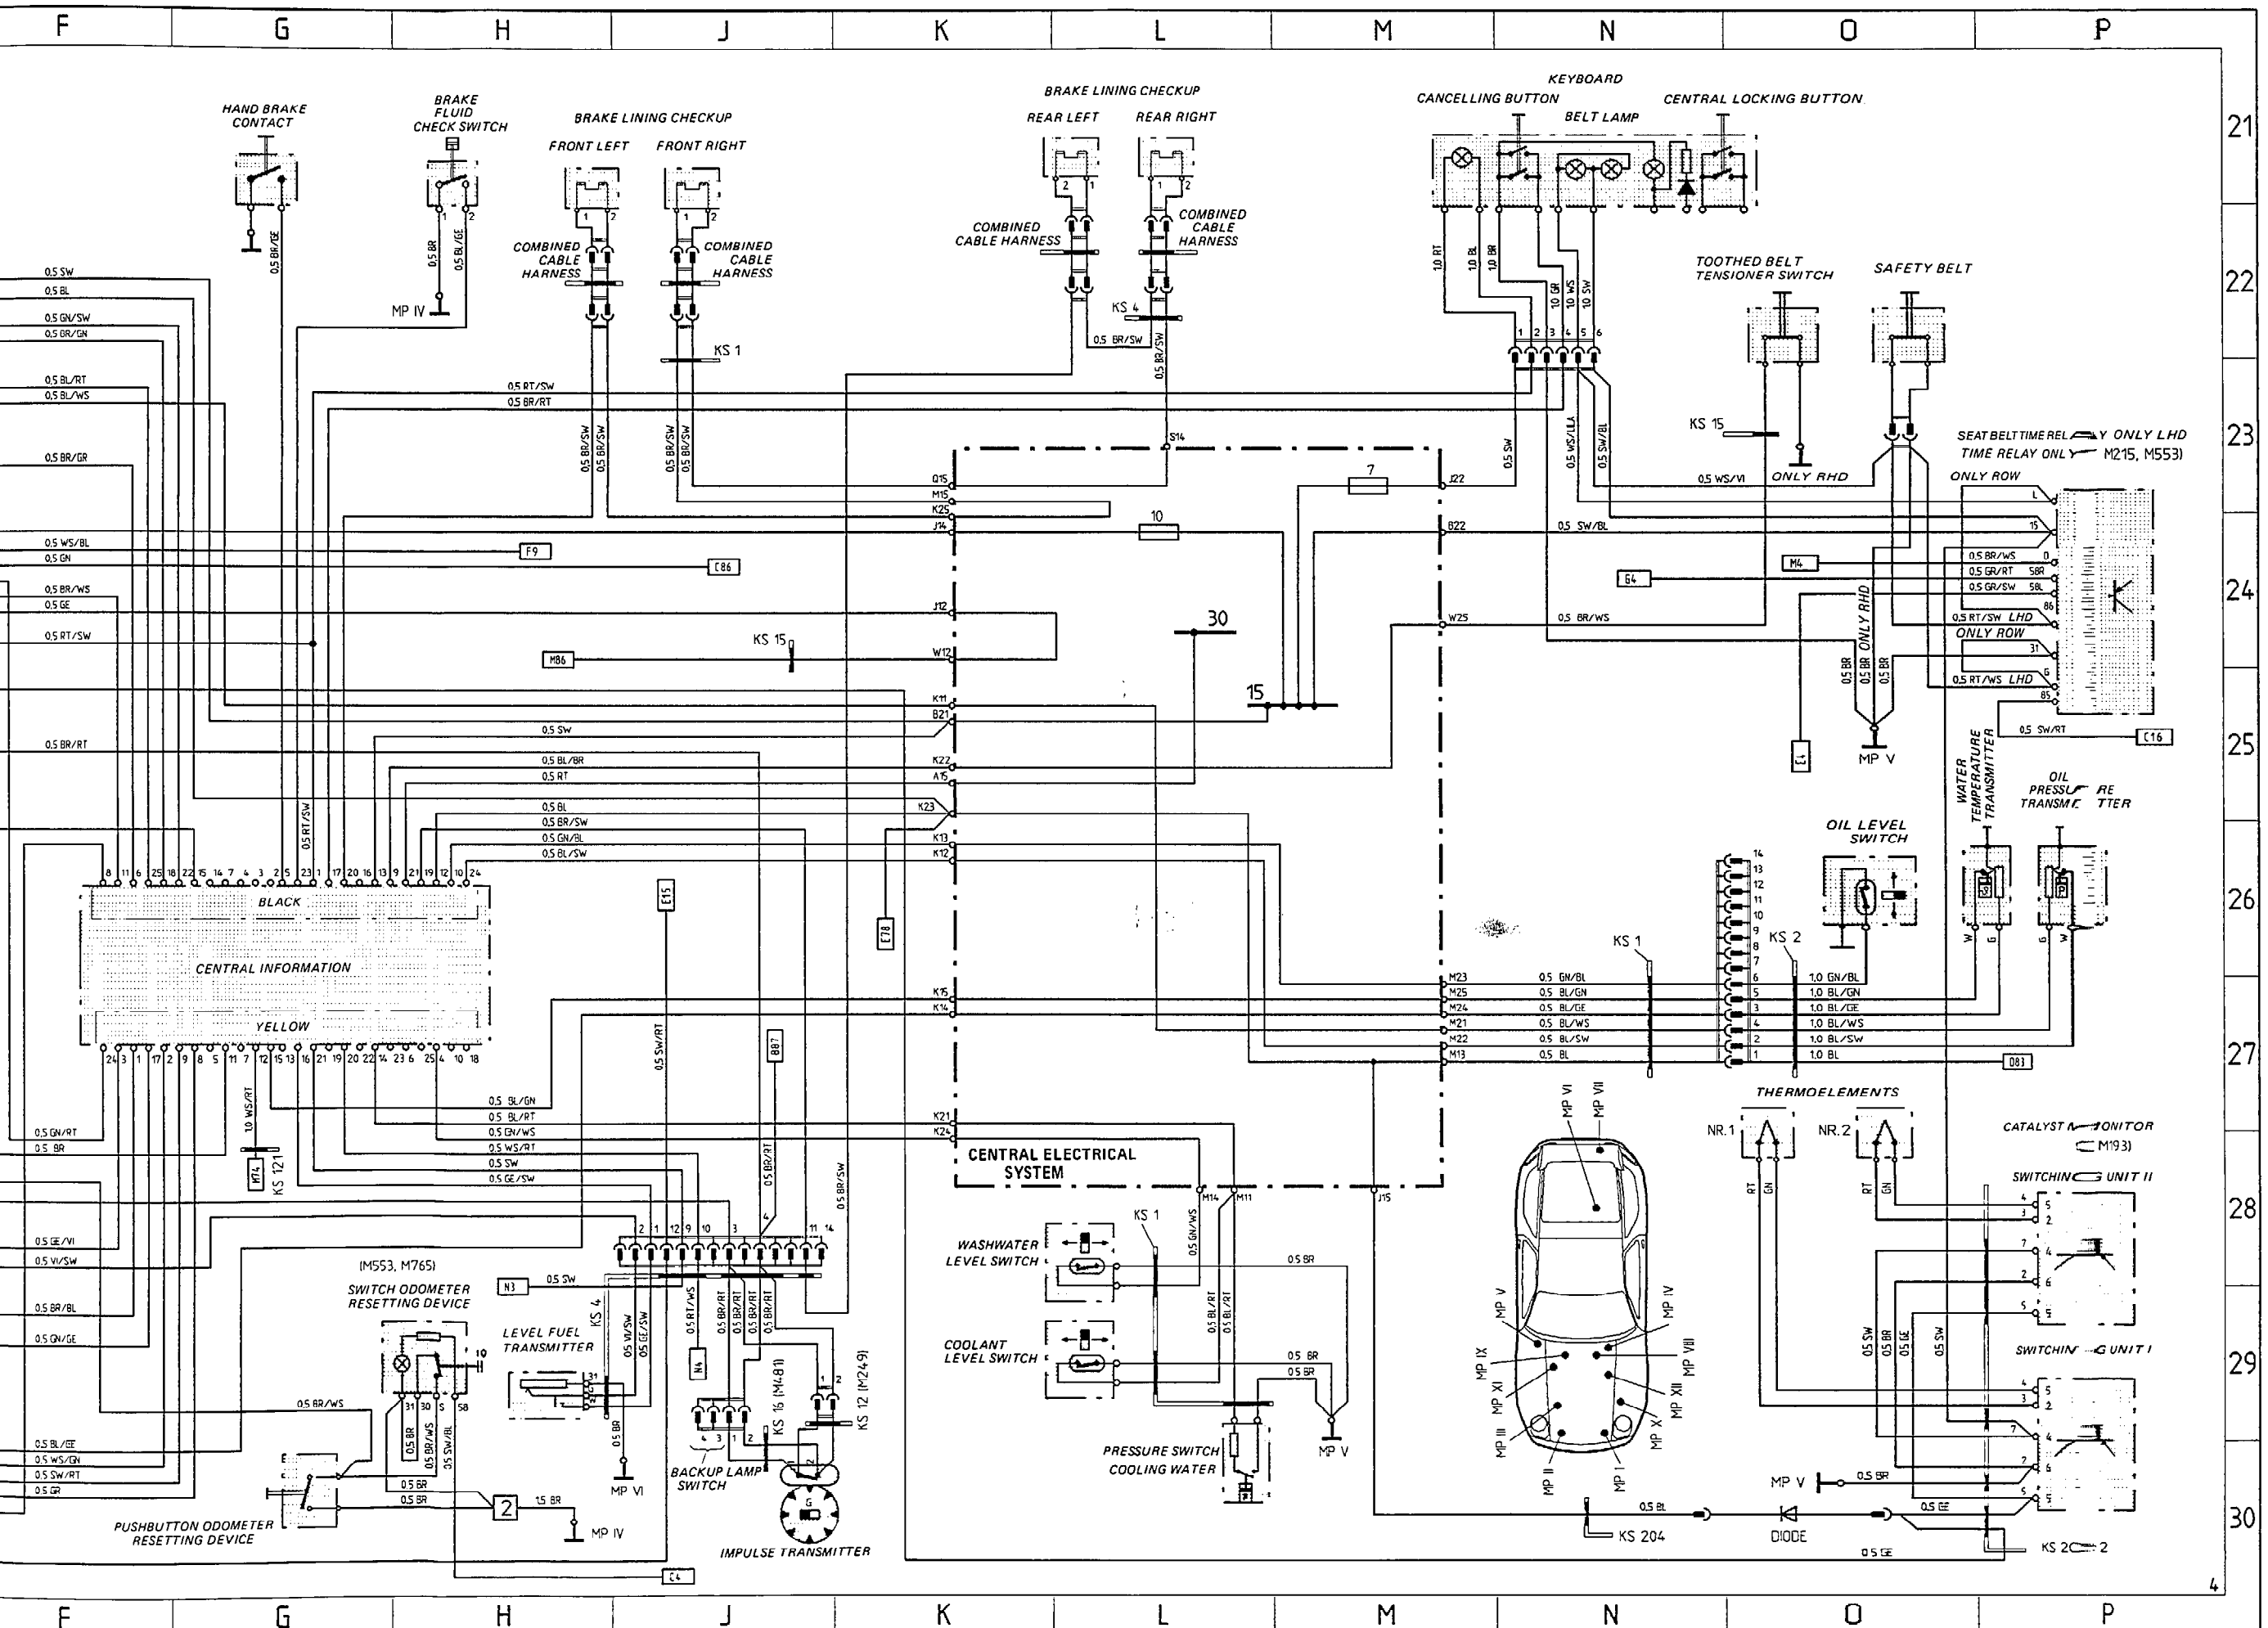



Wiring Diagram Type 928 S
Model 87 page 5

VENTILATION, HEATING, AC

Wiring Diagram Type 928 S Model 87 page 5

VENTILATION, HEATING, AC

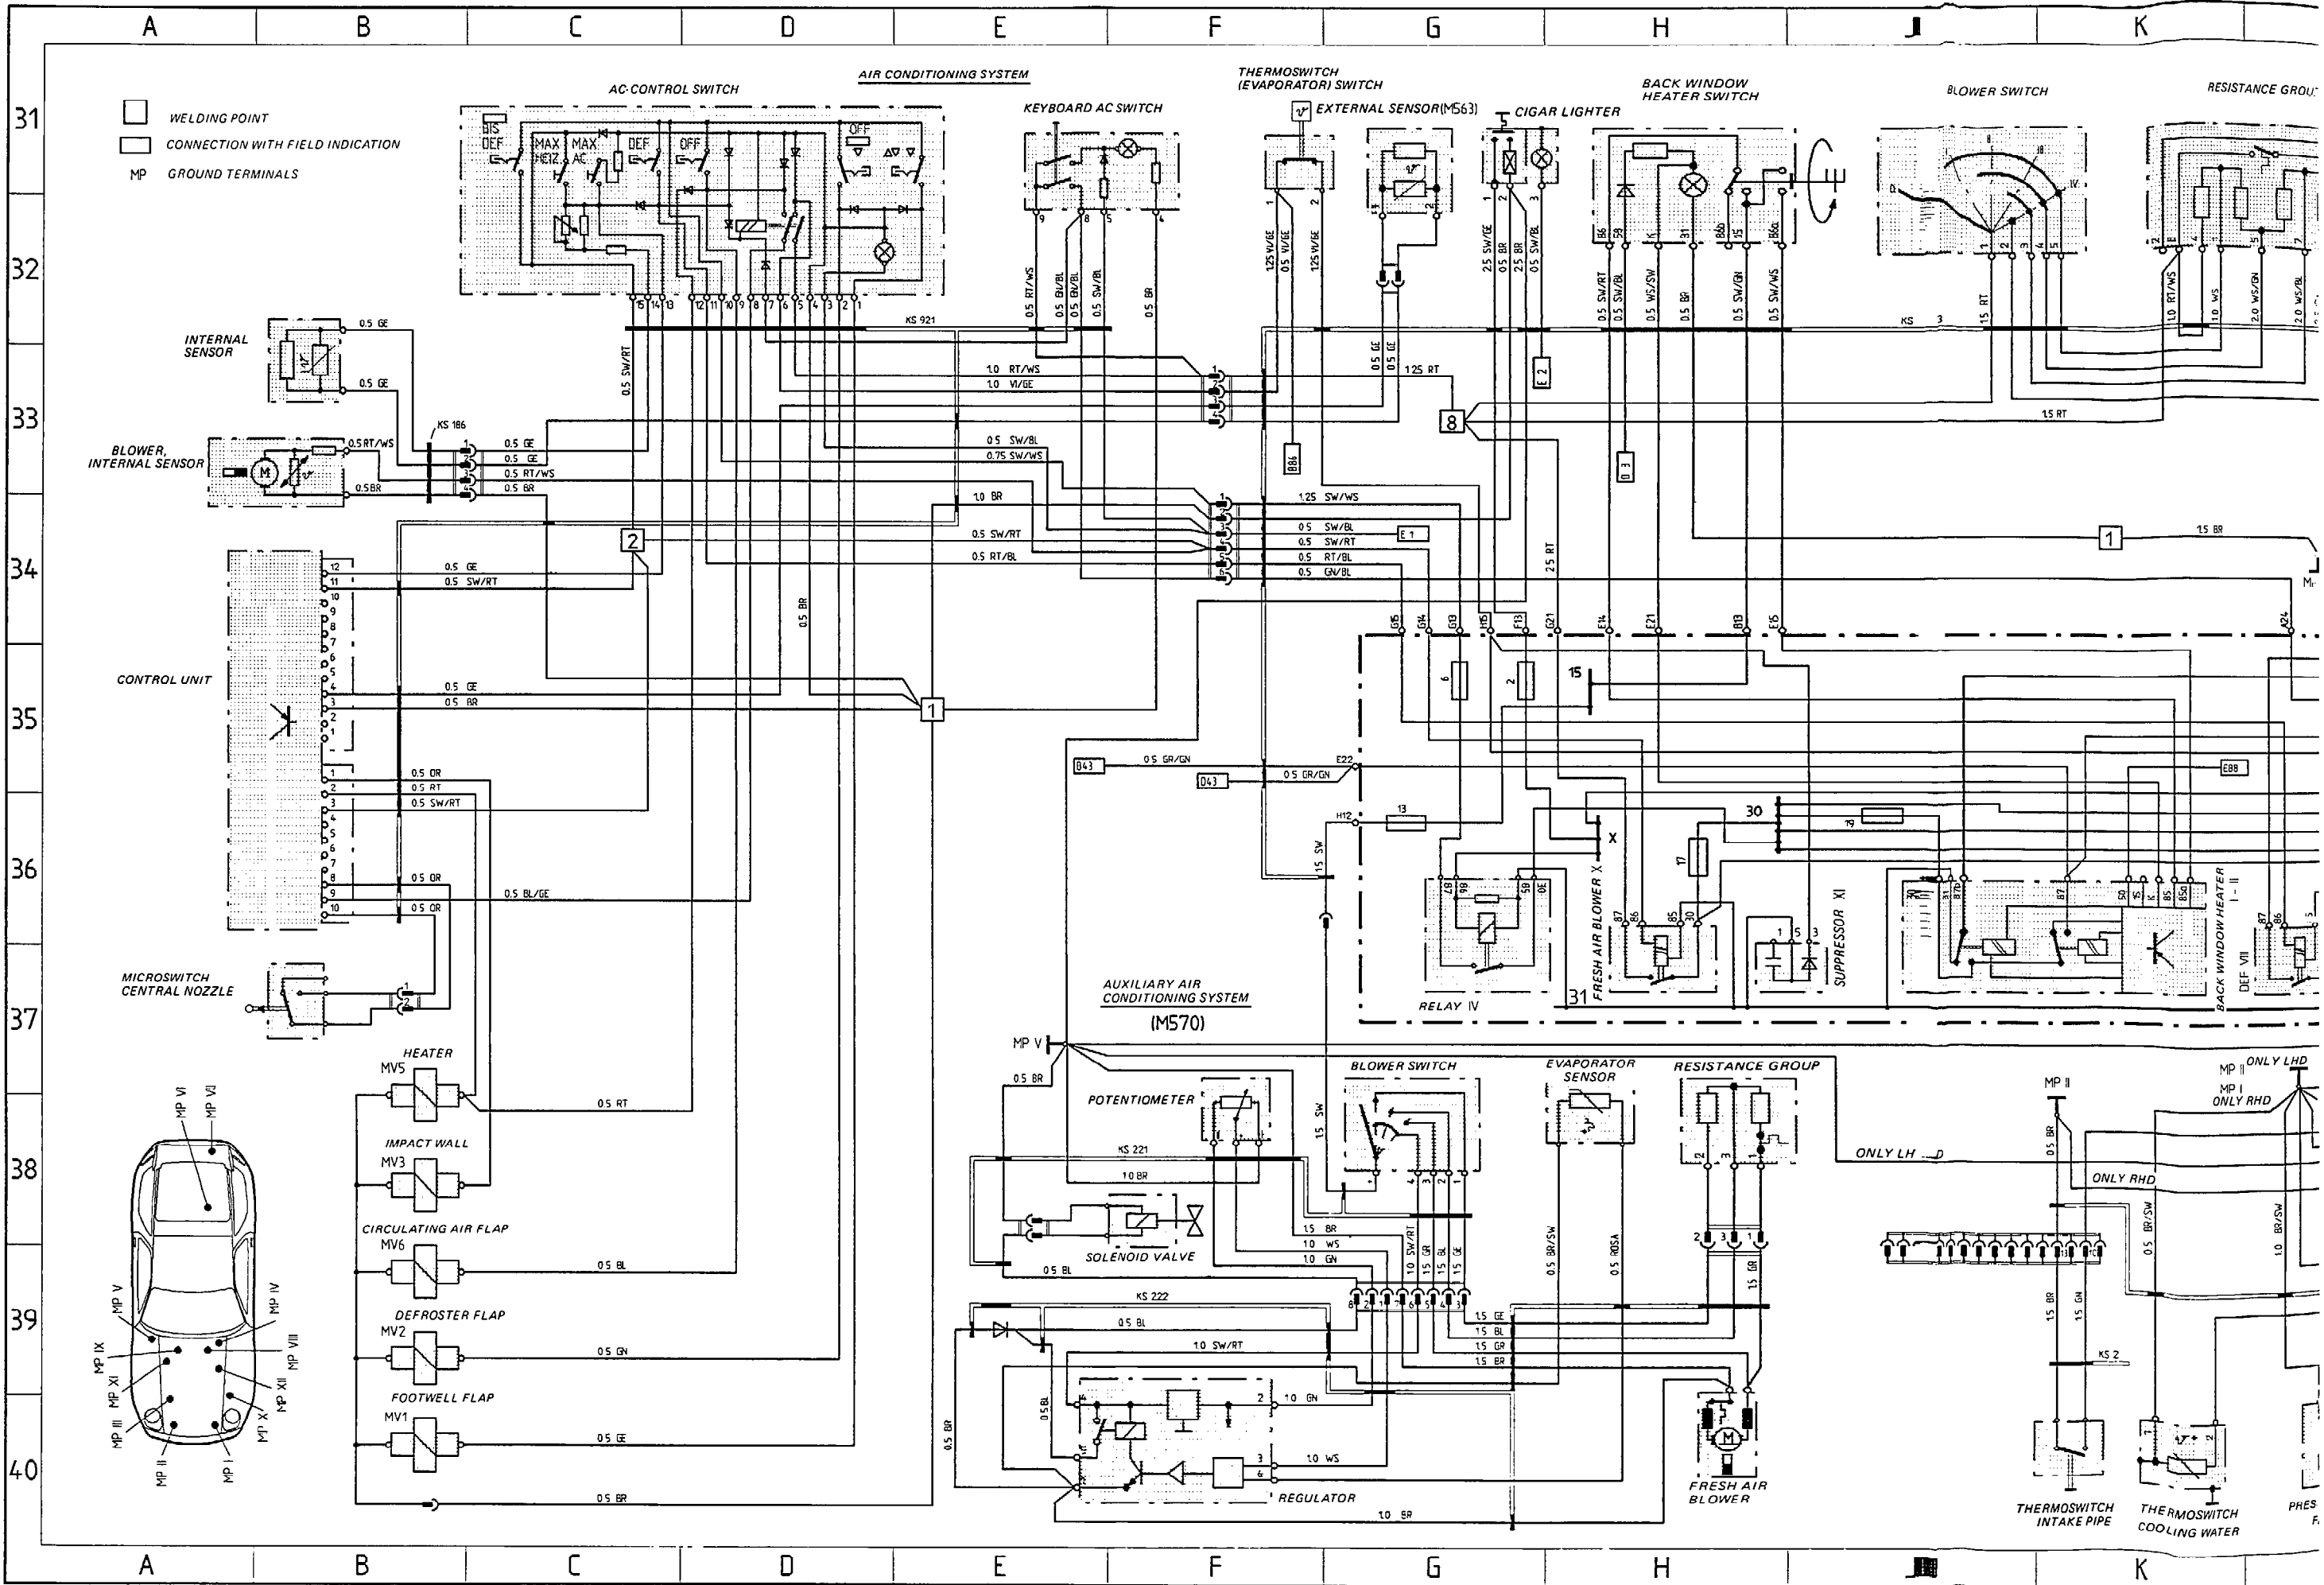

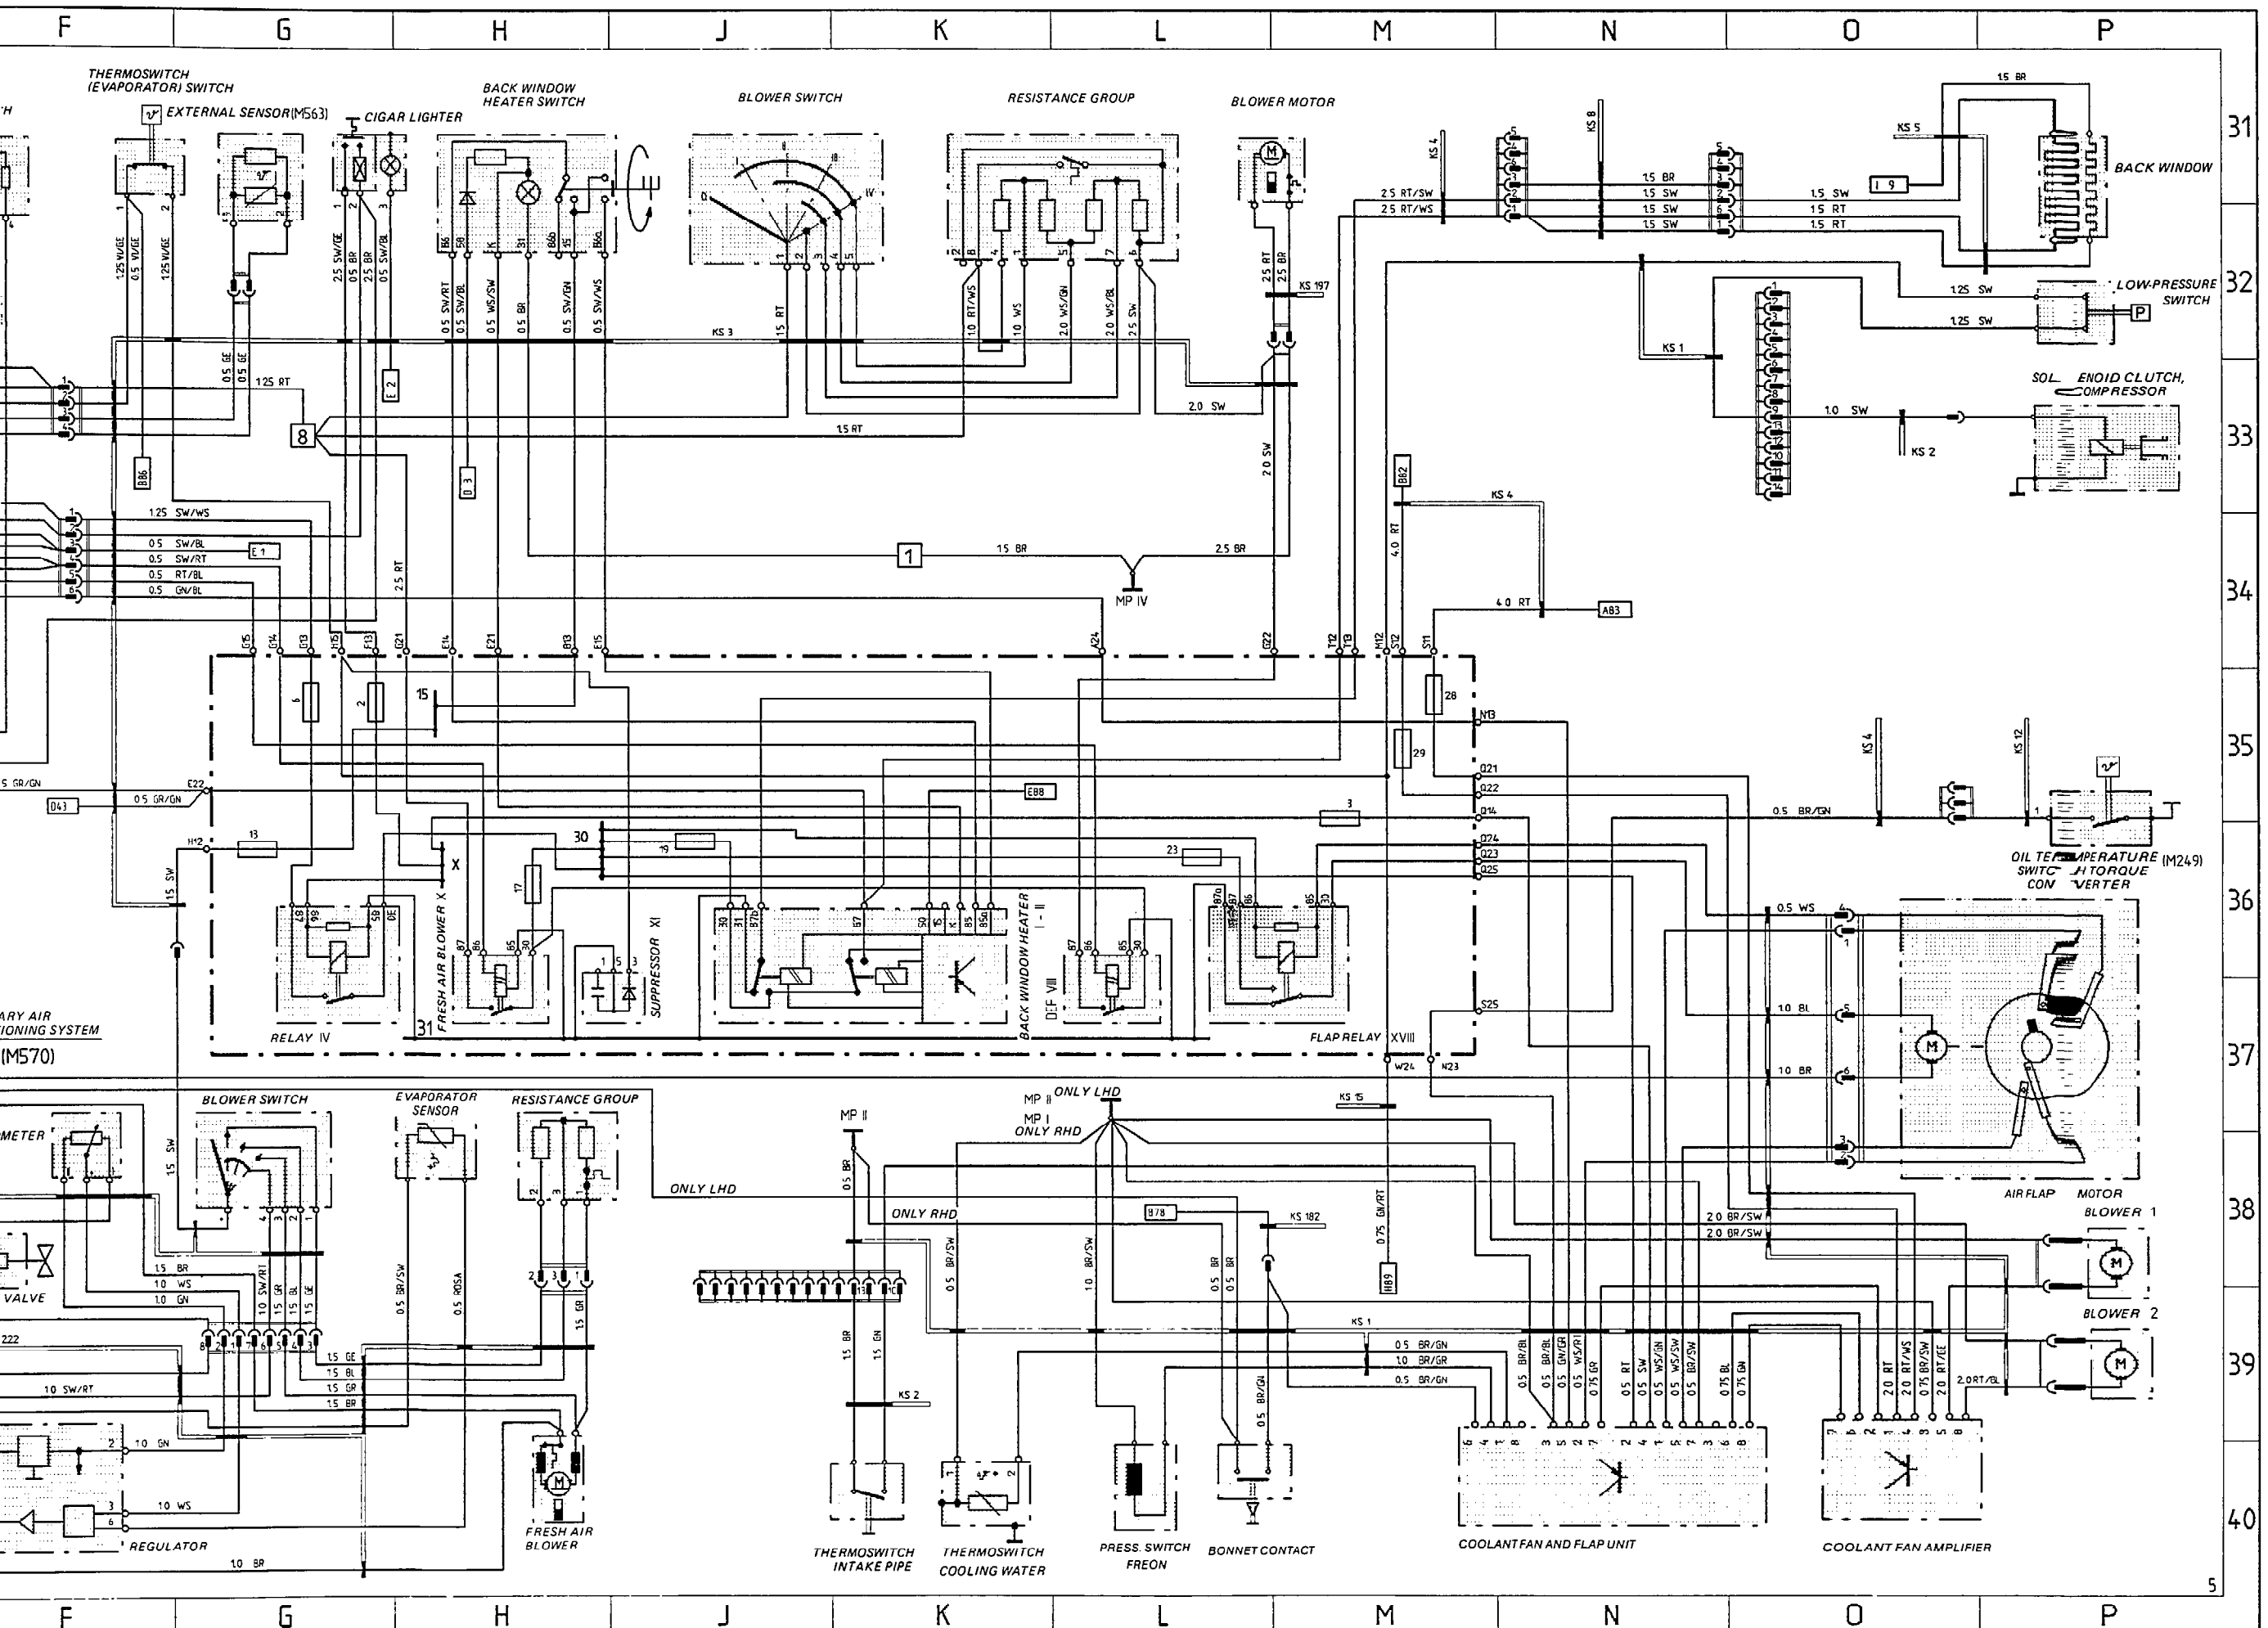



Wiring Diagram Type 928 S
Model 87 page 6

MIRROR, SEAT ADJUSTMENT

Wiring Diagram Type 928 S Model 87 page 6

MIRROR, SEAT ADJUSTMENT

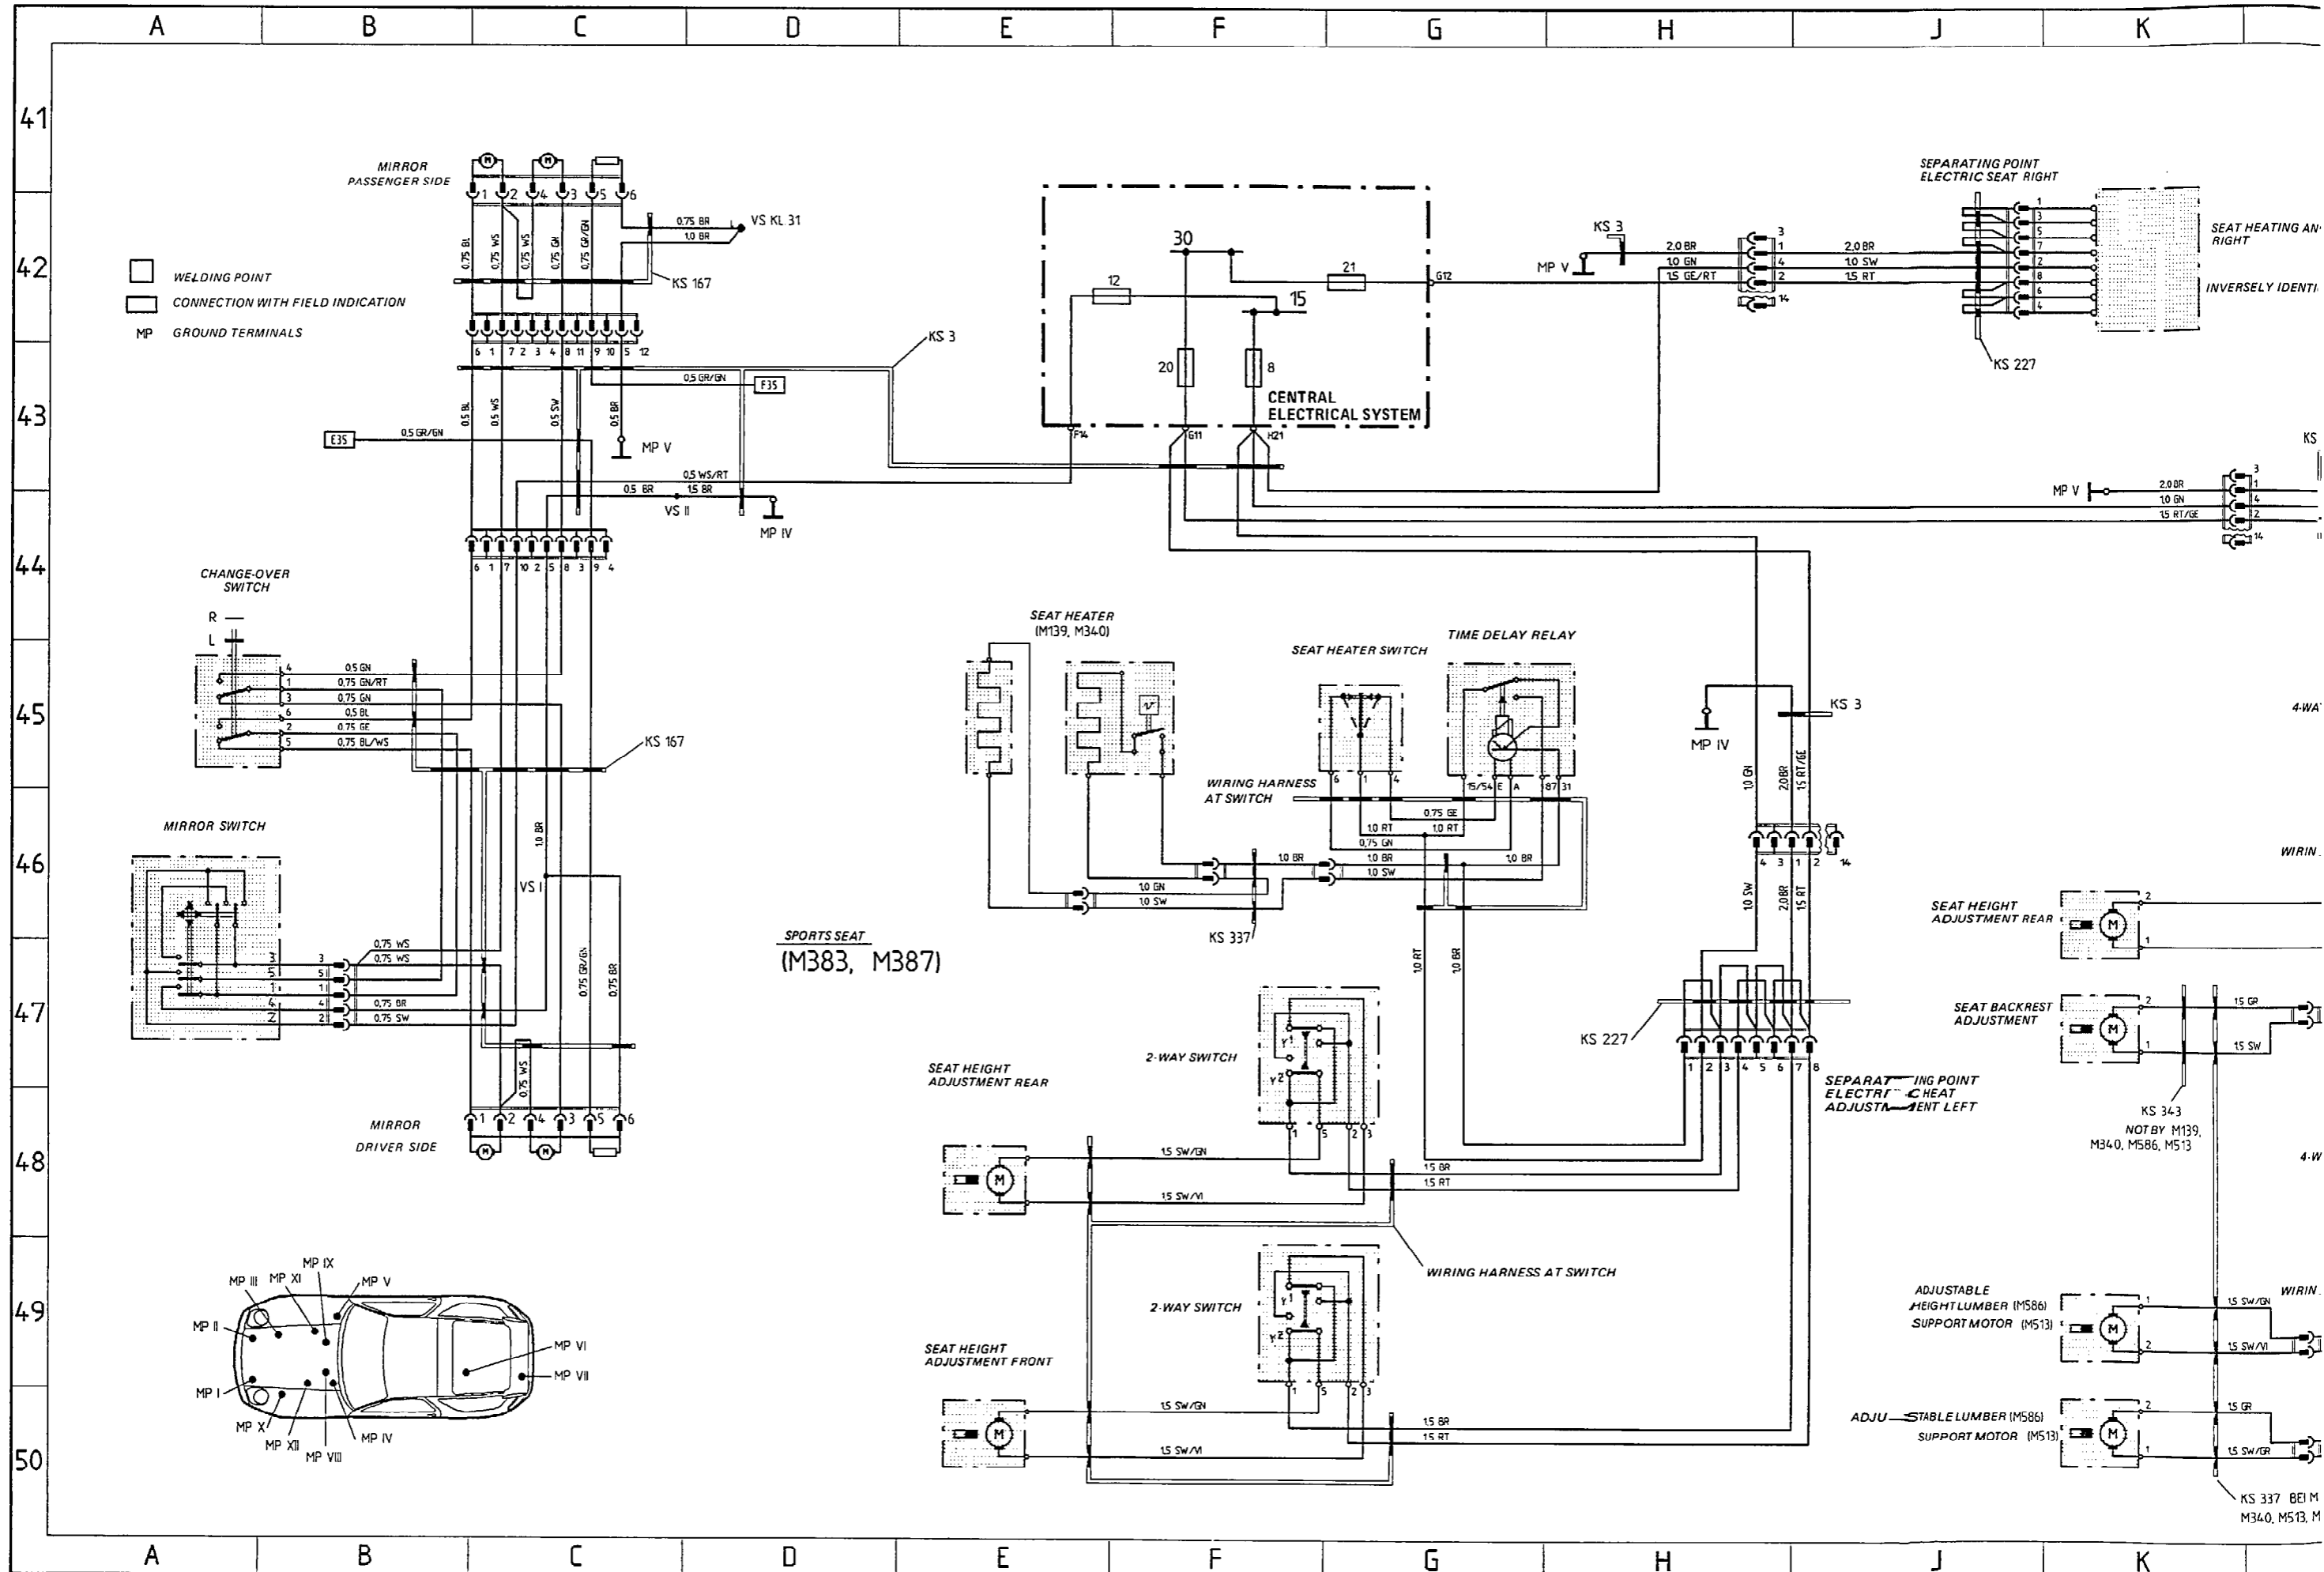

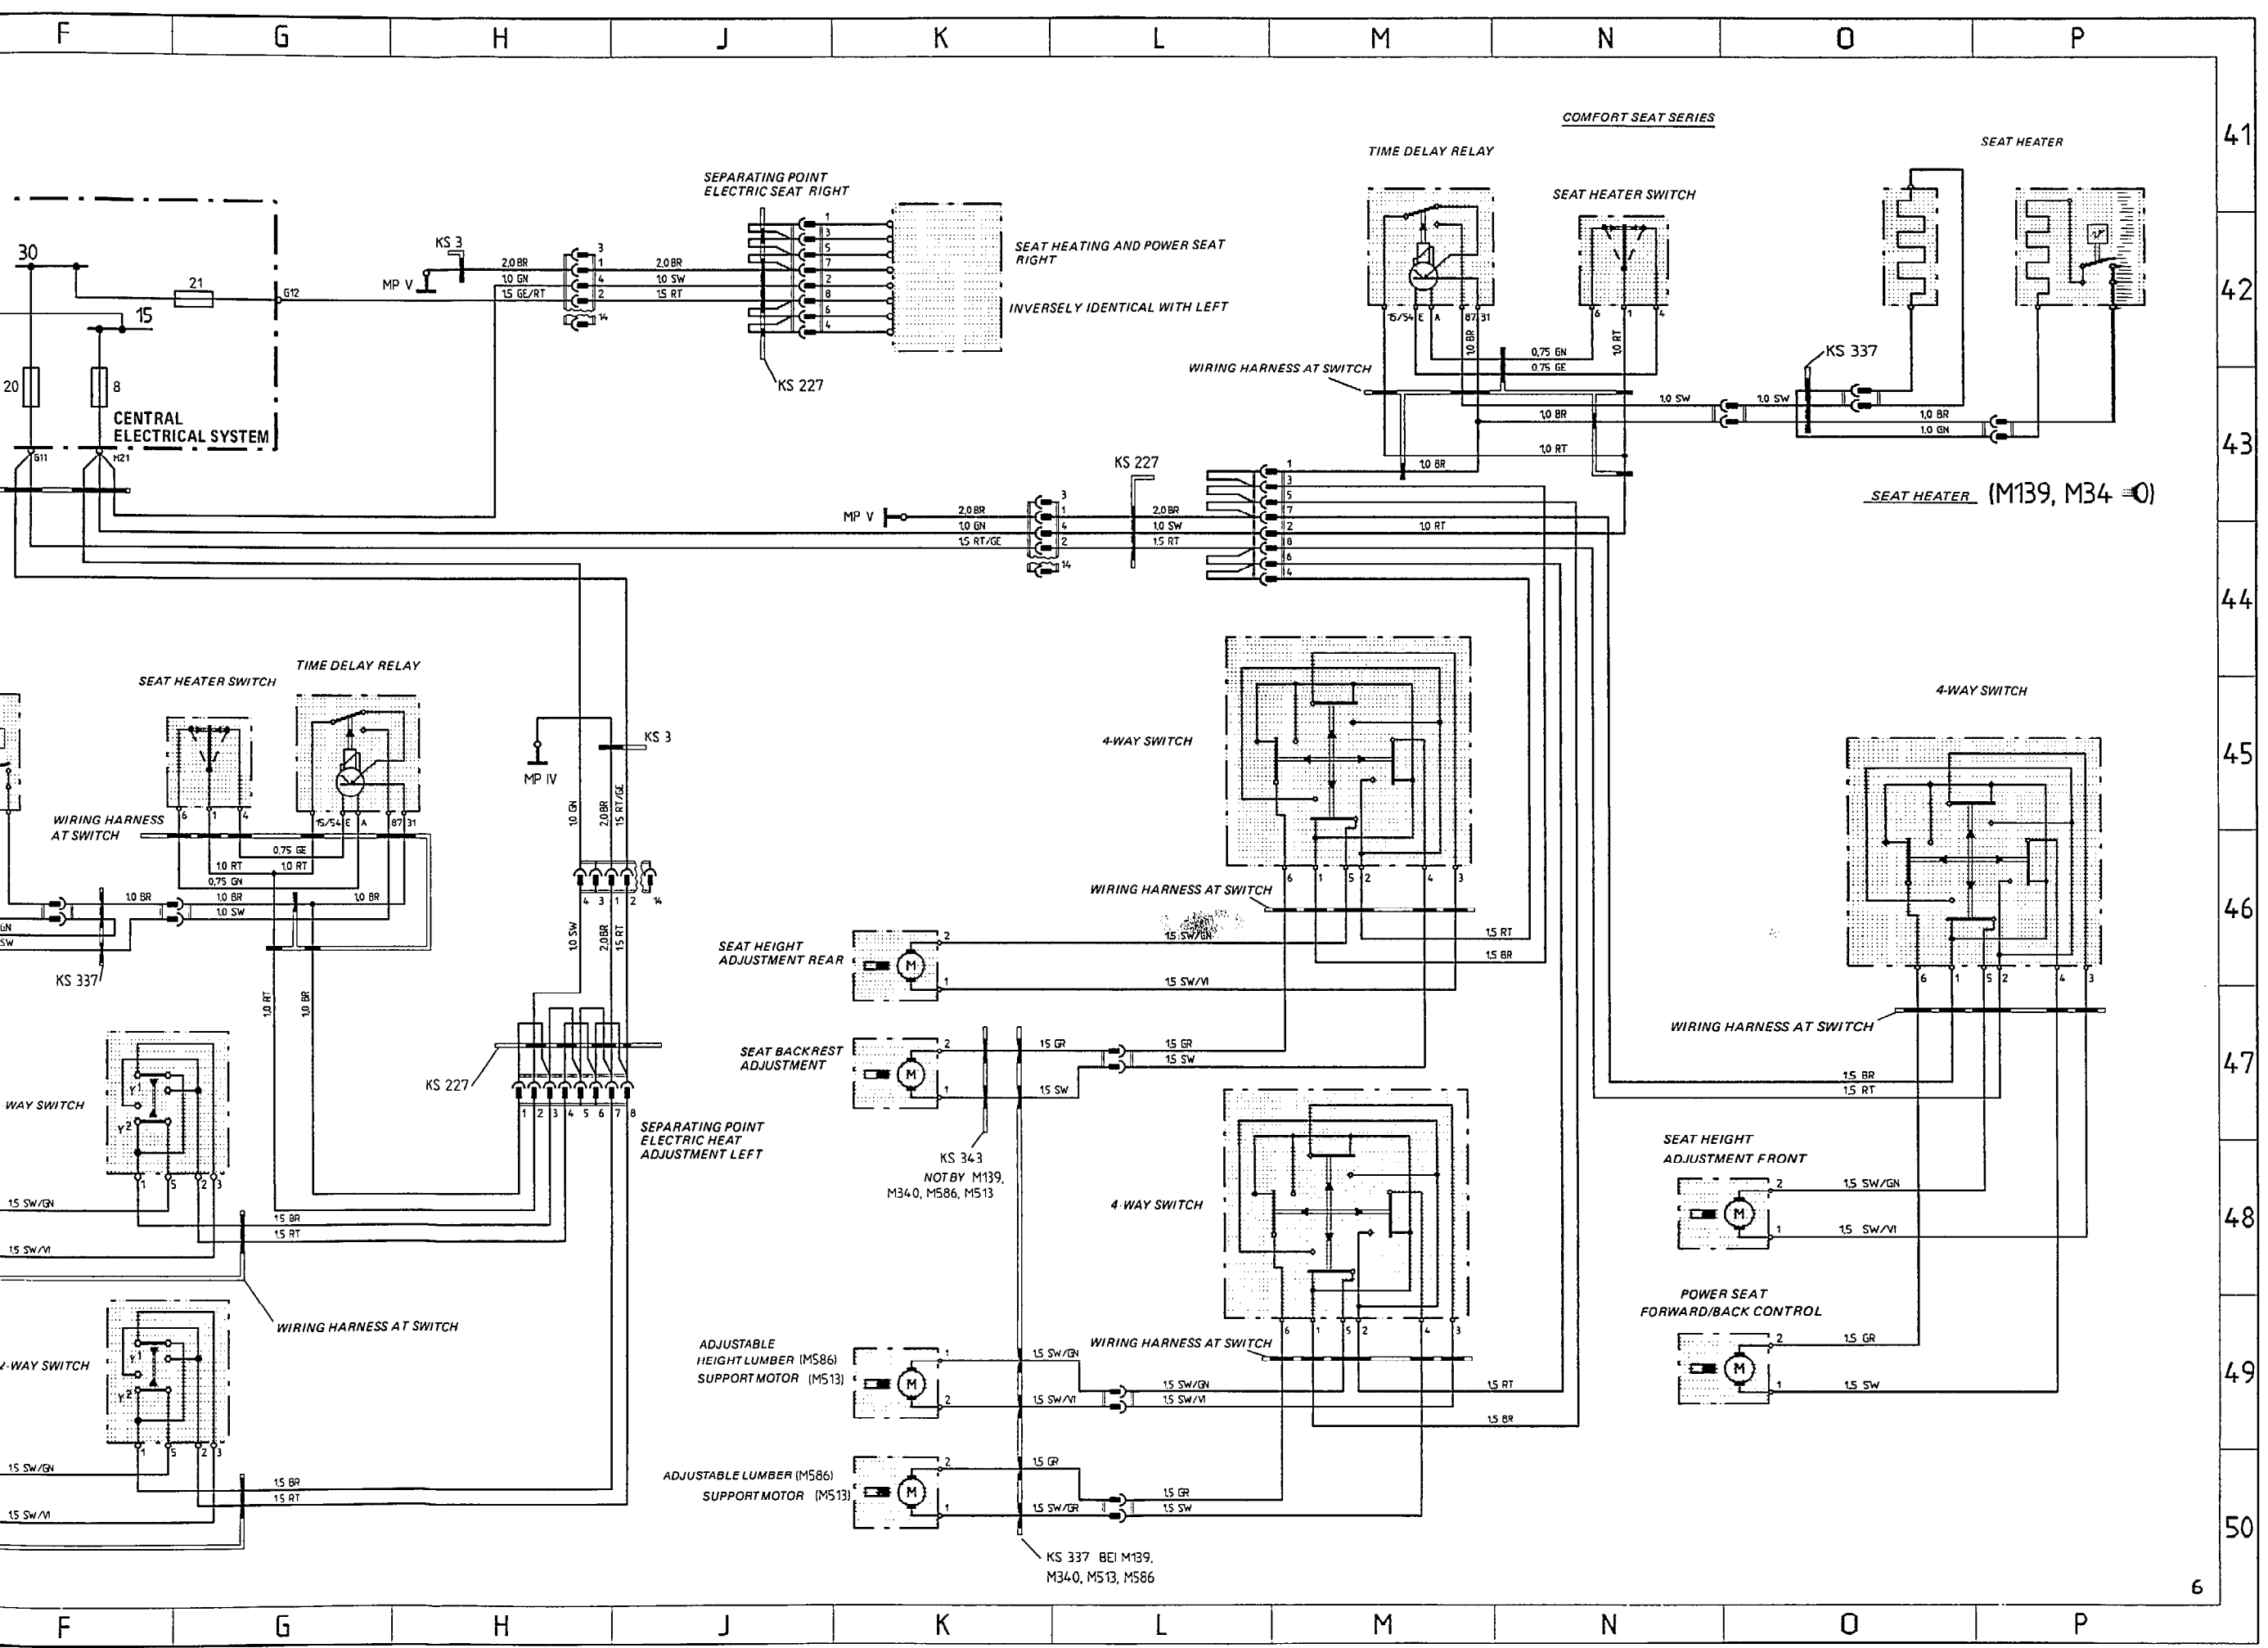



Wiring Diagram Type 928 S Model 87 page 7

SEAT- AND MIRROR MEMORY

Wiring Diagram Type 928 S Model 87 page 7

SEAT-AND MIRROR MEMORY

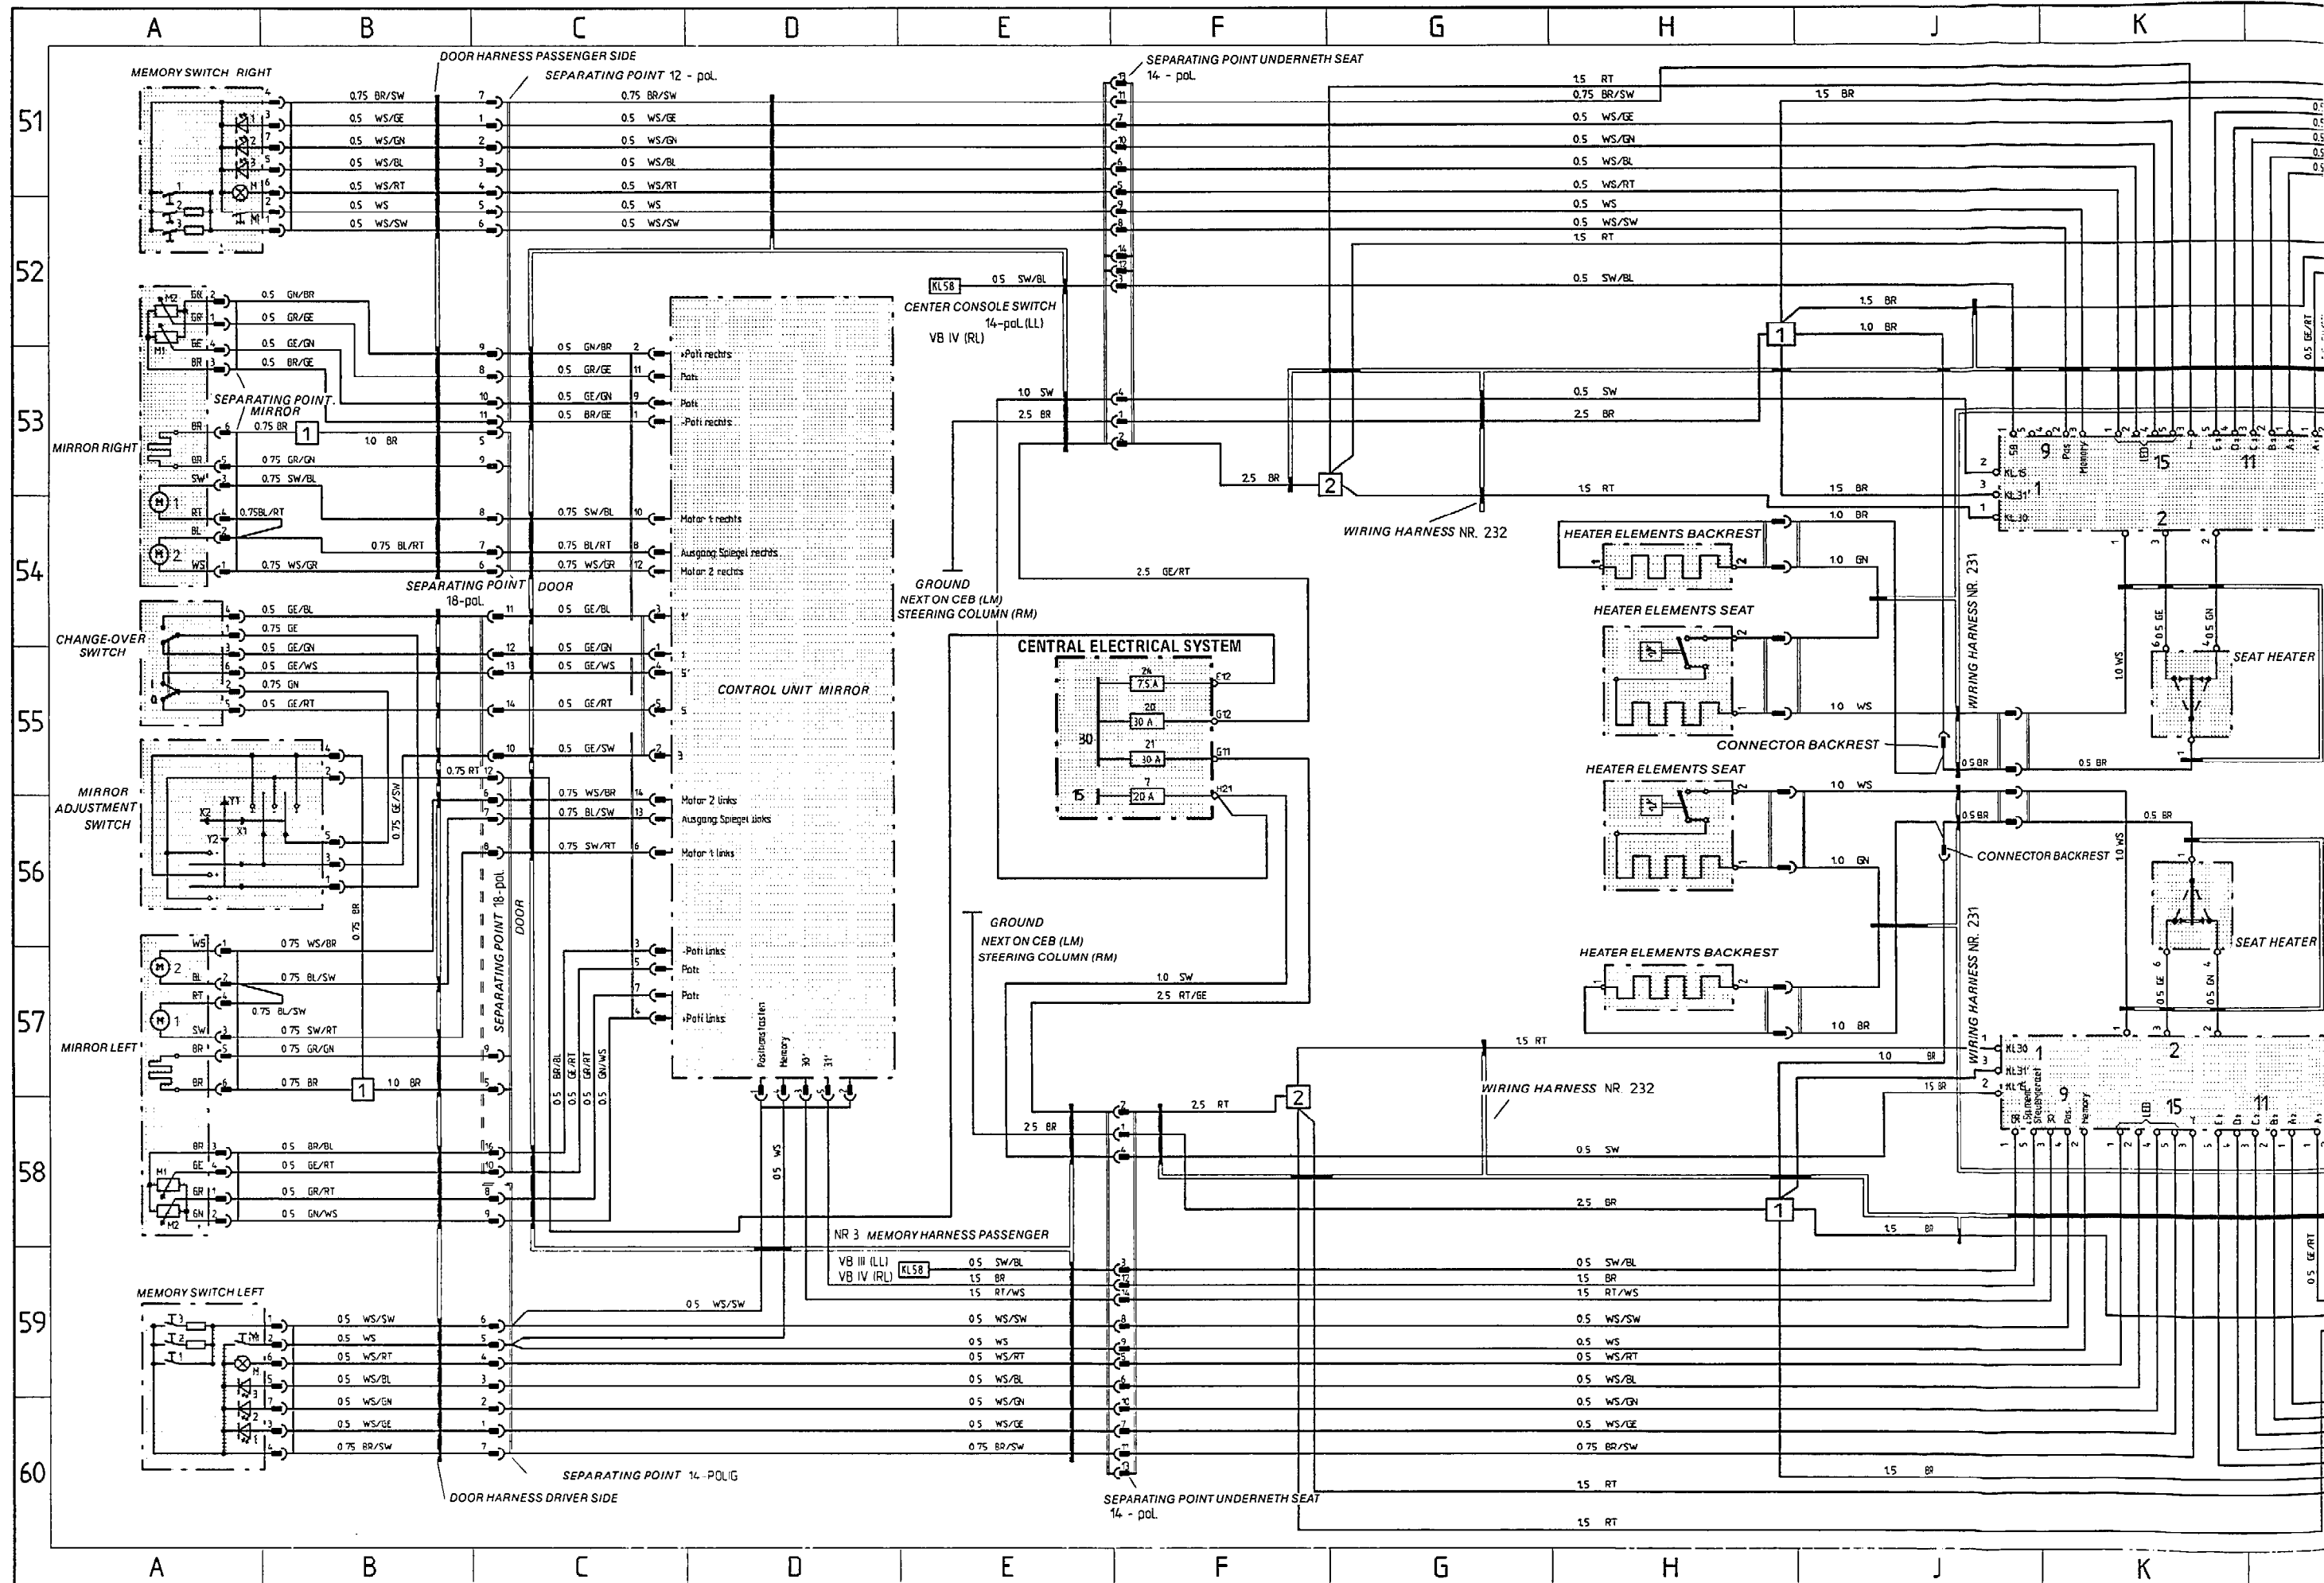


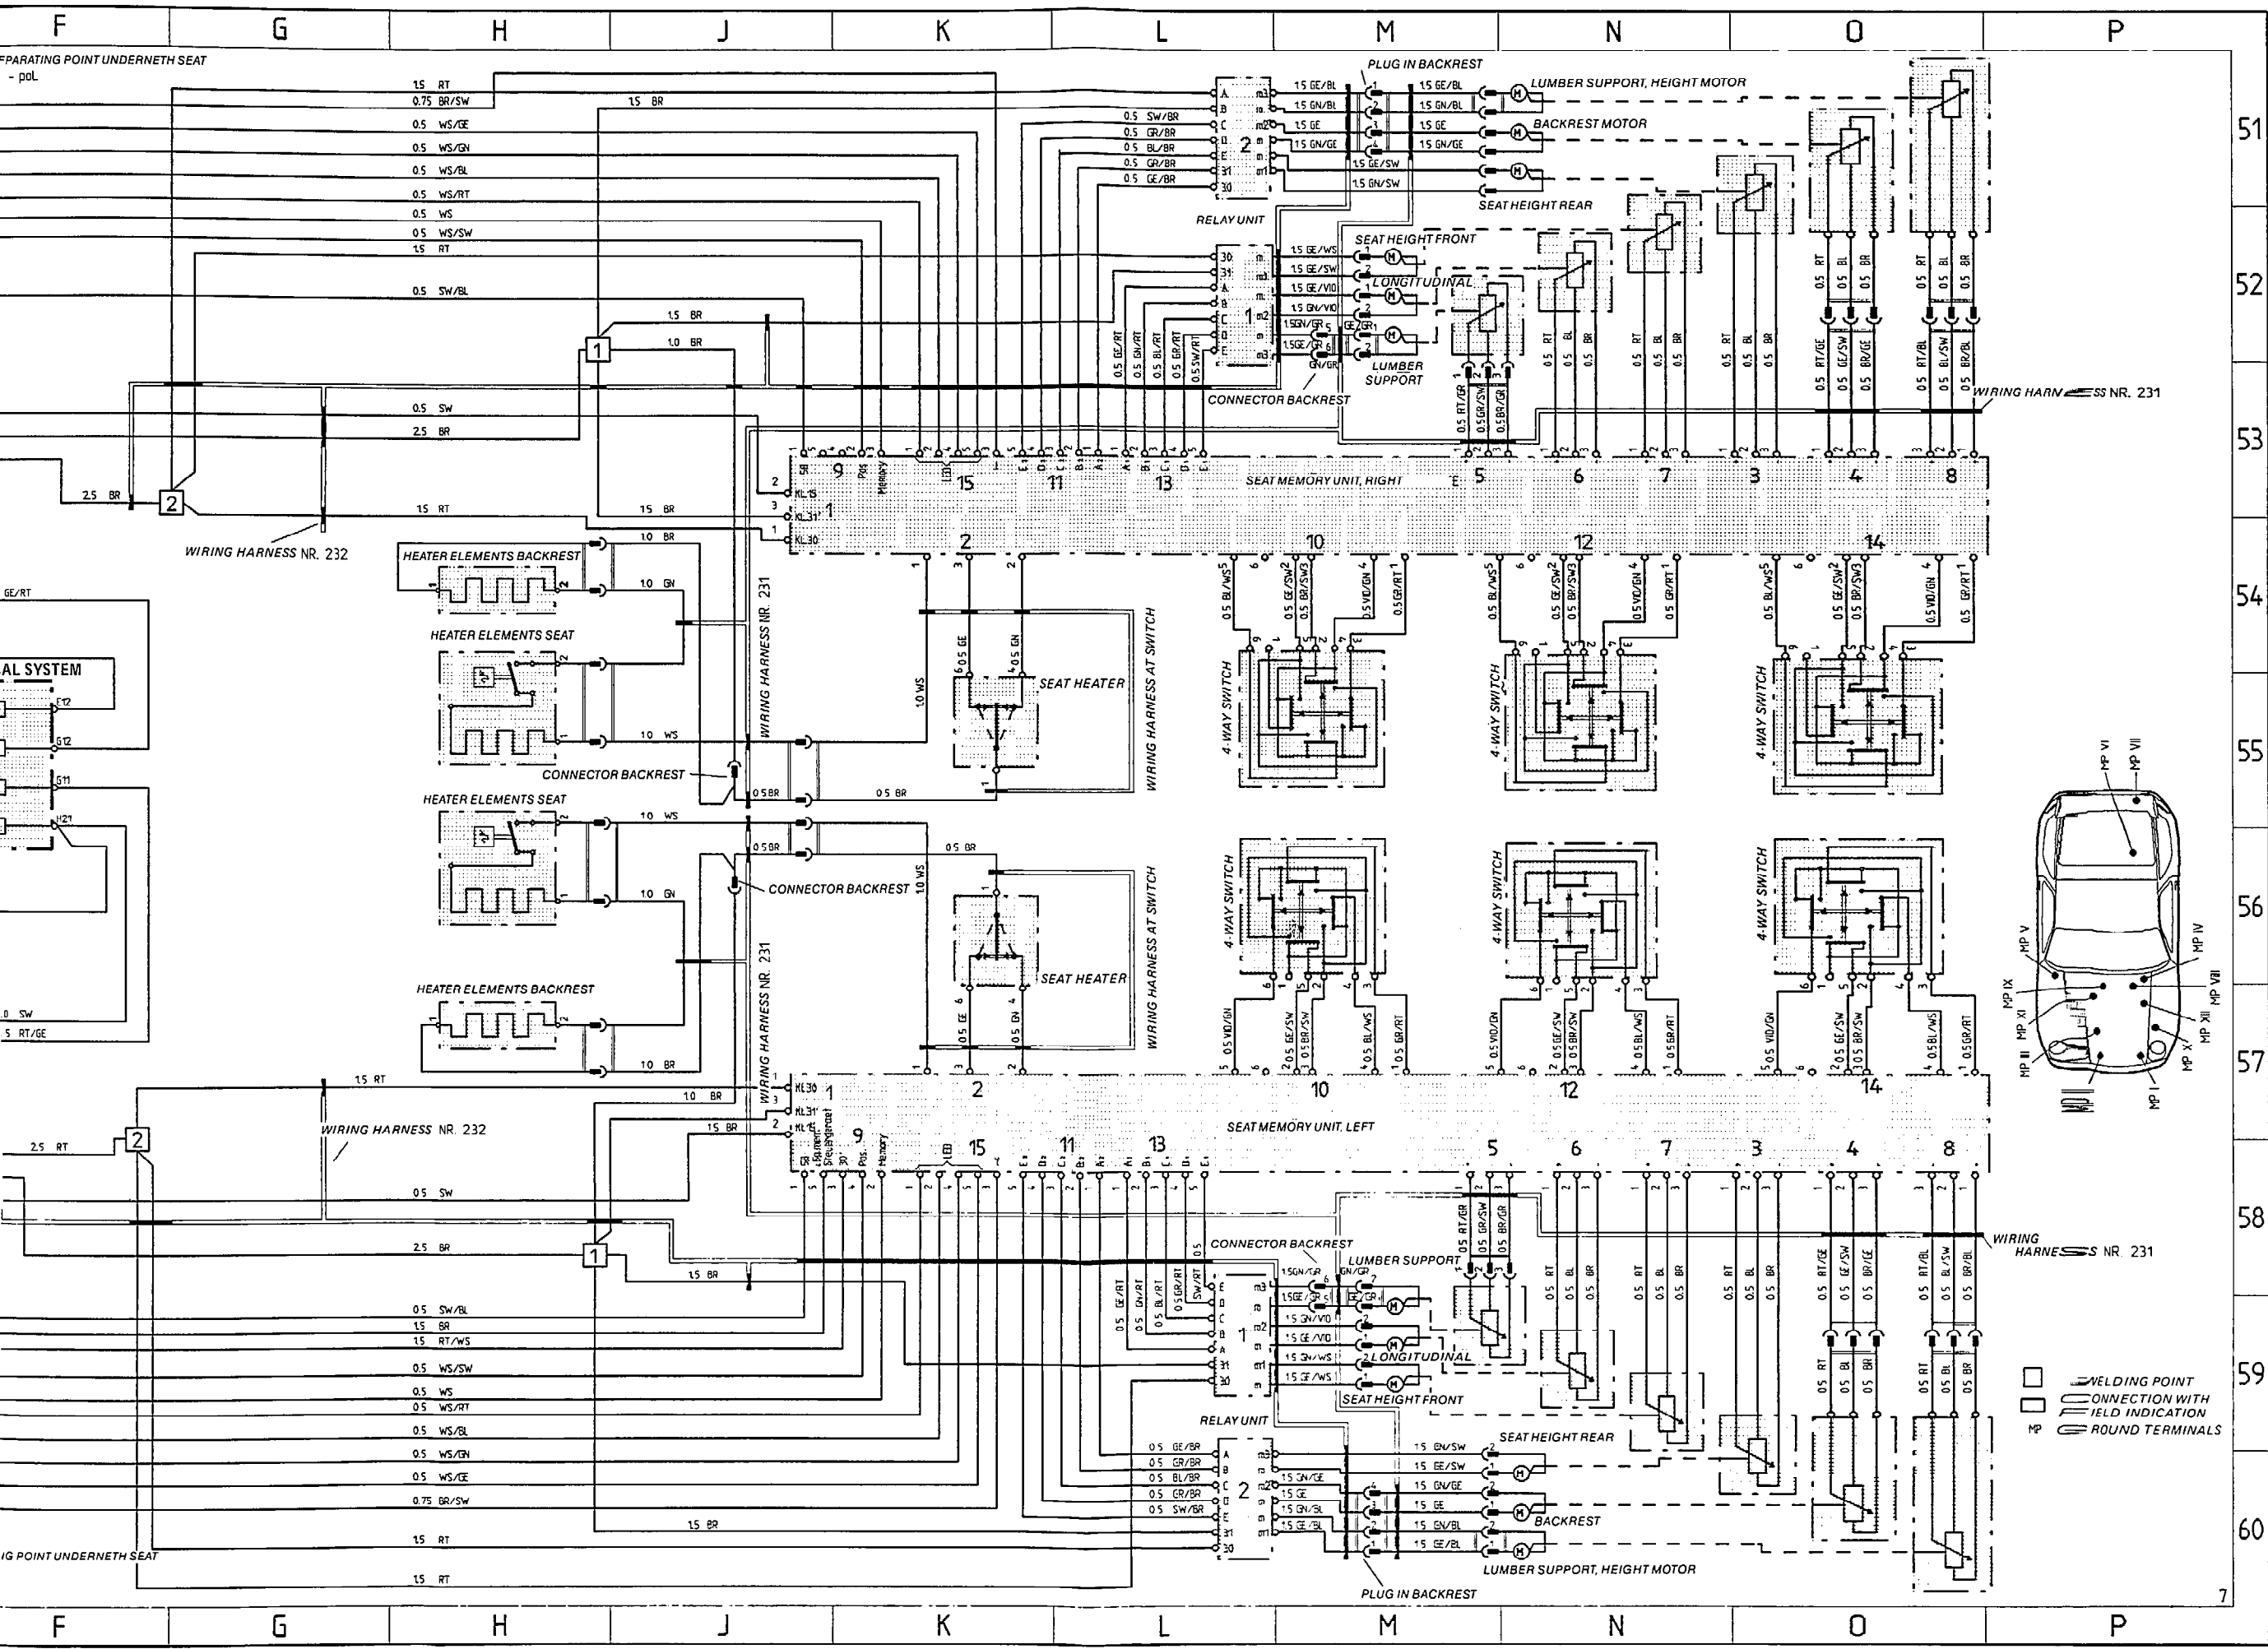


Wiring Diagram Type 928 S
Model 87 page 8

RADIO

RADIO

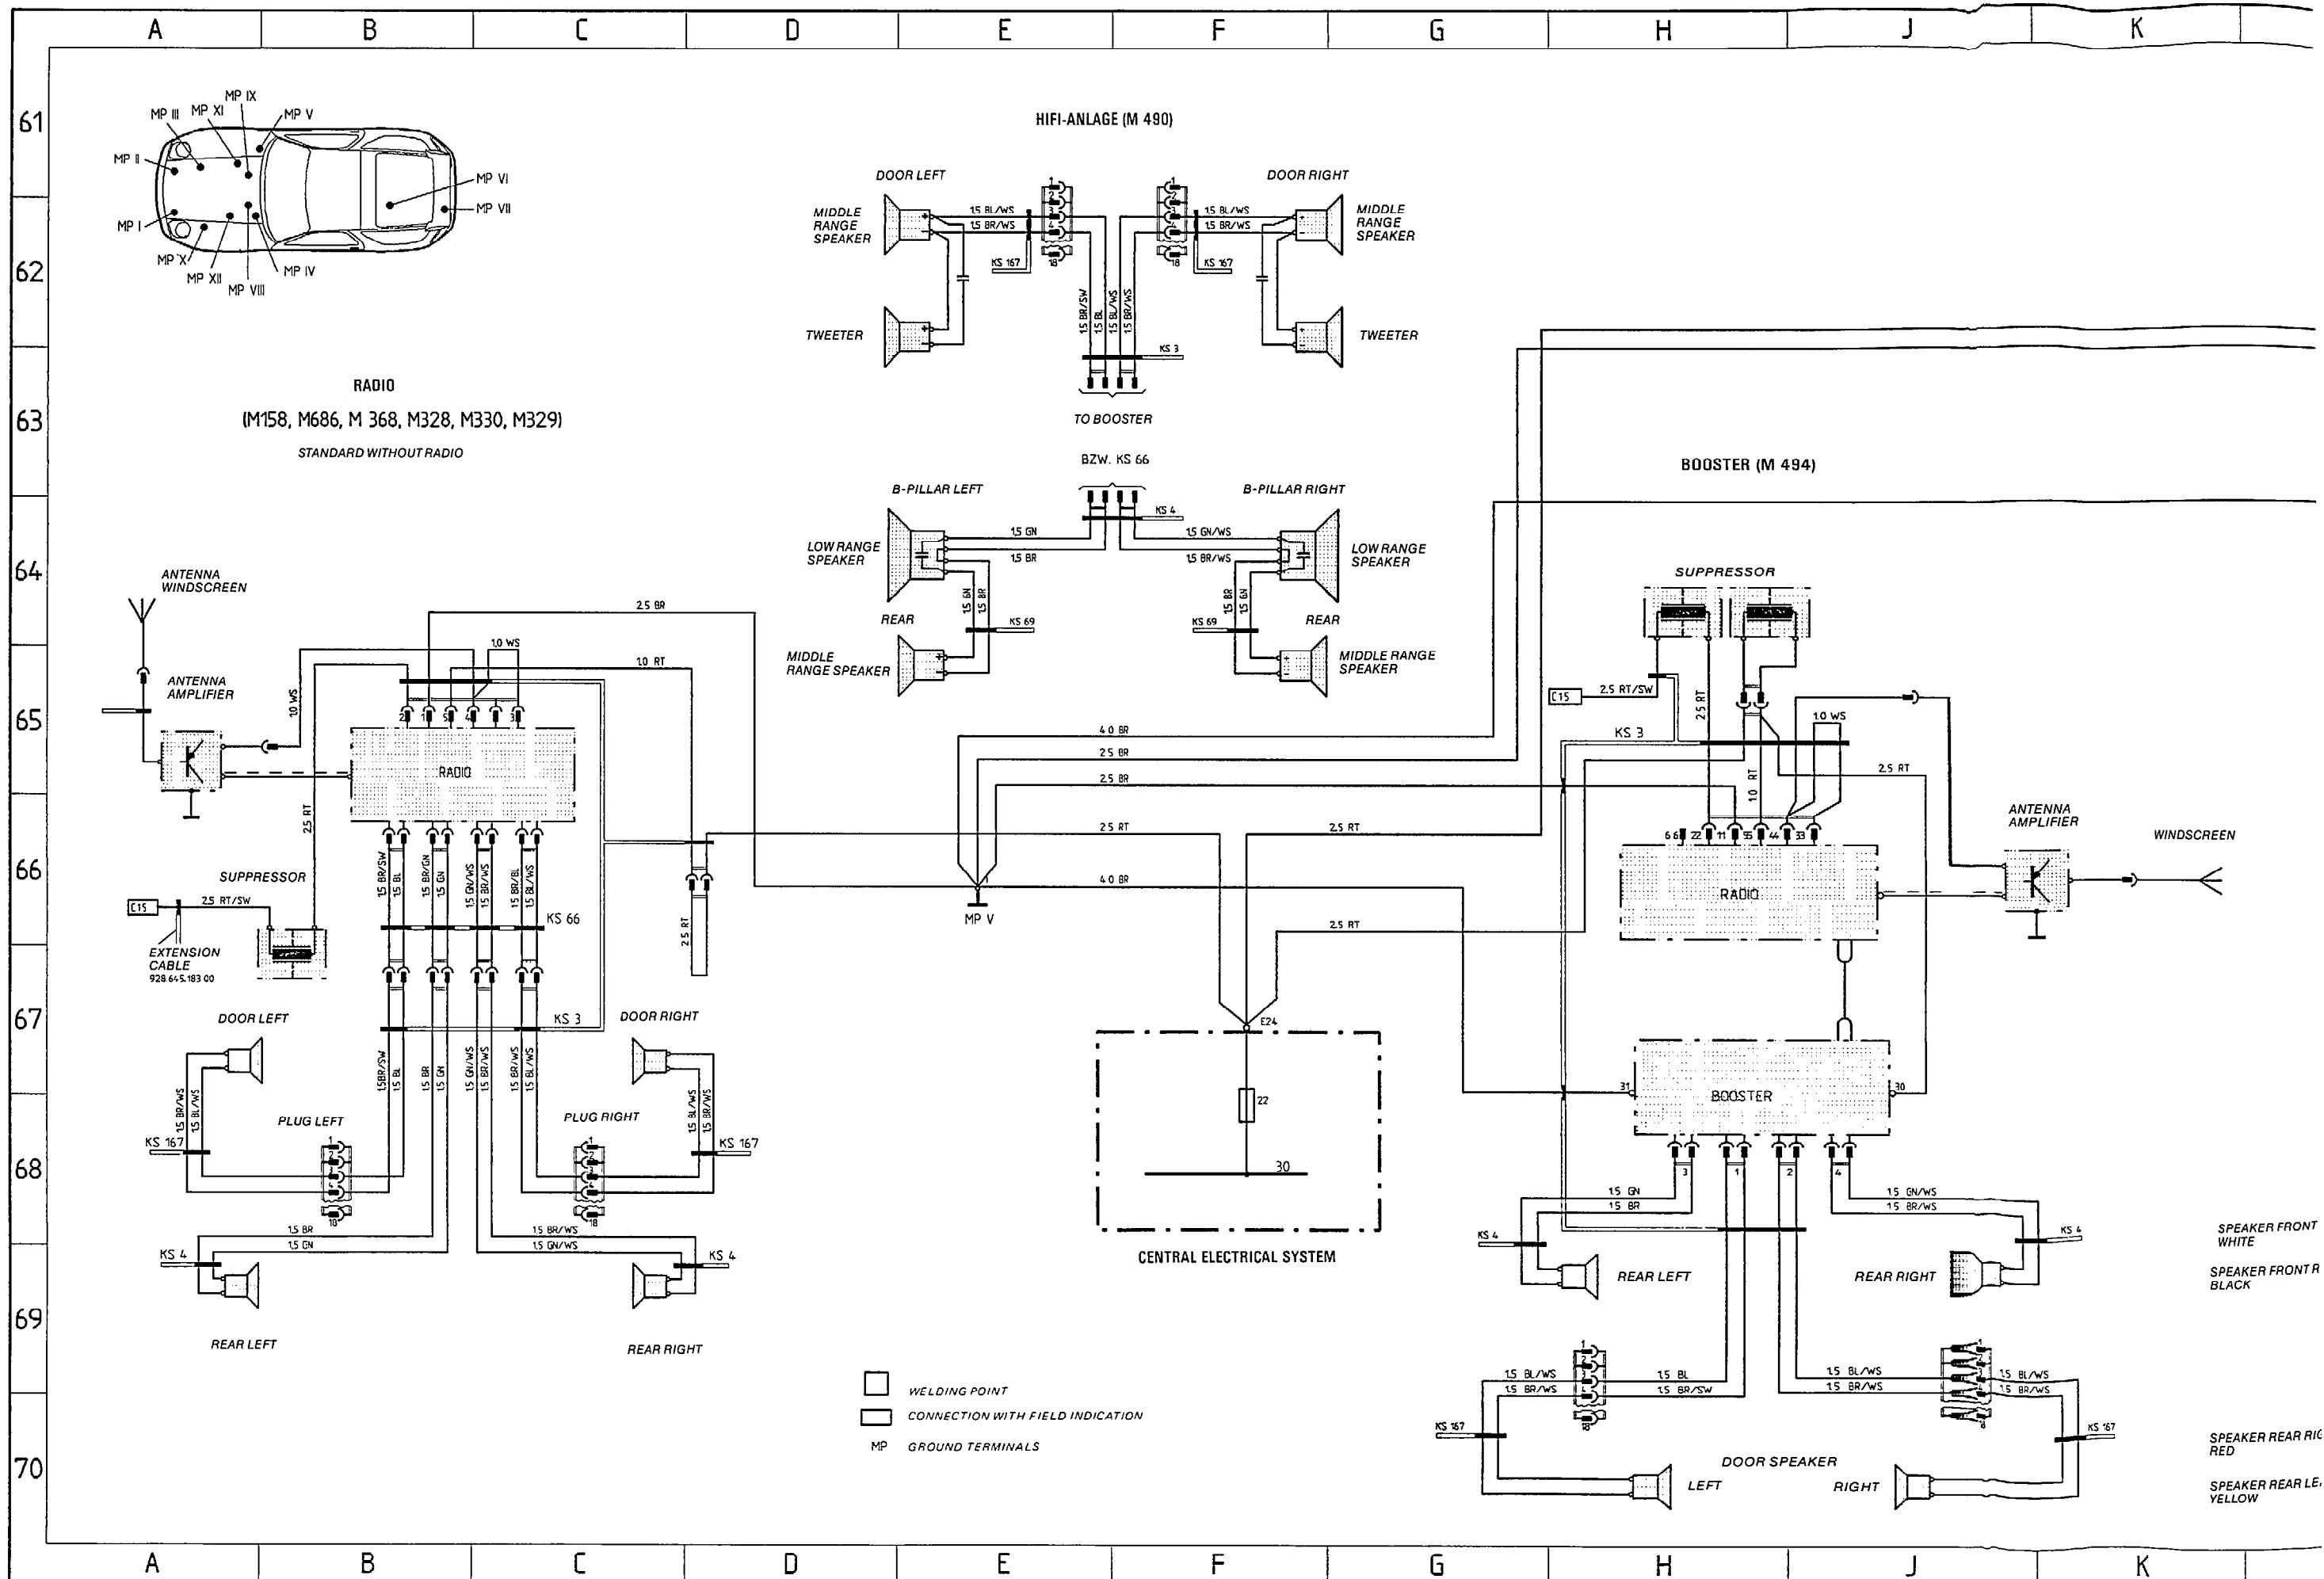

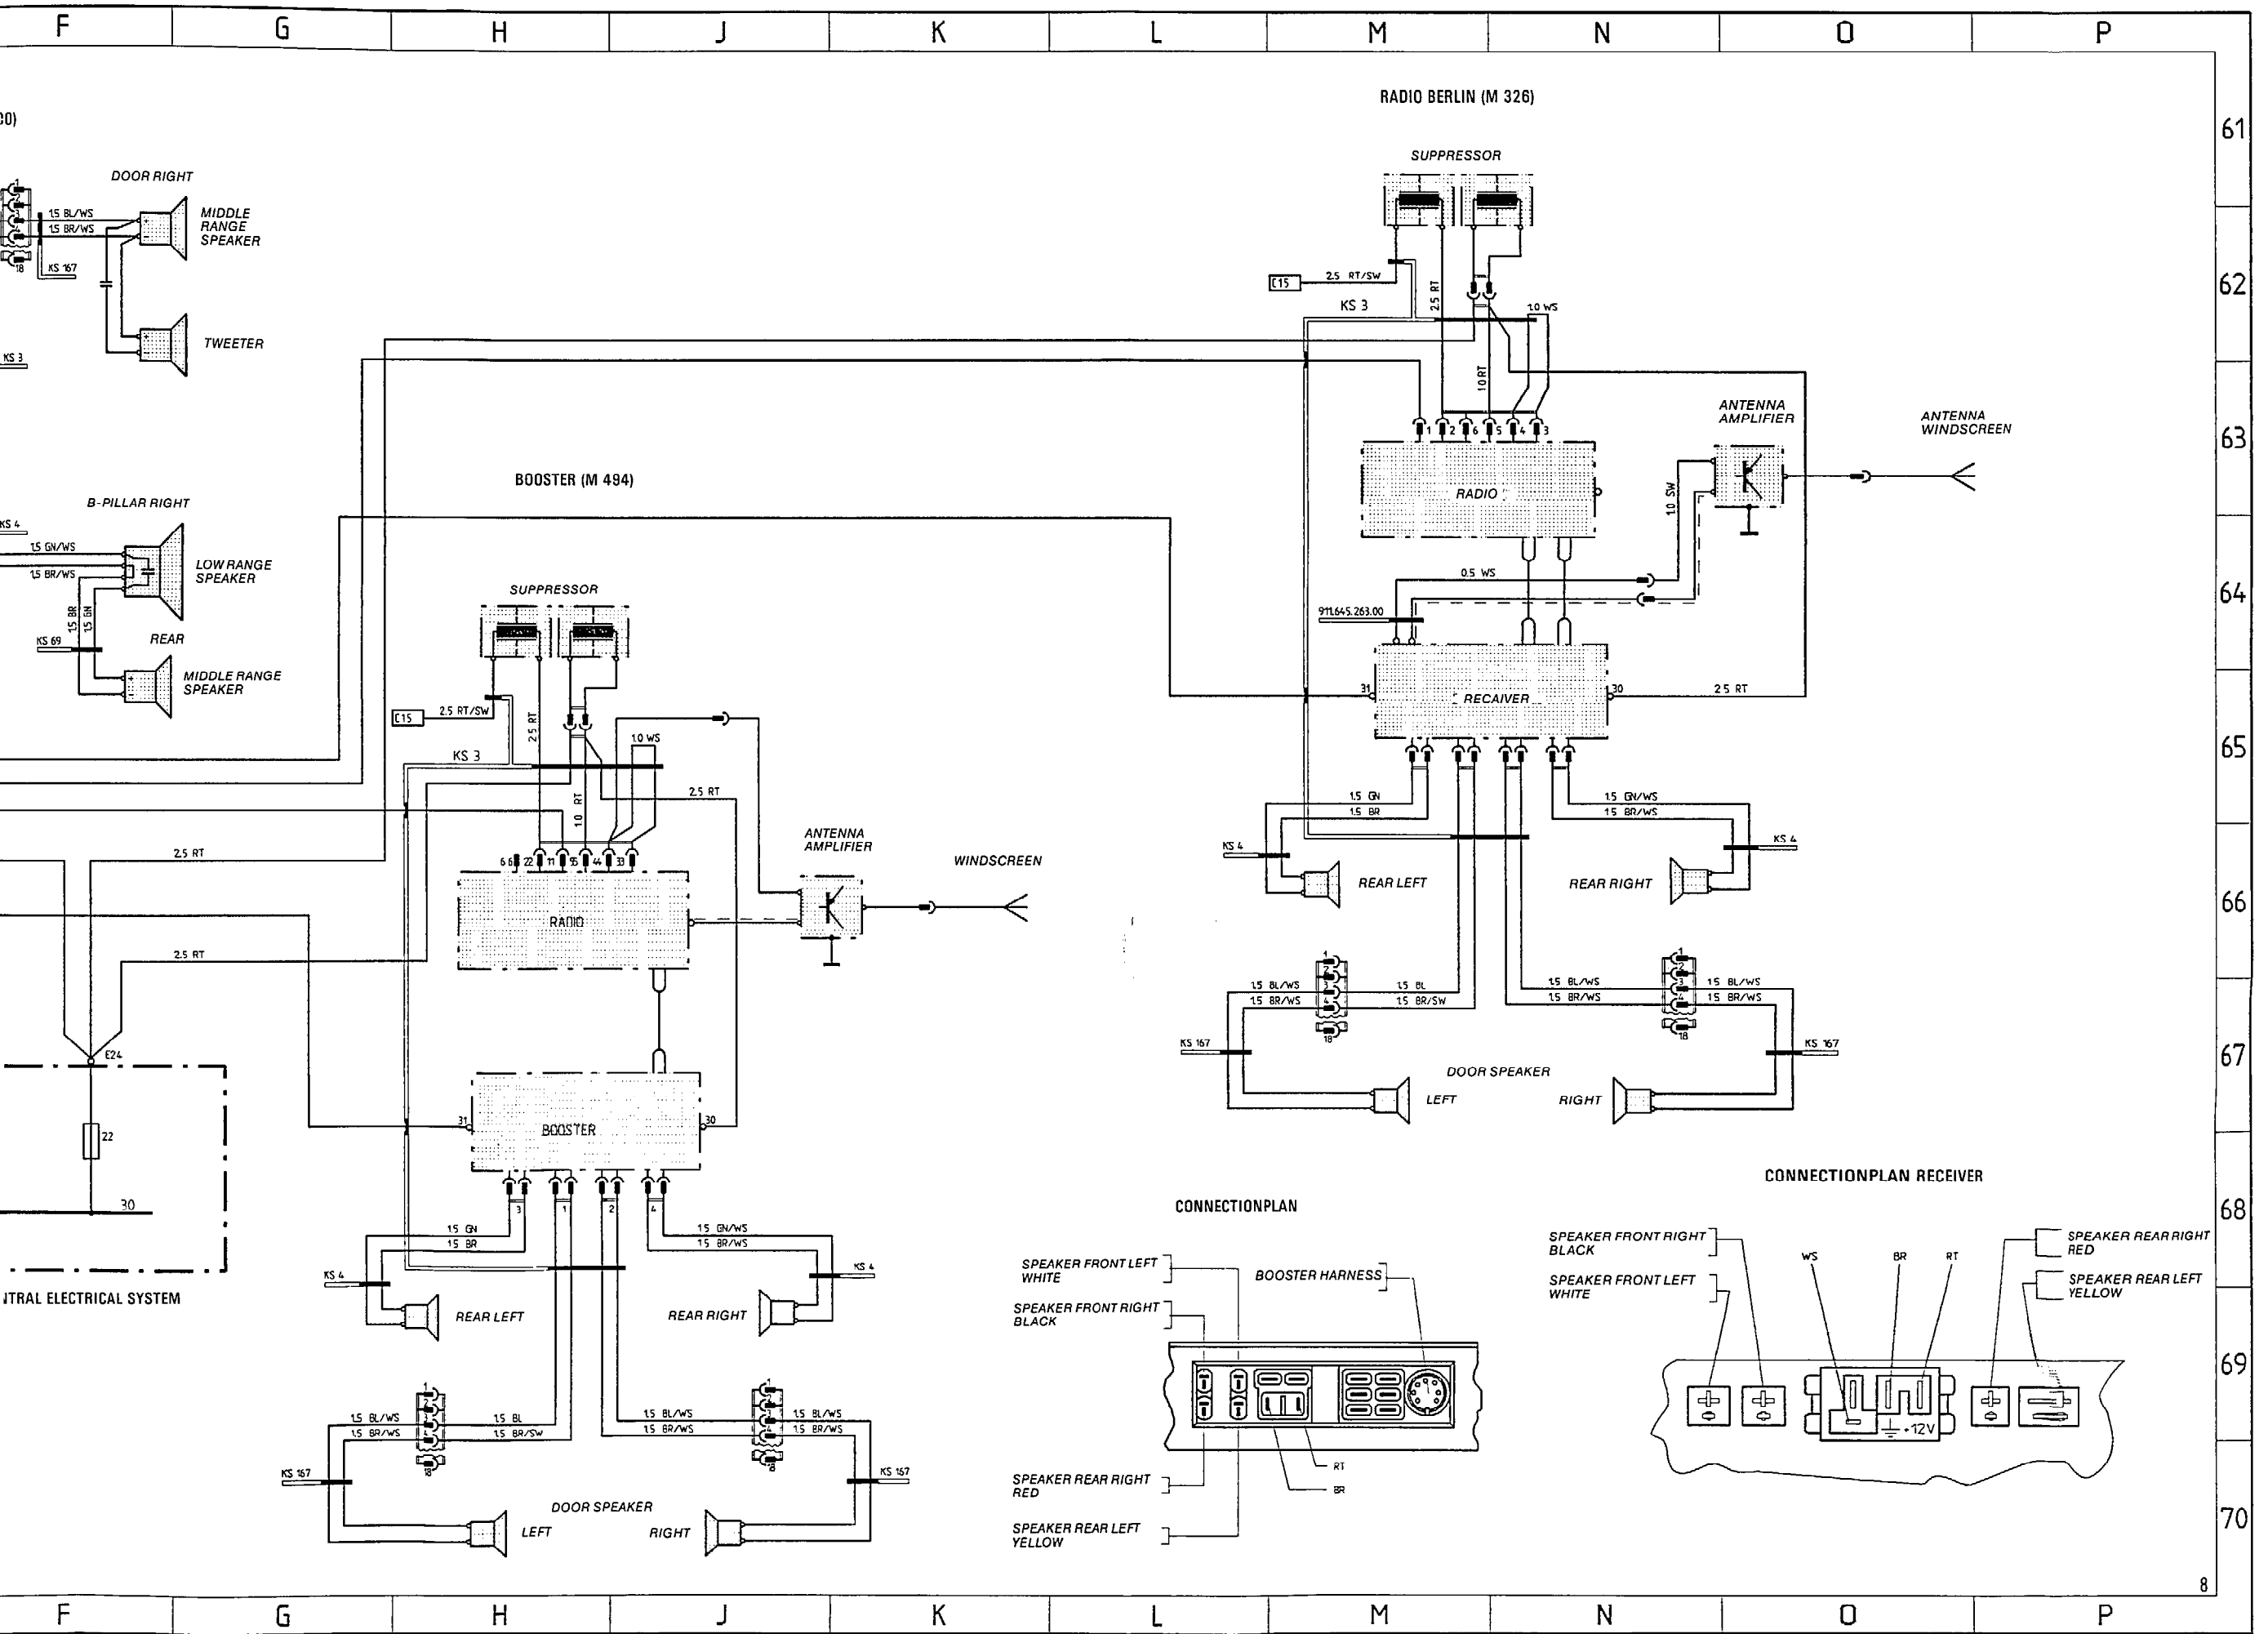



Wiring Diagram Type 928 S Model 87 page 9

ABS, ALARM SYSTEM, TRAILER COUPLING

Wiring Diagram Type 928S Model 87 page 9

ABS, ALARM SYSTEM, TRAILER COUPLING

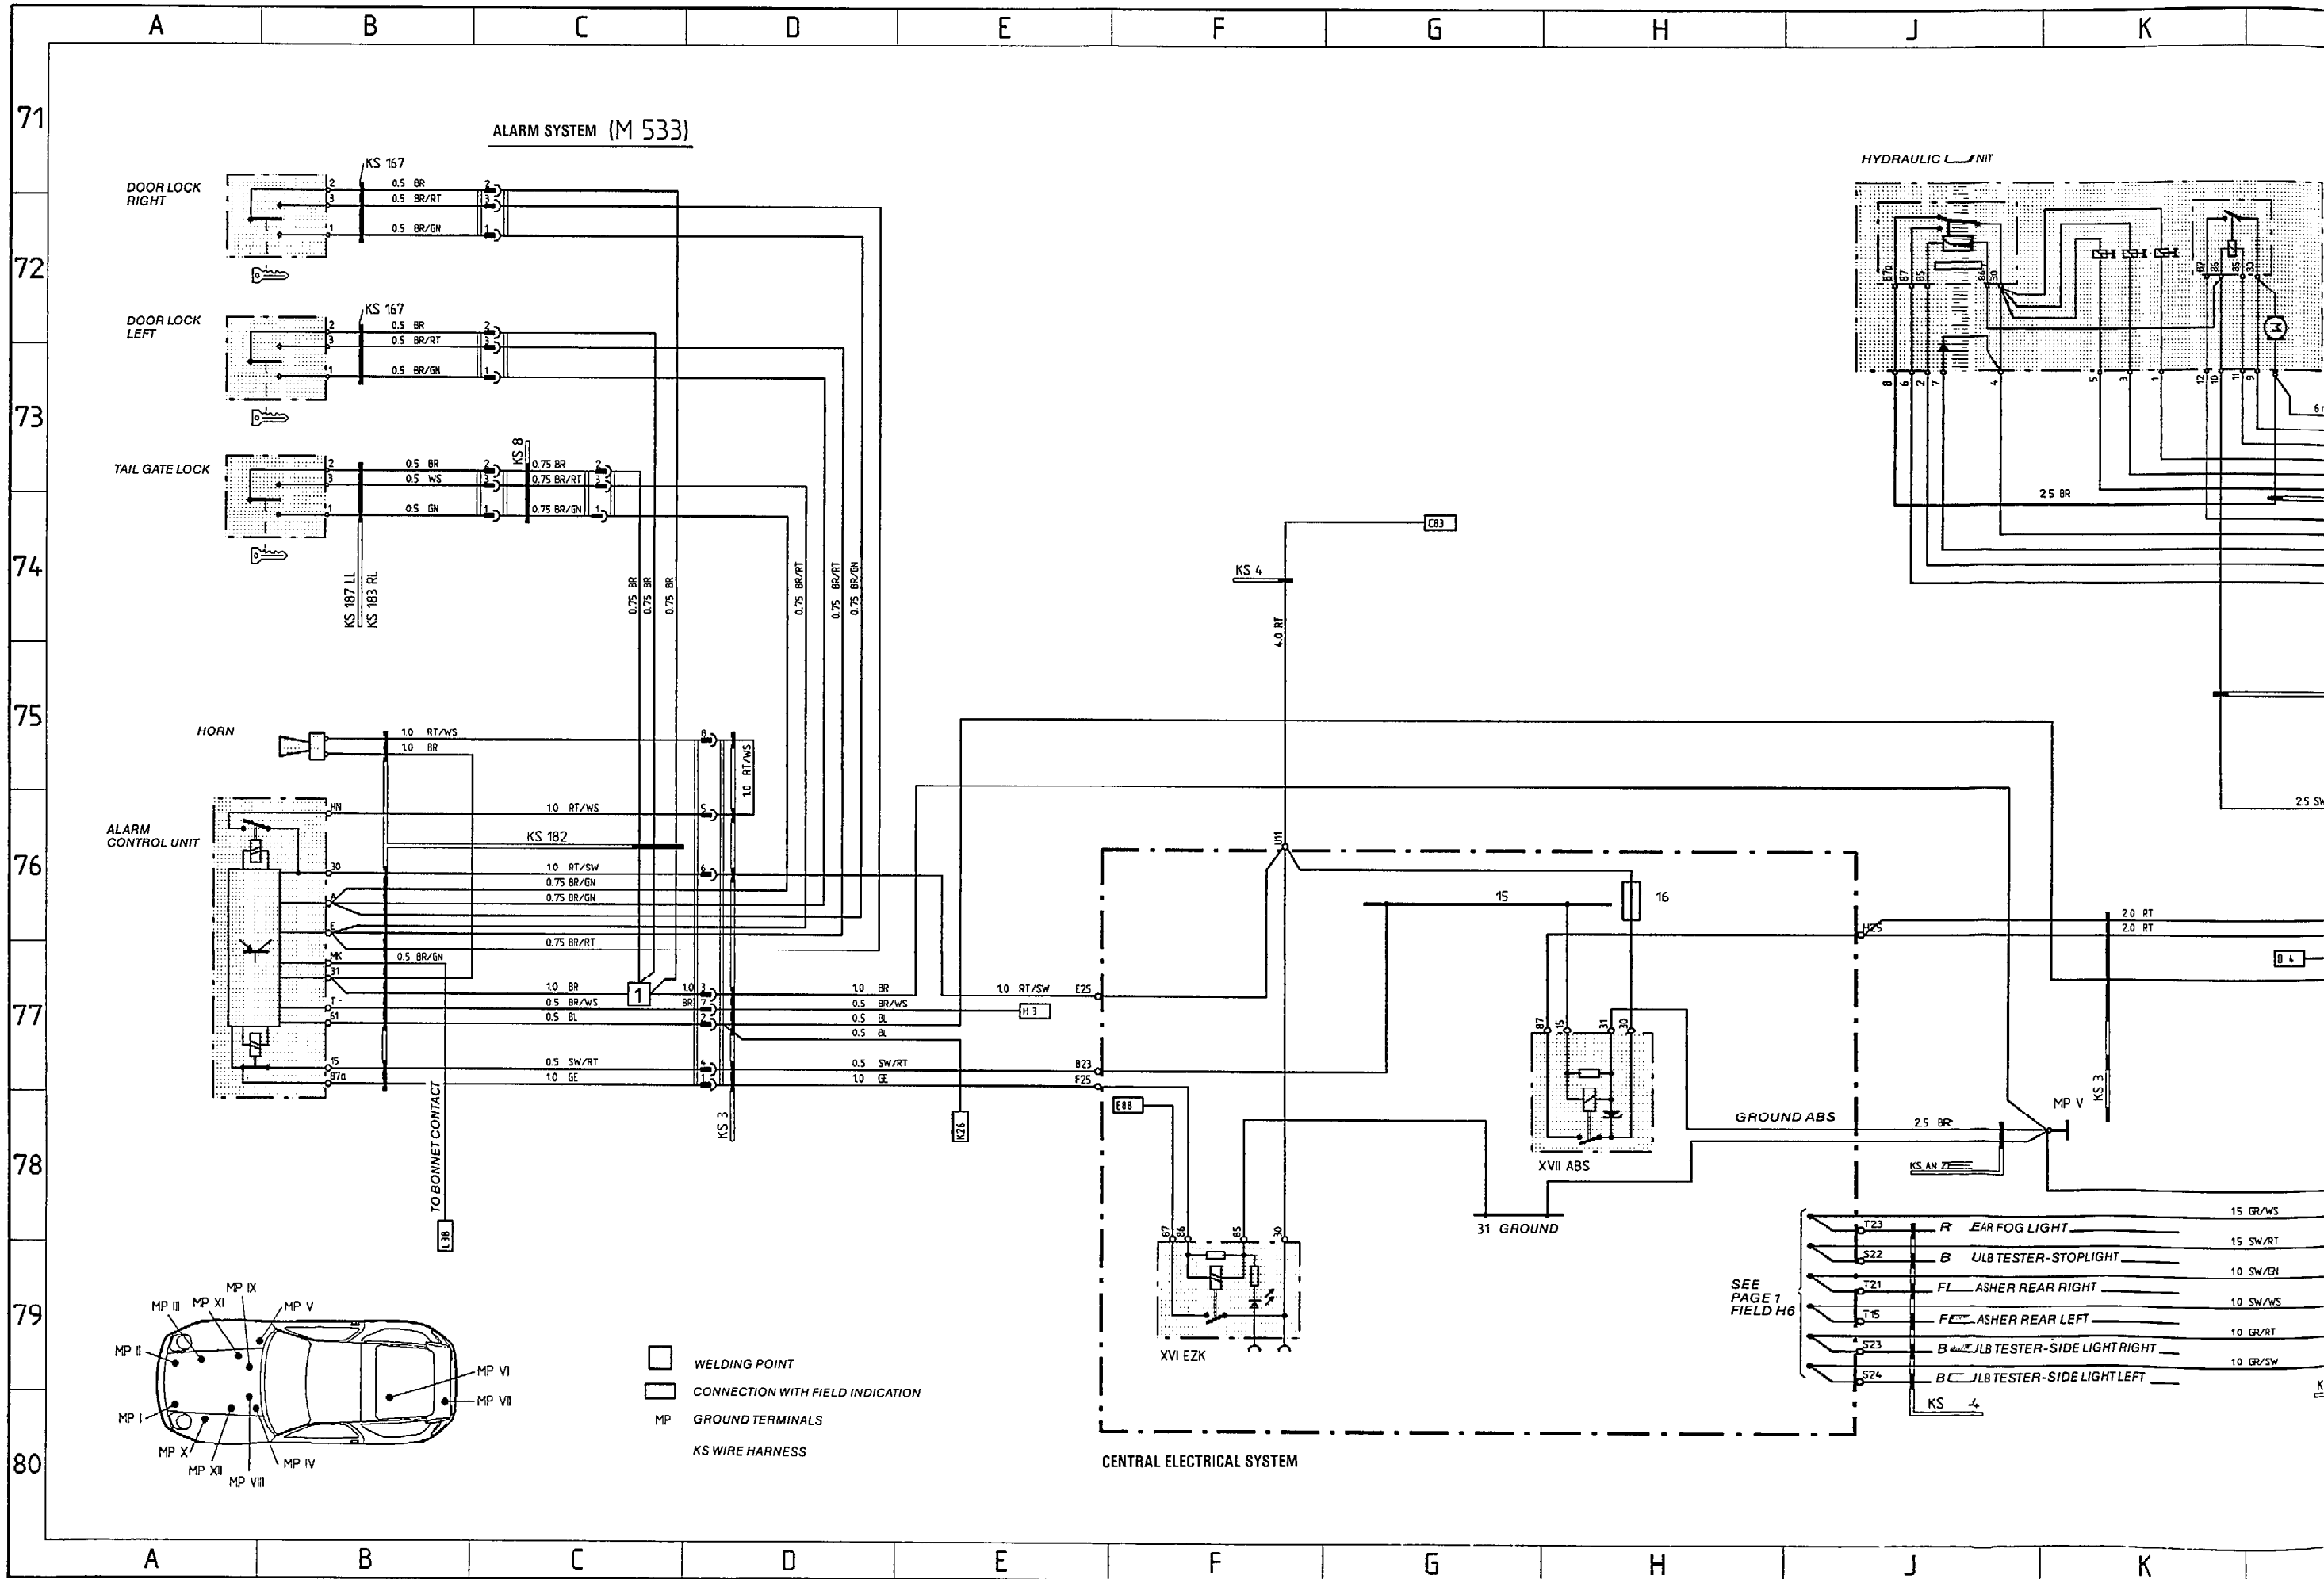


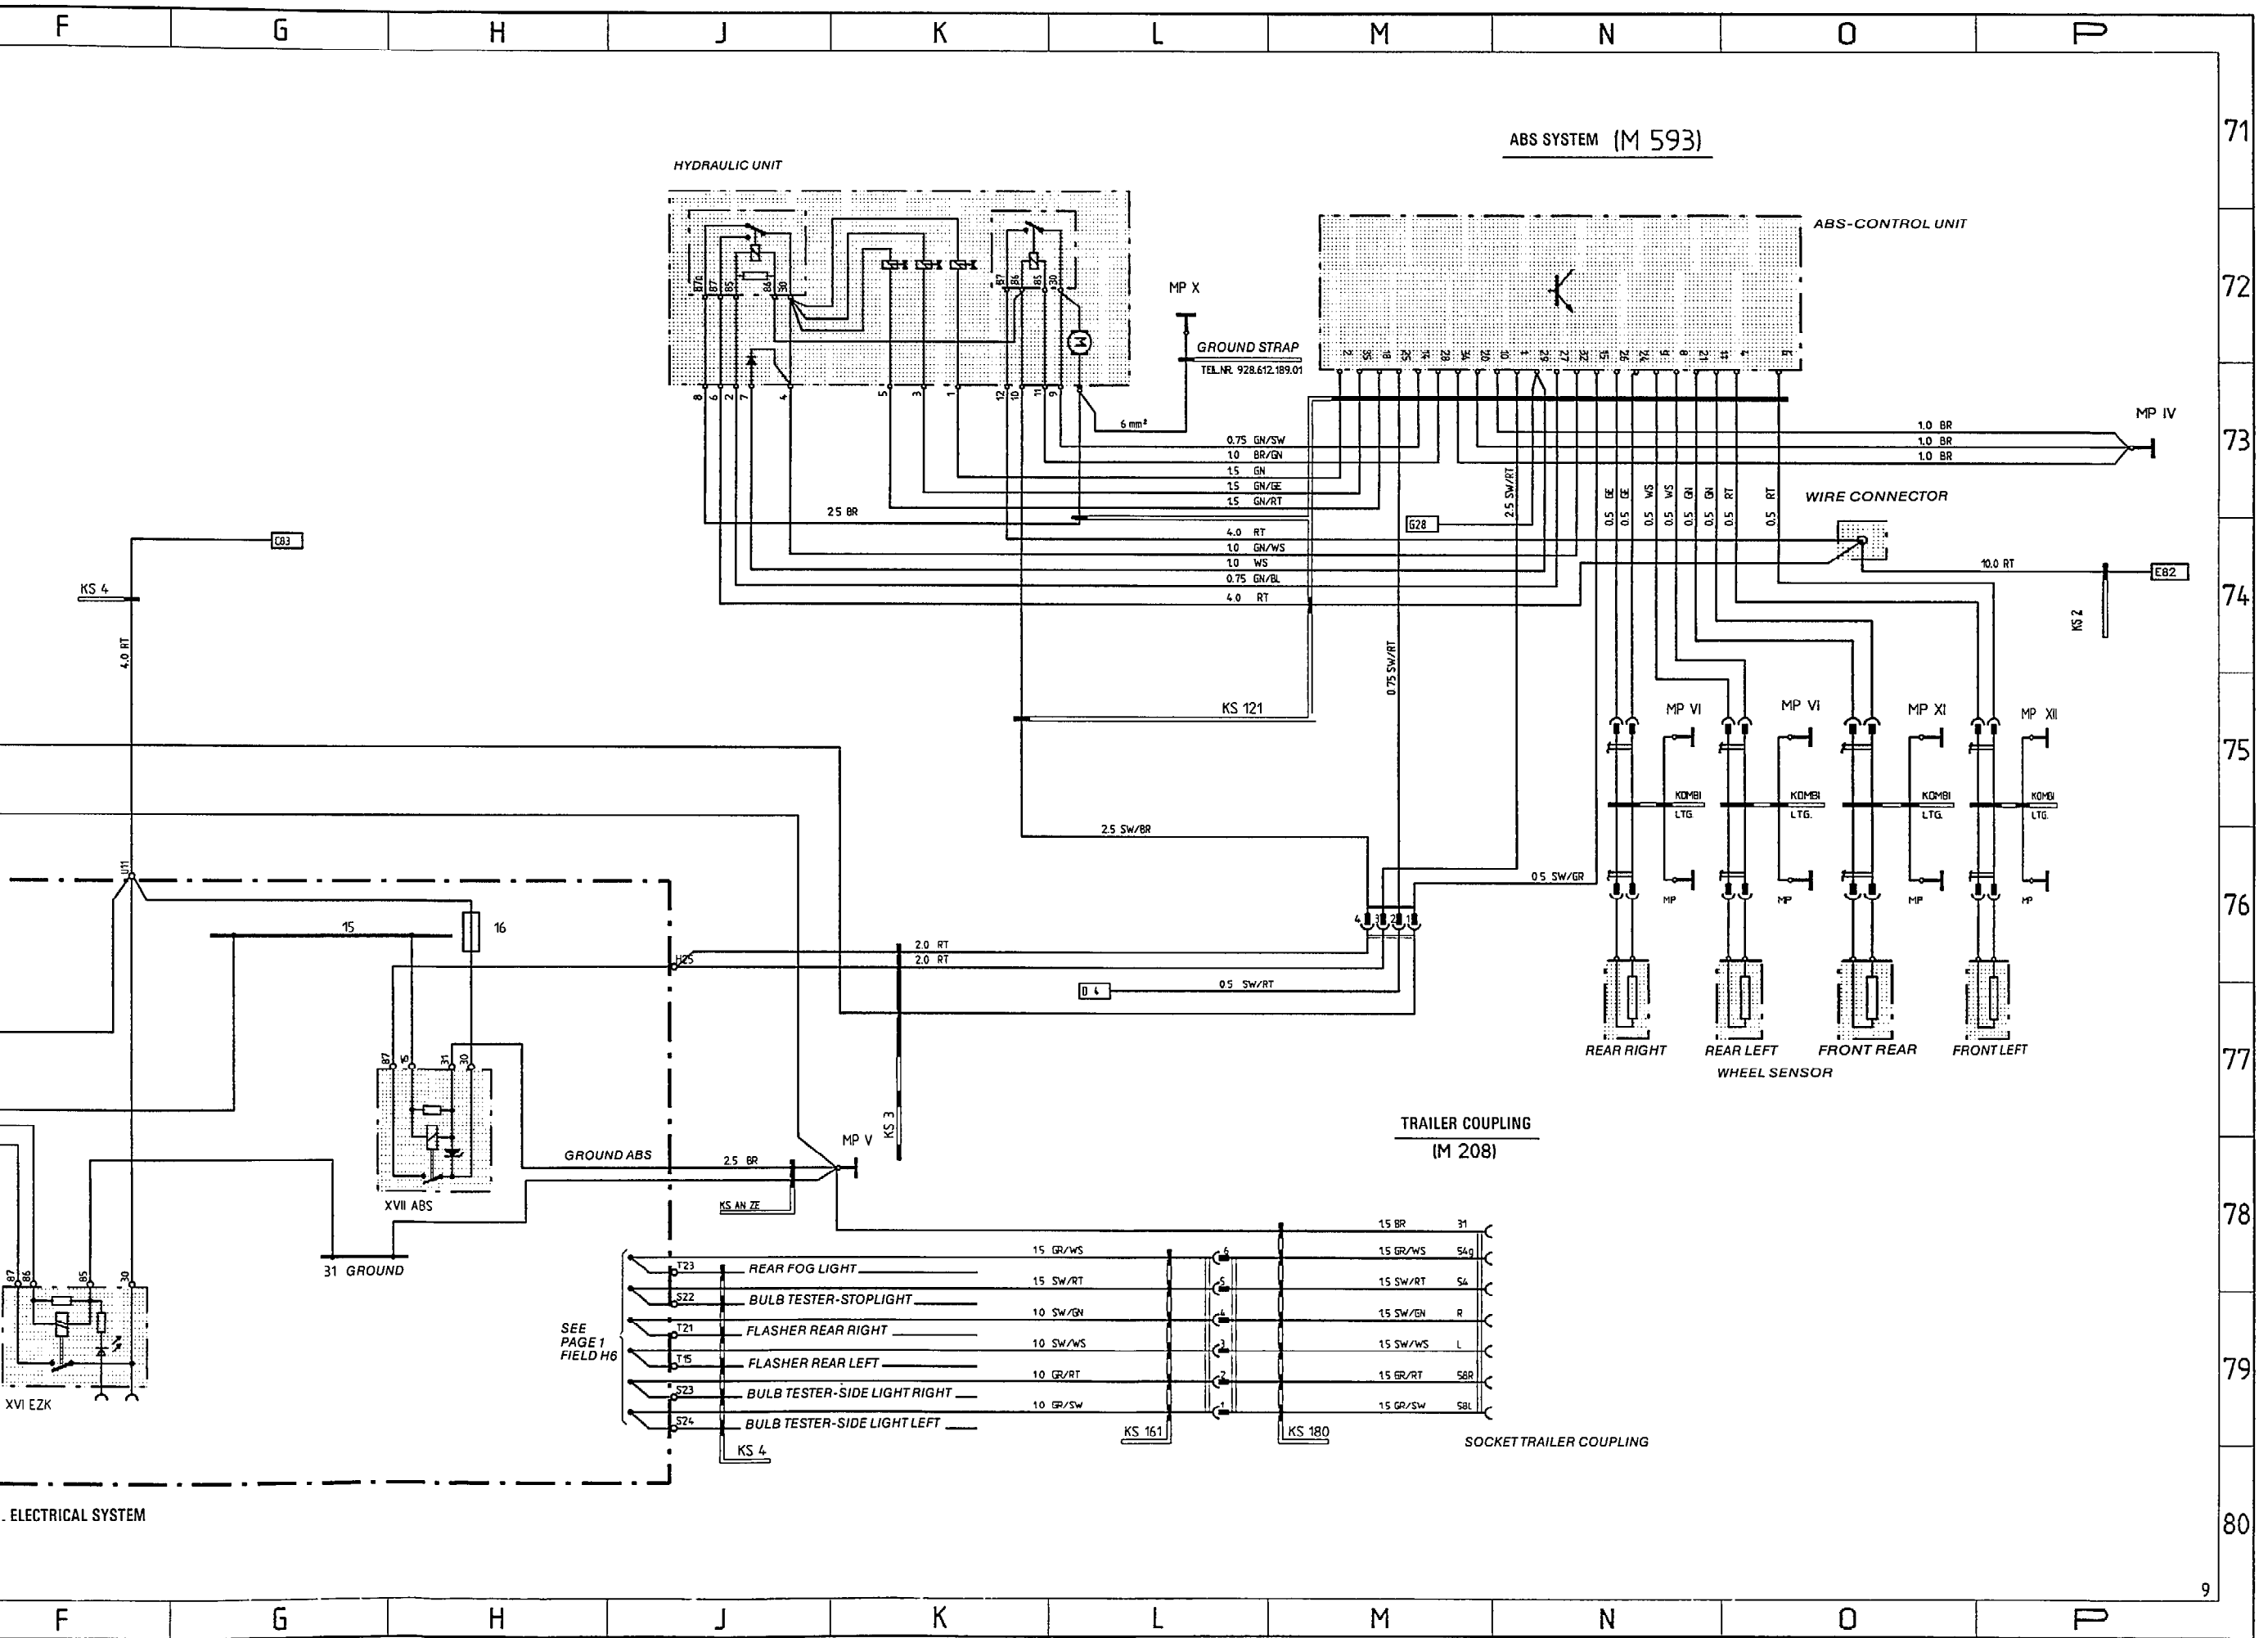

ELECTRICAL SYSTEM

Wiring Diagram Type 928S
Model 87 page 10

ENGINE COMPARTMENT, TEMPOSTAT

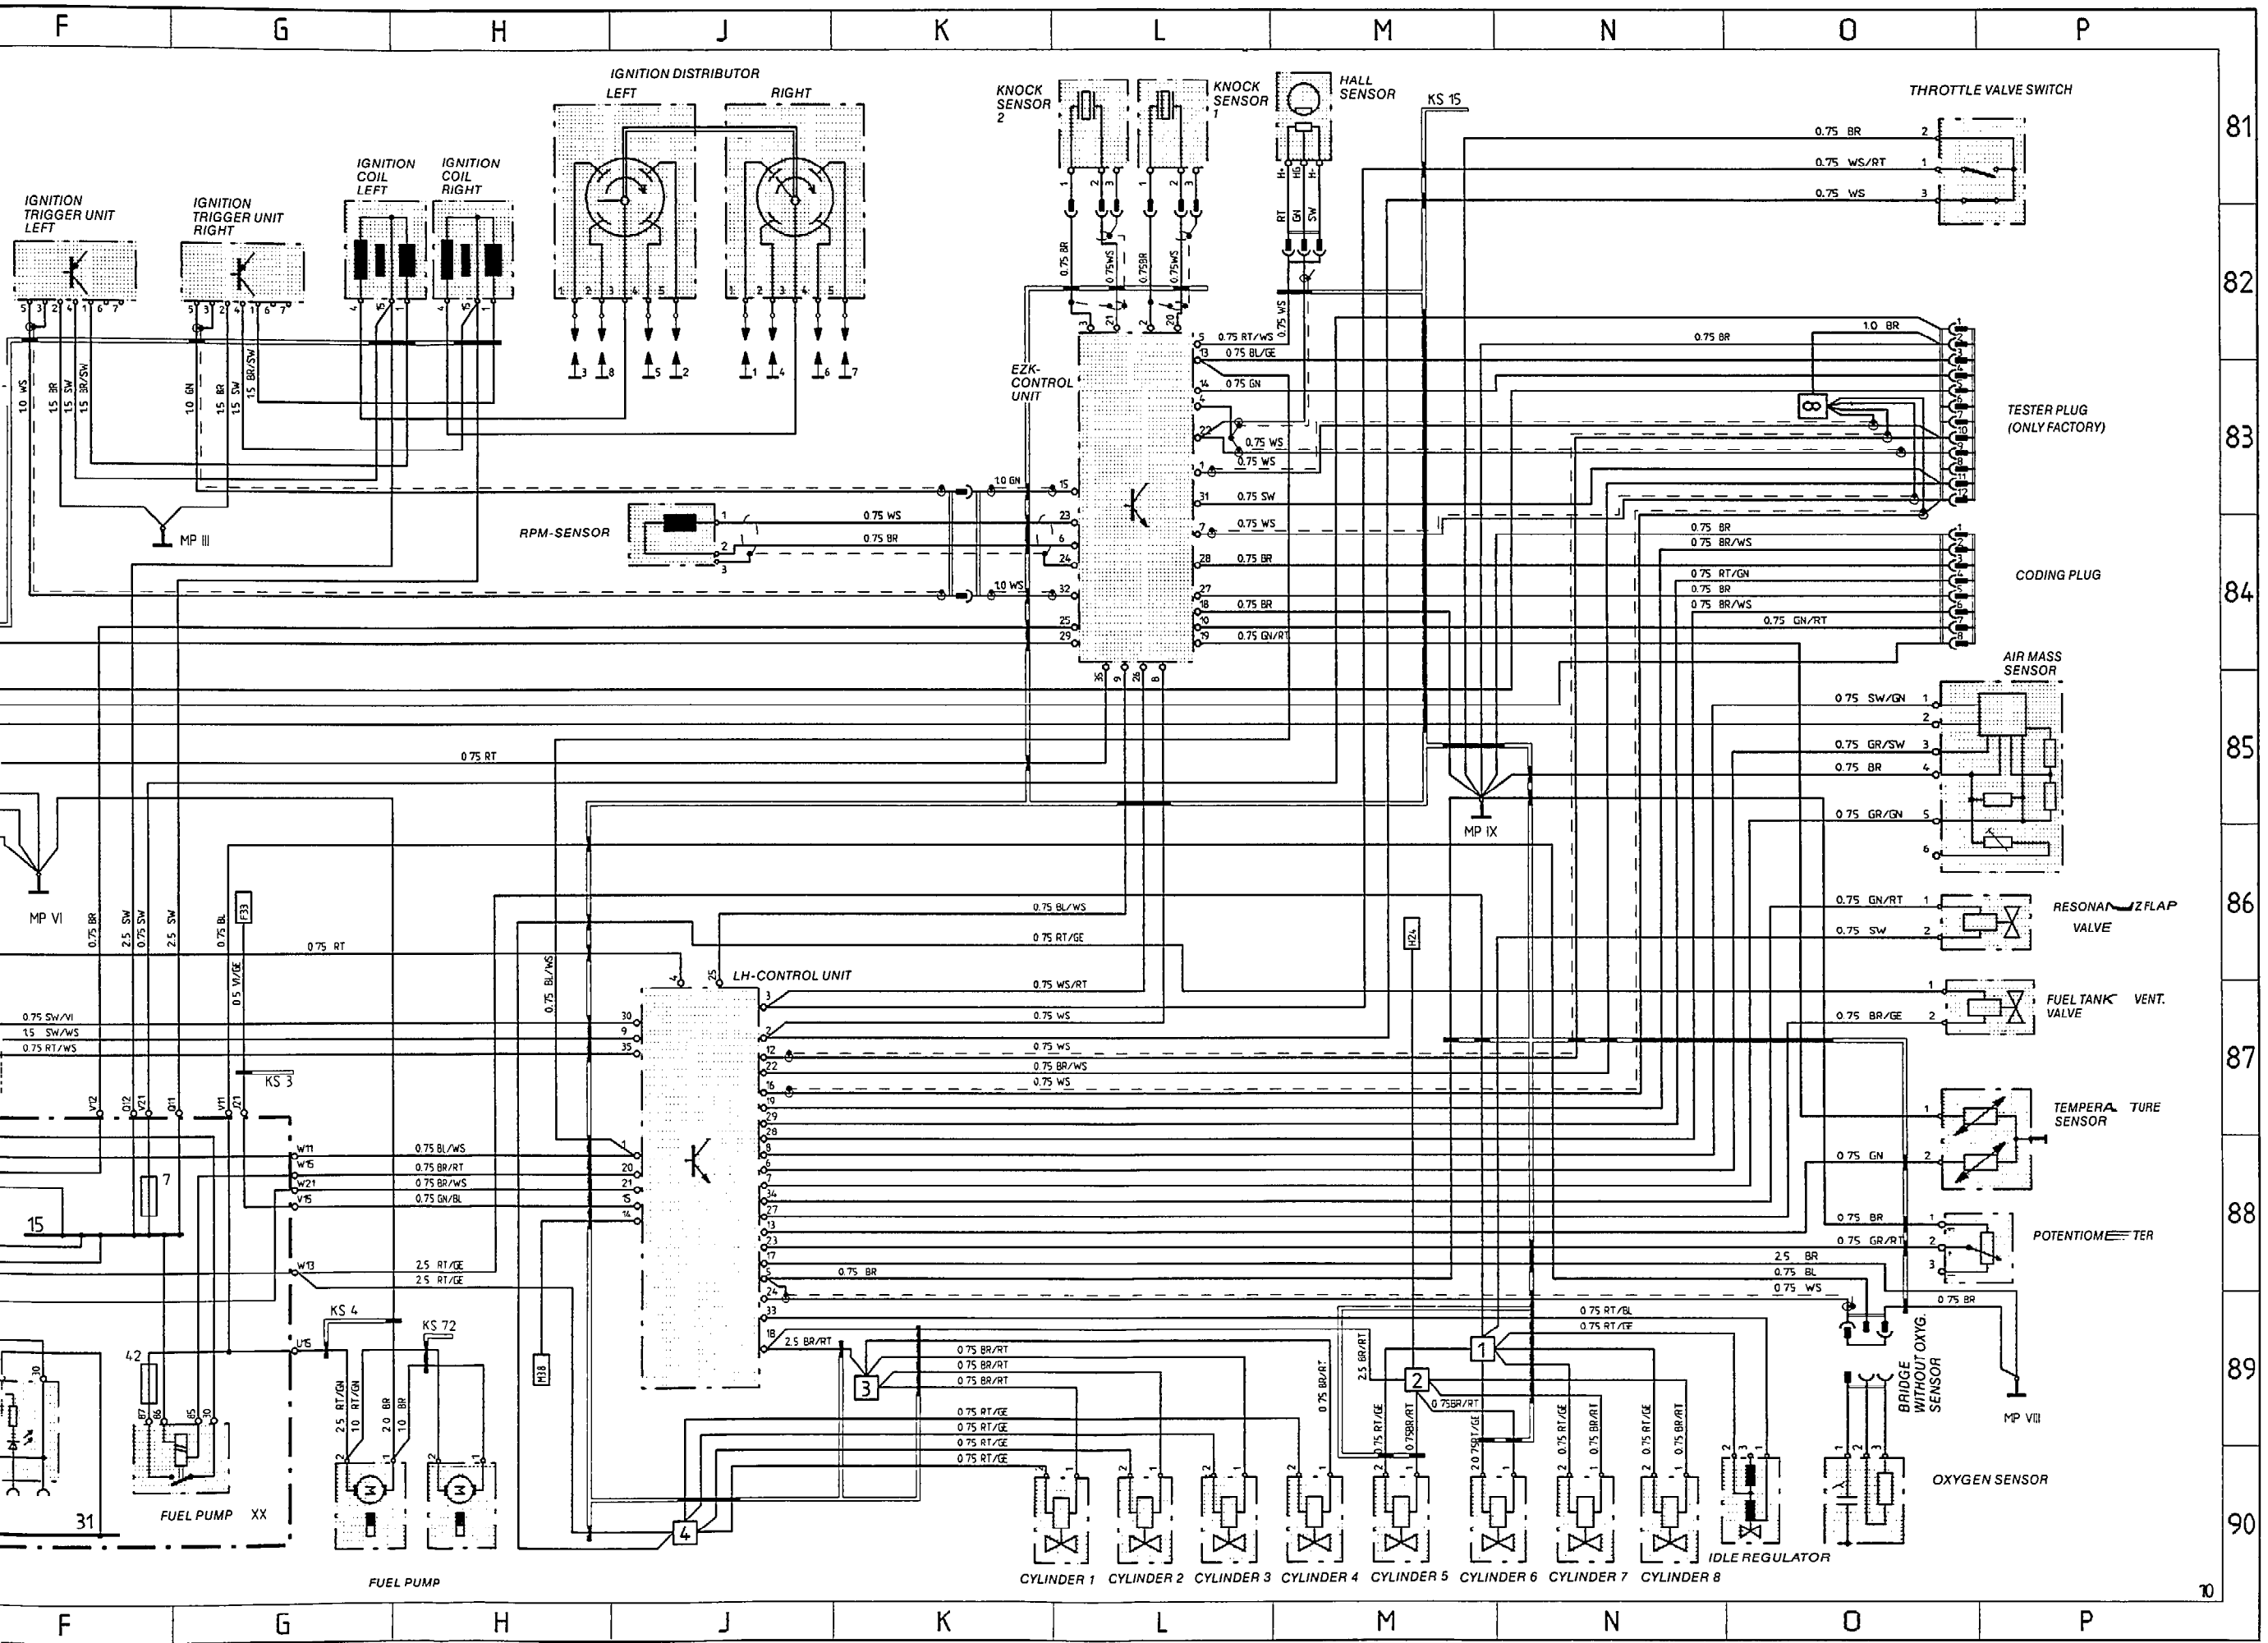

ACK WS = WHITE RT = RED GN = GREEN GE = YELLOW GR = GREY BR = BROWN BL = BLUE LI = VIOLET

Wiring Diagram Type 928S Model 87 page 11

CENTRAL ELECTRICAL SYSTEM

