

## Wiring Diagram Type 928 GTS Model 93 / 2

	Coordinates	
Sheet 1	1 - 10	Lights RoW
Sheet 2	1 - 10	Lights USA
Sheet 3	11 - 20	Body
Sheet 4	21 - 30	Instrument Cluster and Sensor
Sheet 5	31 - 40	Engine Cooling, Heater, Air Conditioner
Sheet 6	41 - 50	Outside Mirror, Power Seat
Sheet 7	51 - 60	Seat and Mirror Memory
Sheet 8	61 - 70	Radio, Telephone
Sheet 9	71 - 80	Antilock System, Tire Pressure Control, Airbag, Porsche Lock Differential, Trailer Coupling, Brake Pad Wear Indicator
Sheet 10	81 - 90	Motor, Fuel and Ignition, Cruise Control
Sheet 11	91 - 100	Alarm System, Central Locking System, Inside Lights
Sheet 12	101 - 110	Central Electric
Sheet 13		Constr. Components
Sheet 14		Plug Connections, Ground Points, M-Numbers, Abbreviations

From V.I.N. WPO AA2 92 PS8 20 001



# Wiring Diagram Type 928 GTS

## Model 93 / 2

The wiring diagram comprises of 12 individual wiring diagrams, 1 sheet construction components and 1 sheet plug connections, ground points, M-numbers and abbreviations. They are subdivided into coordinate fields.

Each individual wiring diagram comprises a part of the central-electrical system within a dash-dot frame.

This part of the central-electrical system shows all the lines and relays required for the individual wiring diagram.

The ground-connecting points are designated with "GP" and their location is shown in a vehicle diagram.

The 10-pole plugs on central electrical system are clipped together from 3 parts.


Part 1, with the cast-on fastening pin, is the "initial element".


Parts 2, is the "module element".


Both parts are identified by the digits 1.....5.


Part 3 is a "coding element".

The designations of the plug connections in the wiring diagram for central electrical system refer e.g. from A 11.....15, to the "initial element", from A 21.....25 to module element.

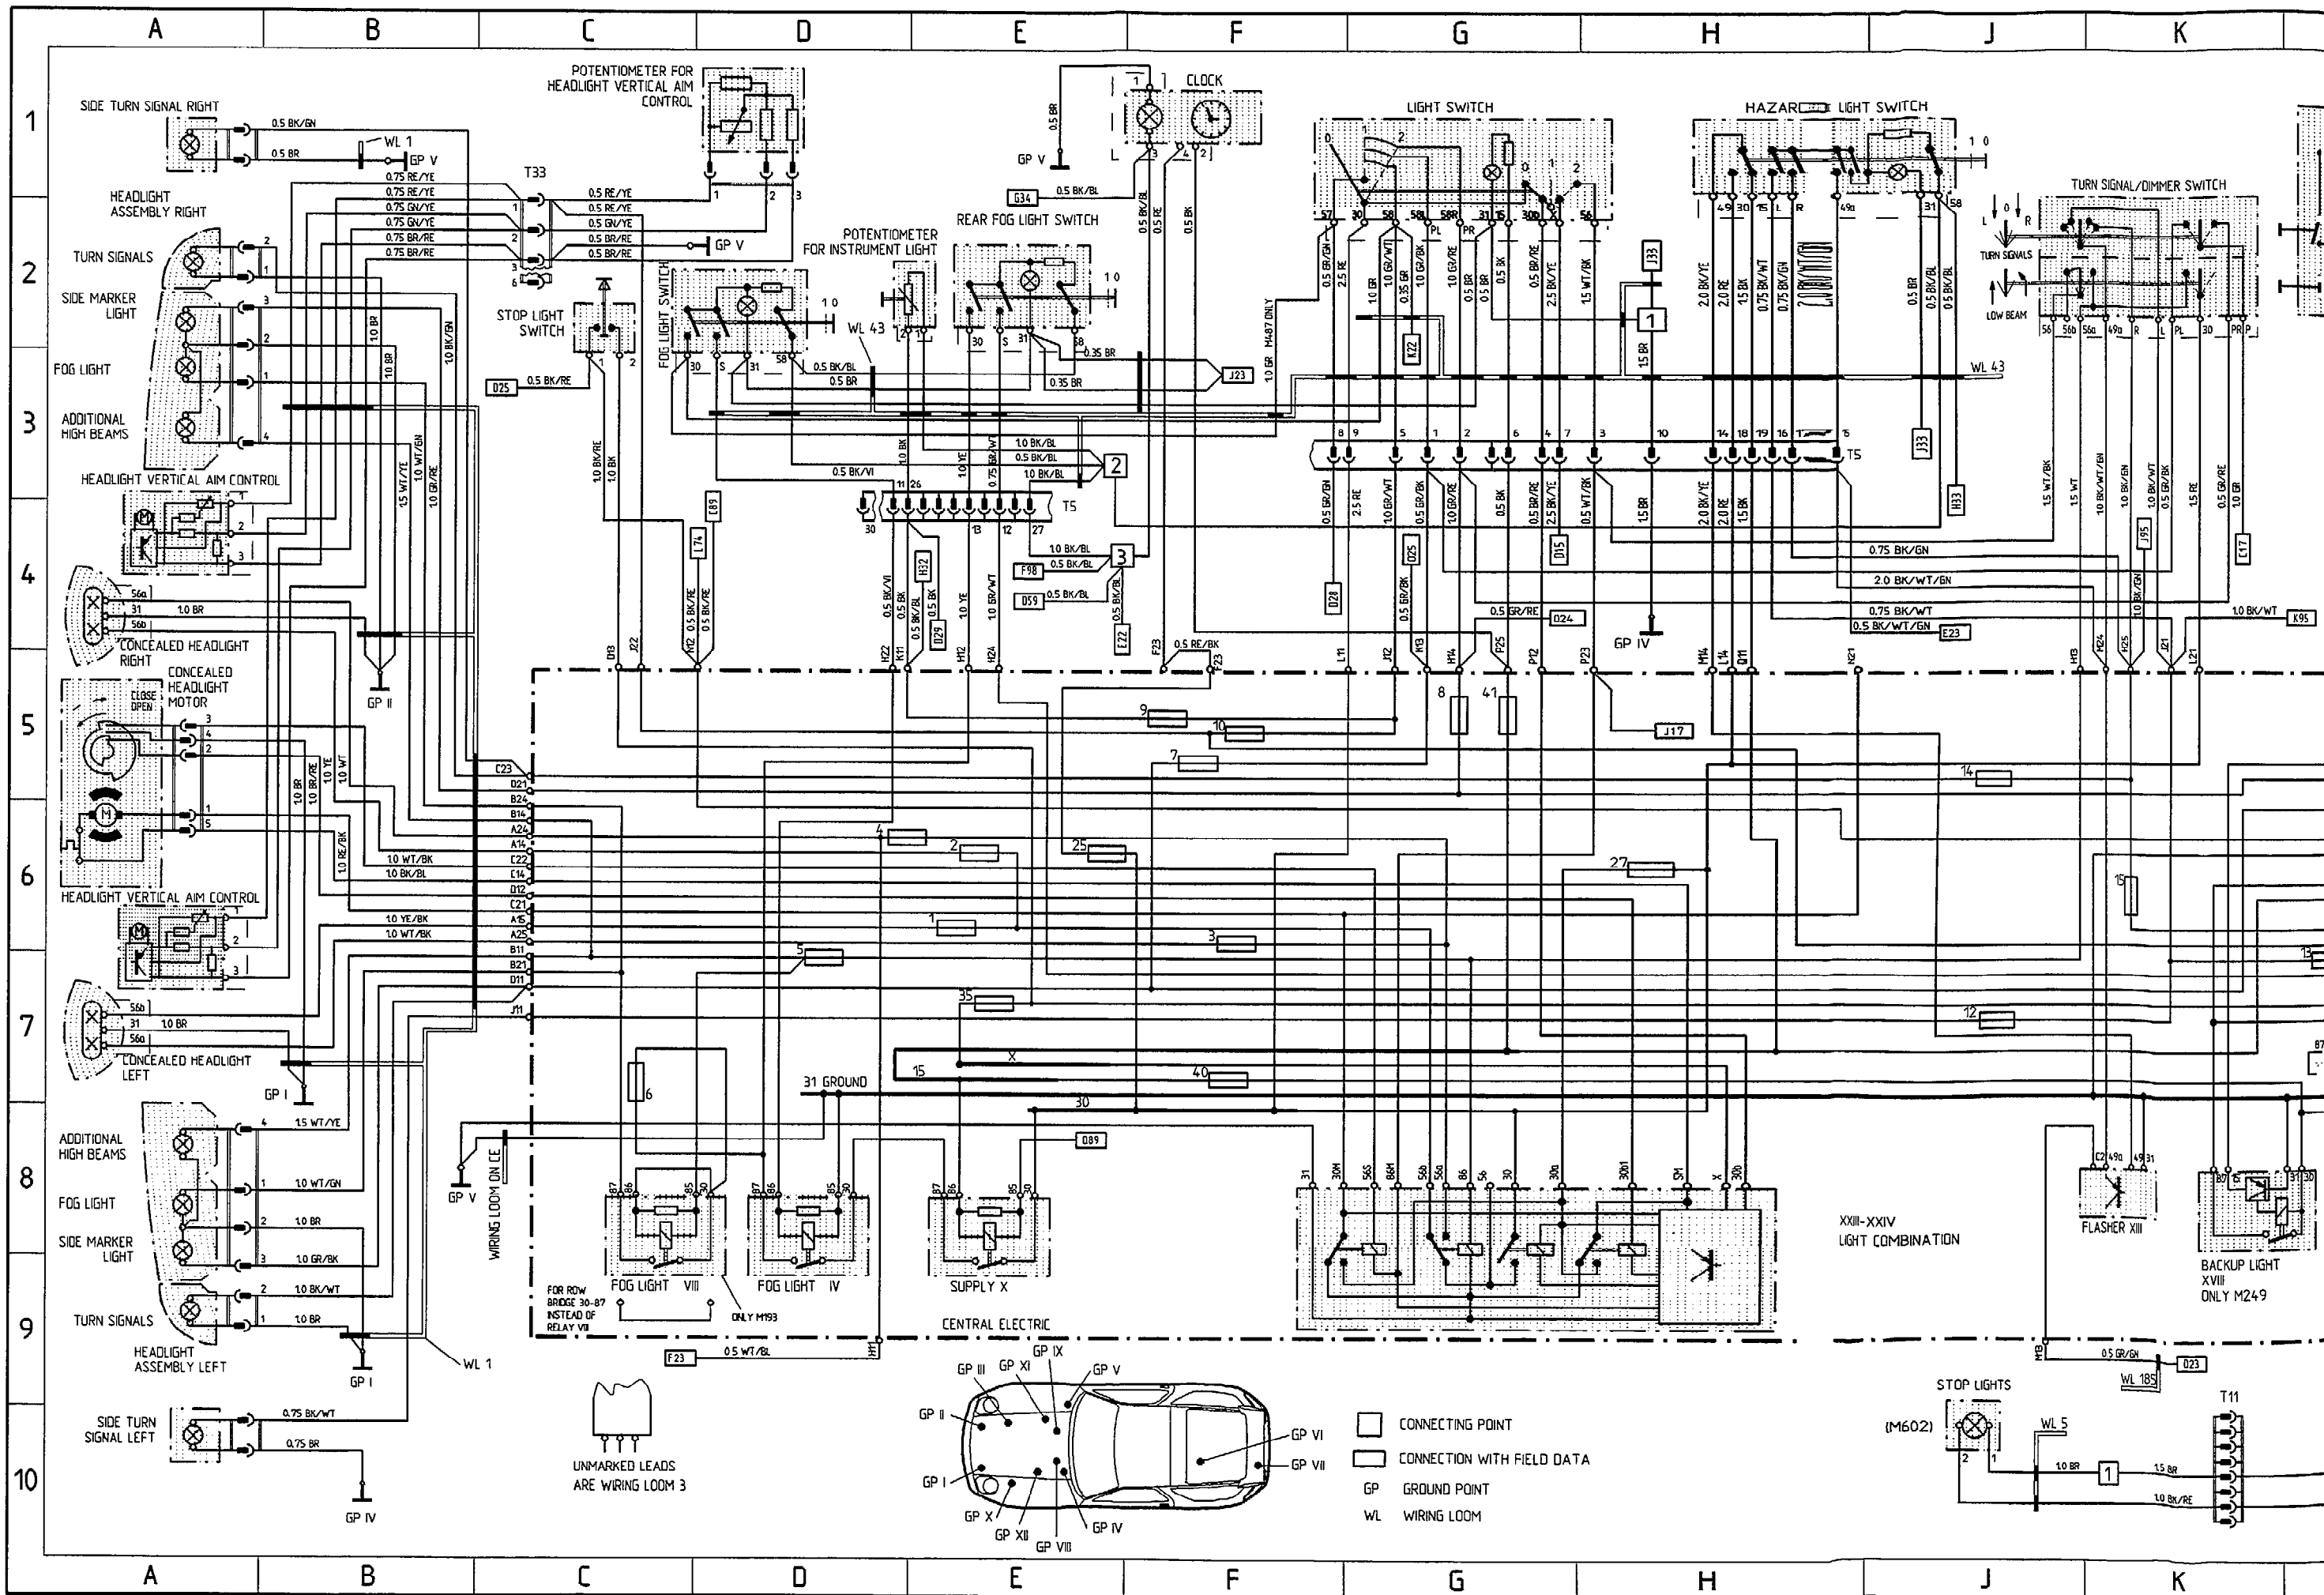

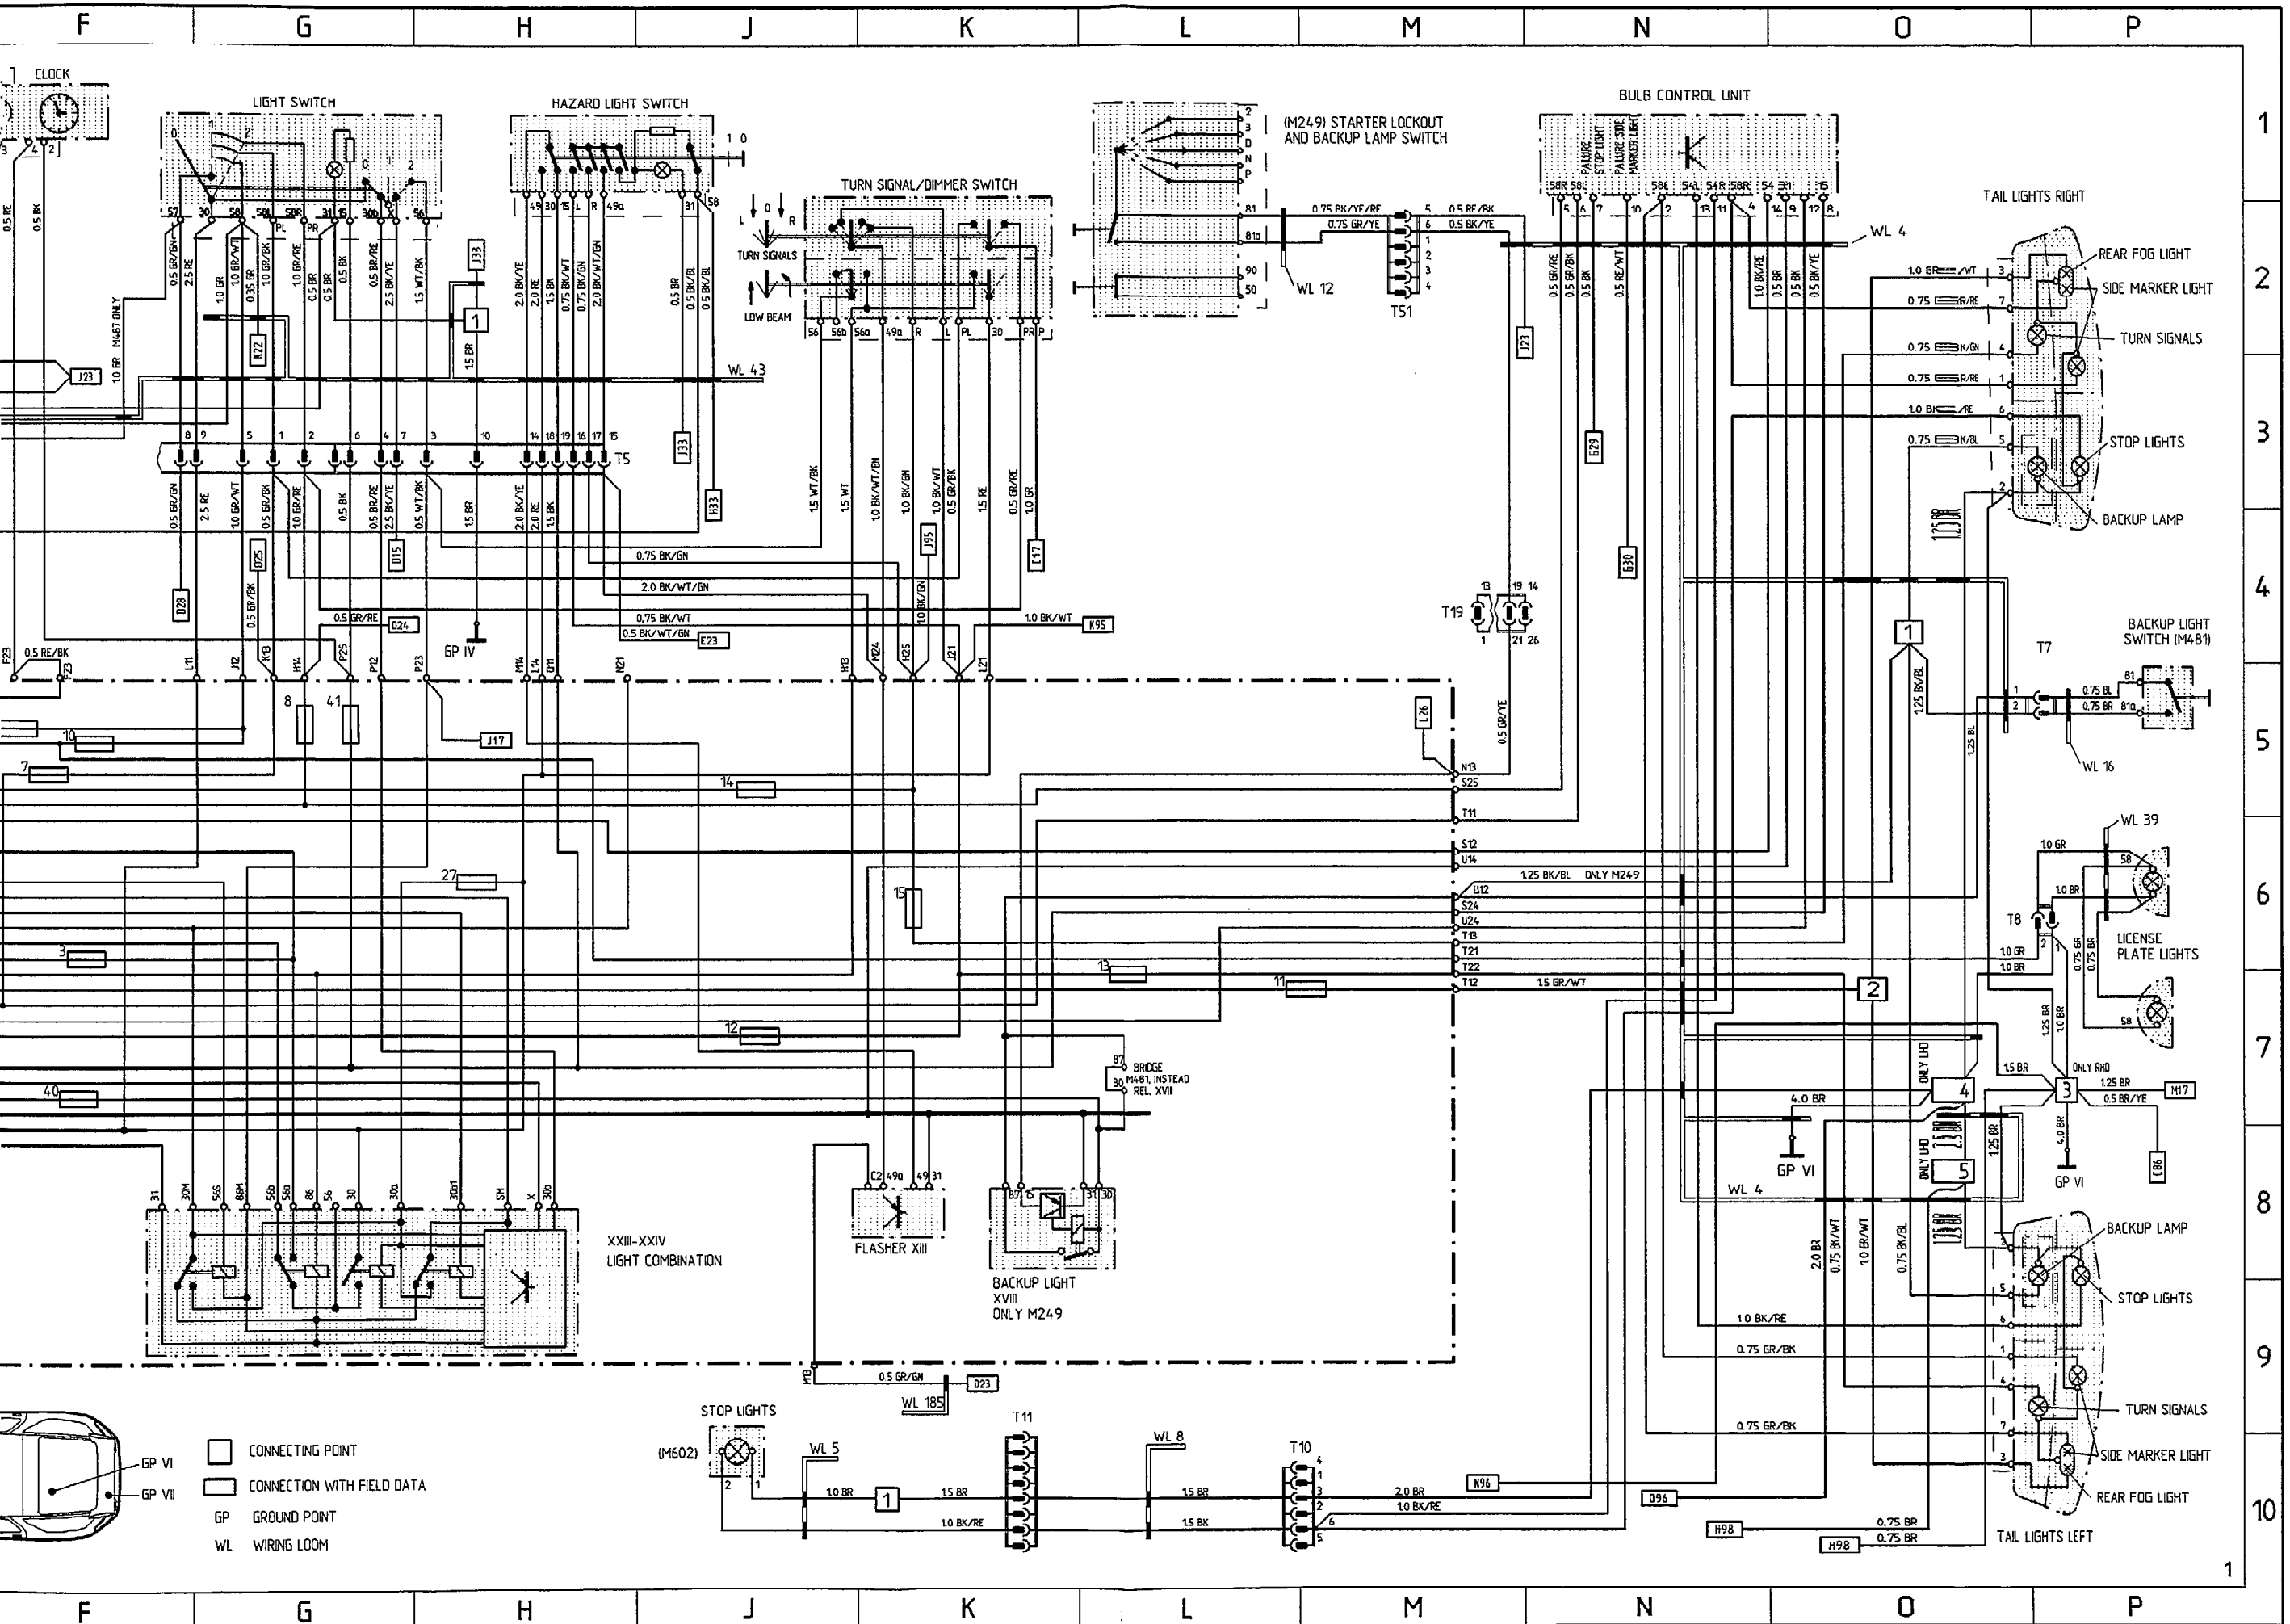


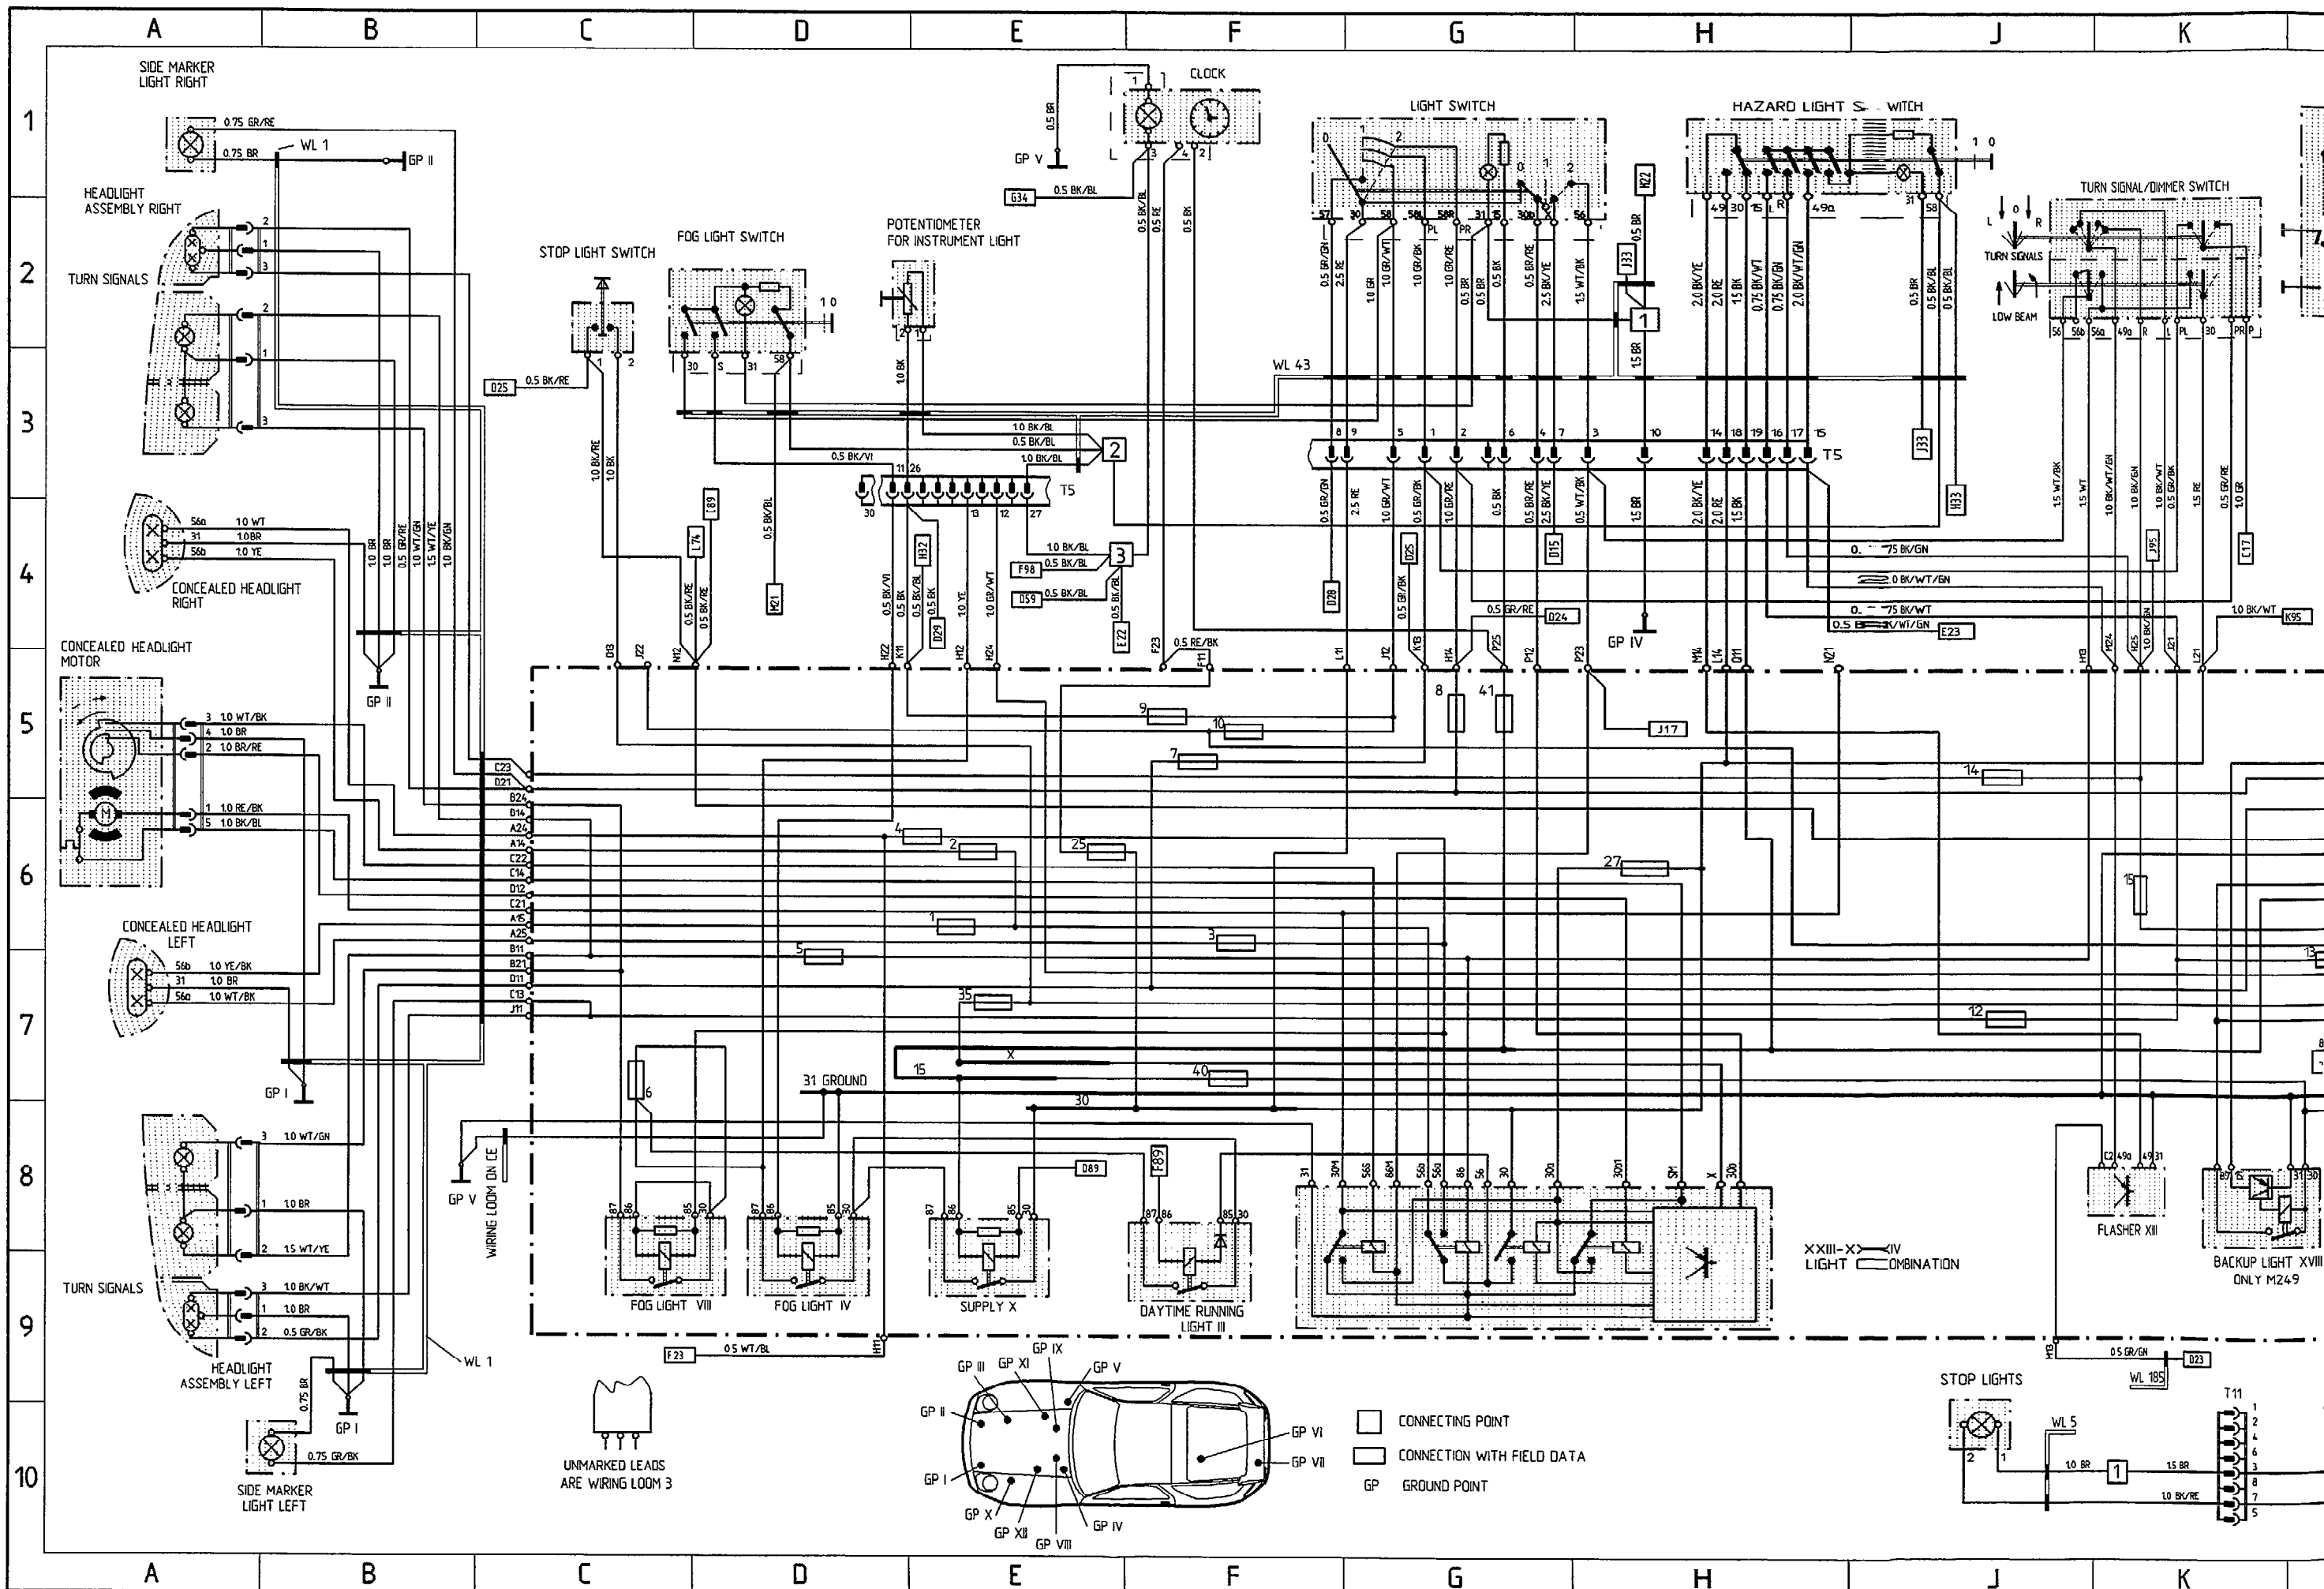

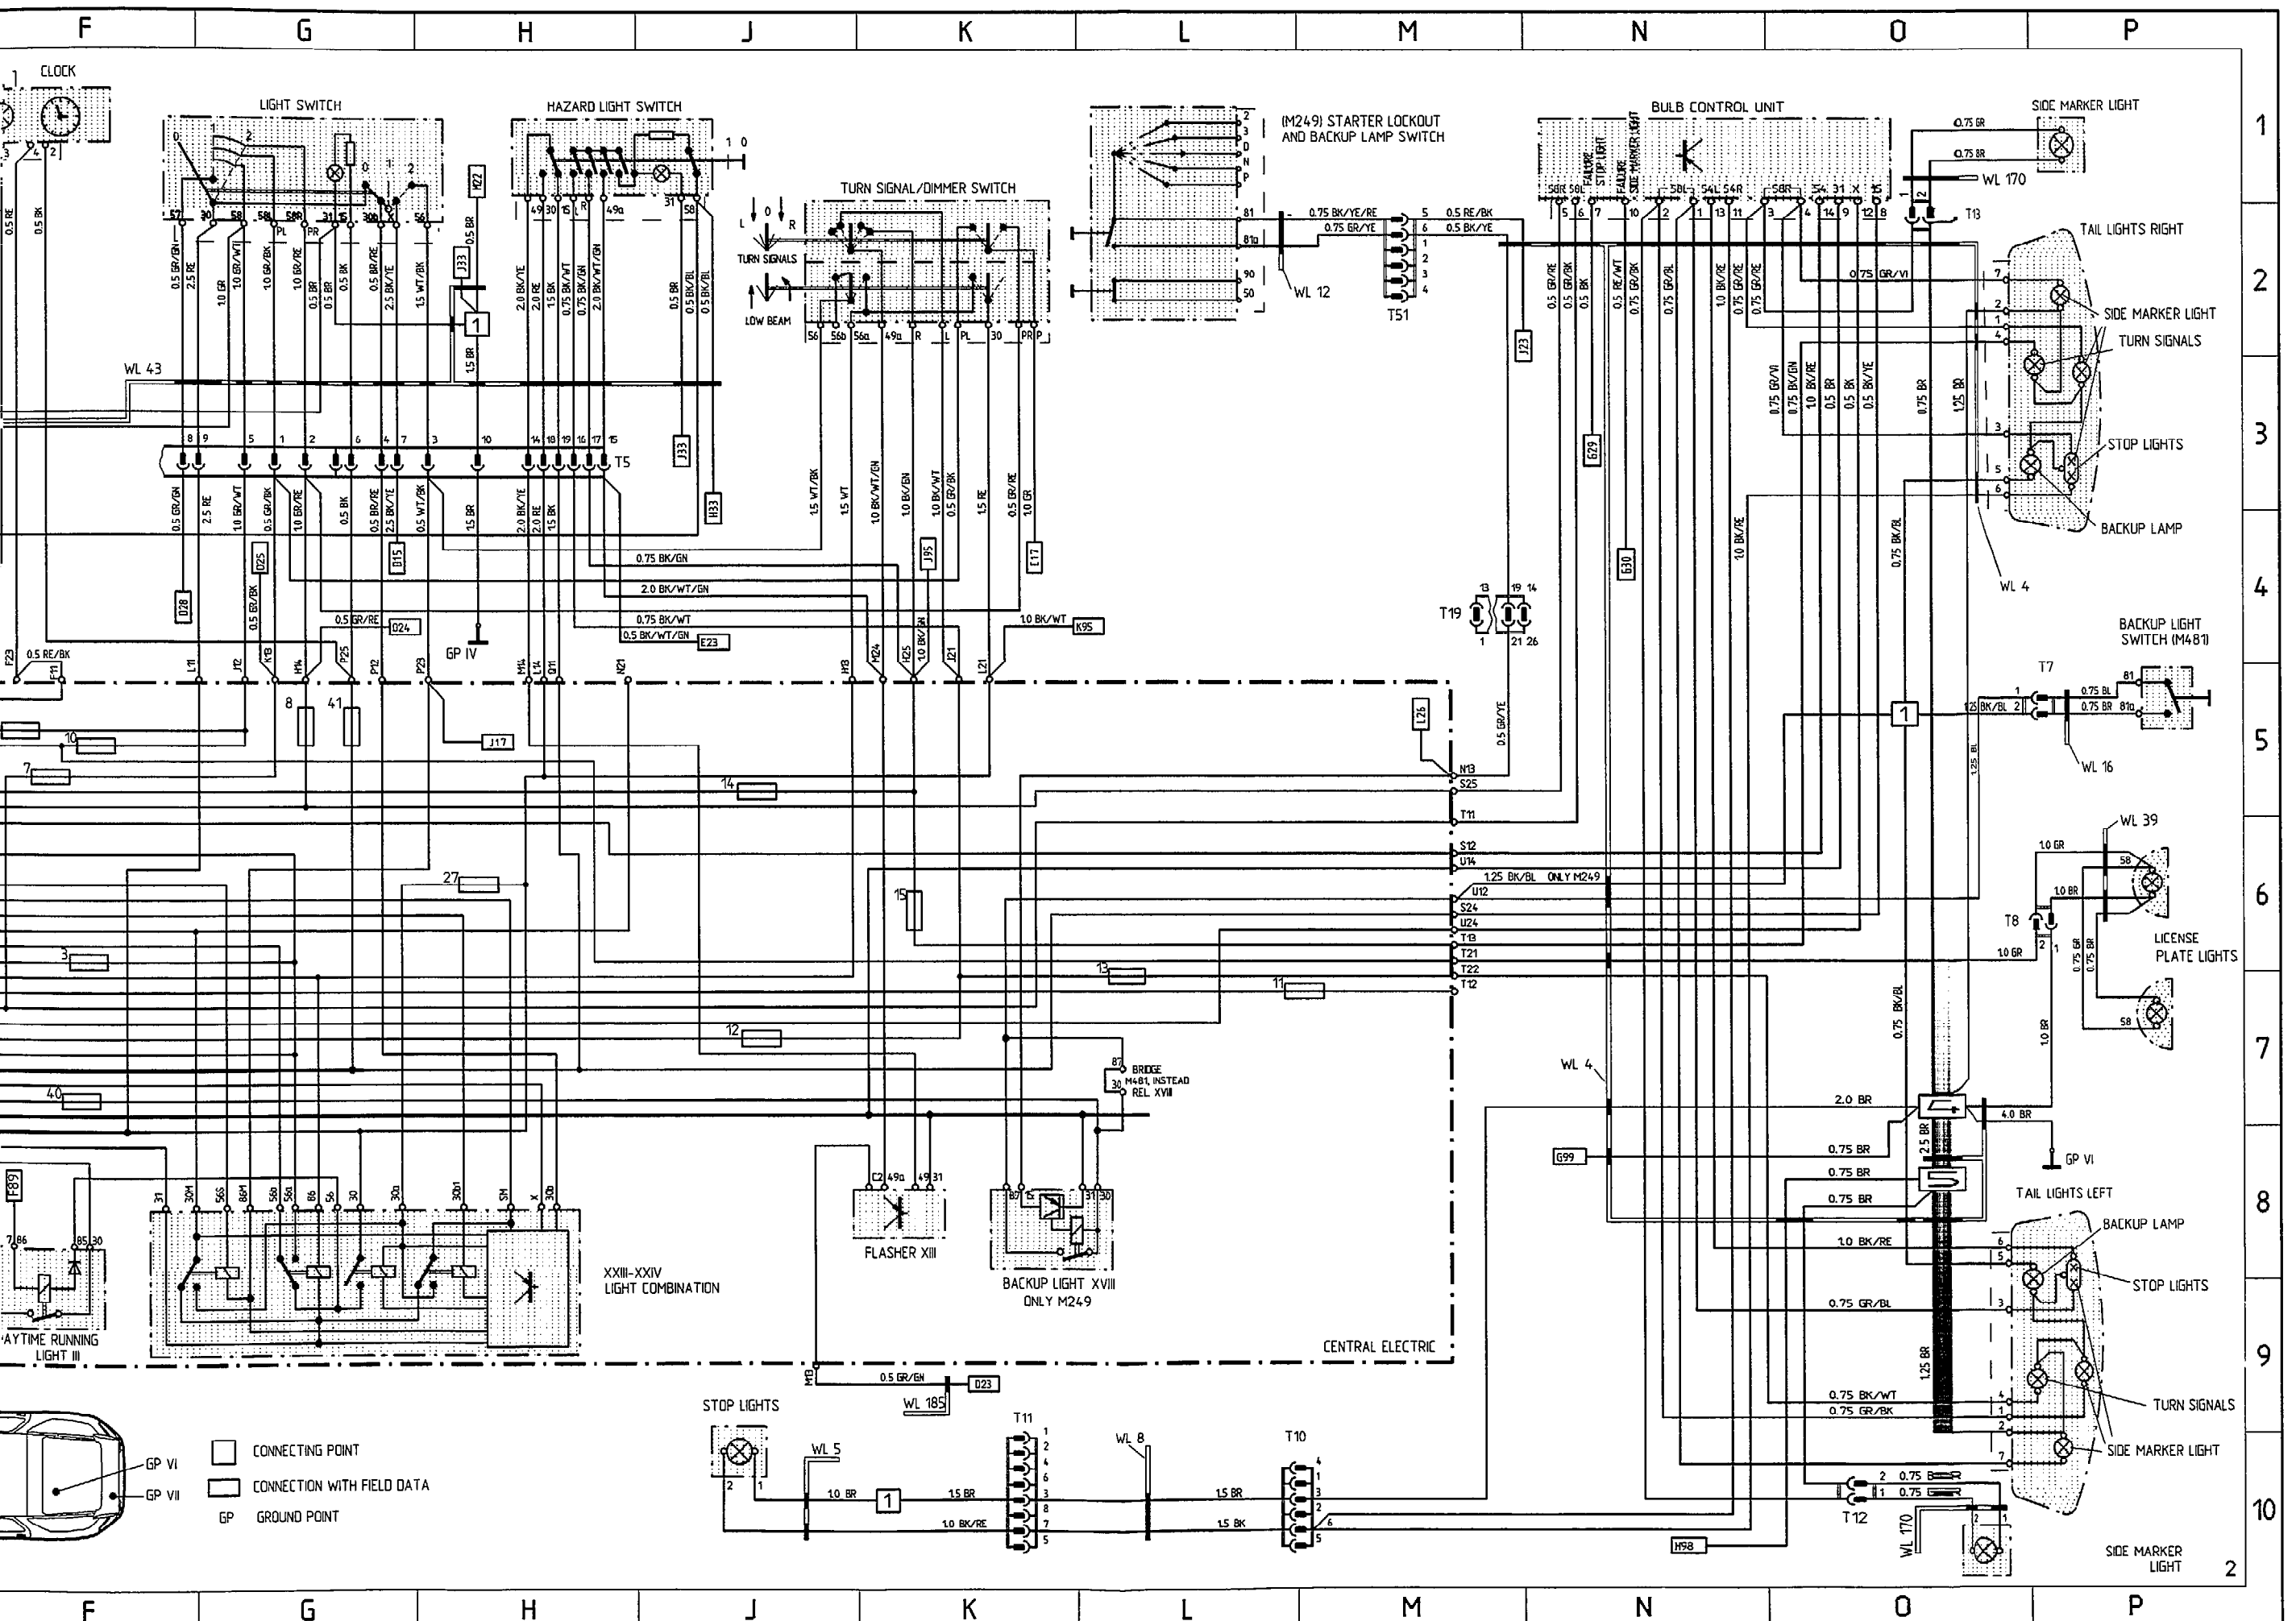


BK = BLACK    WT = WHITE    RE = RED    GN = GREEN    YE = YELLOW    GR = GREY    BR = BROWN    BL = BLUE    VI = VIOLET    PK = PINK

BODY

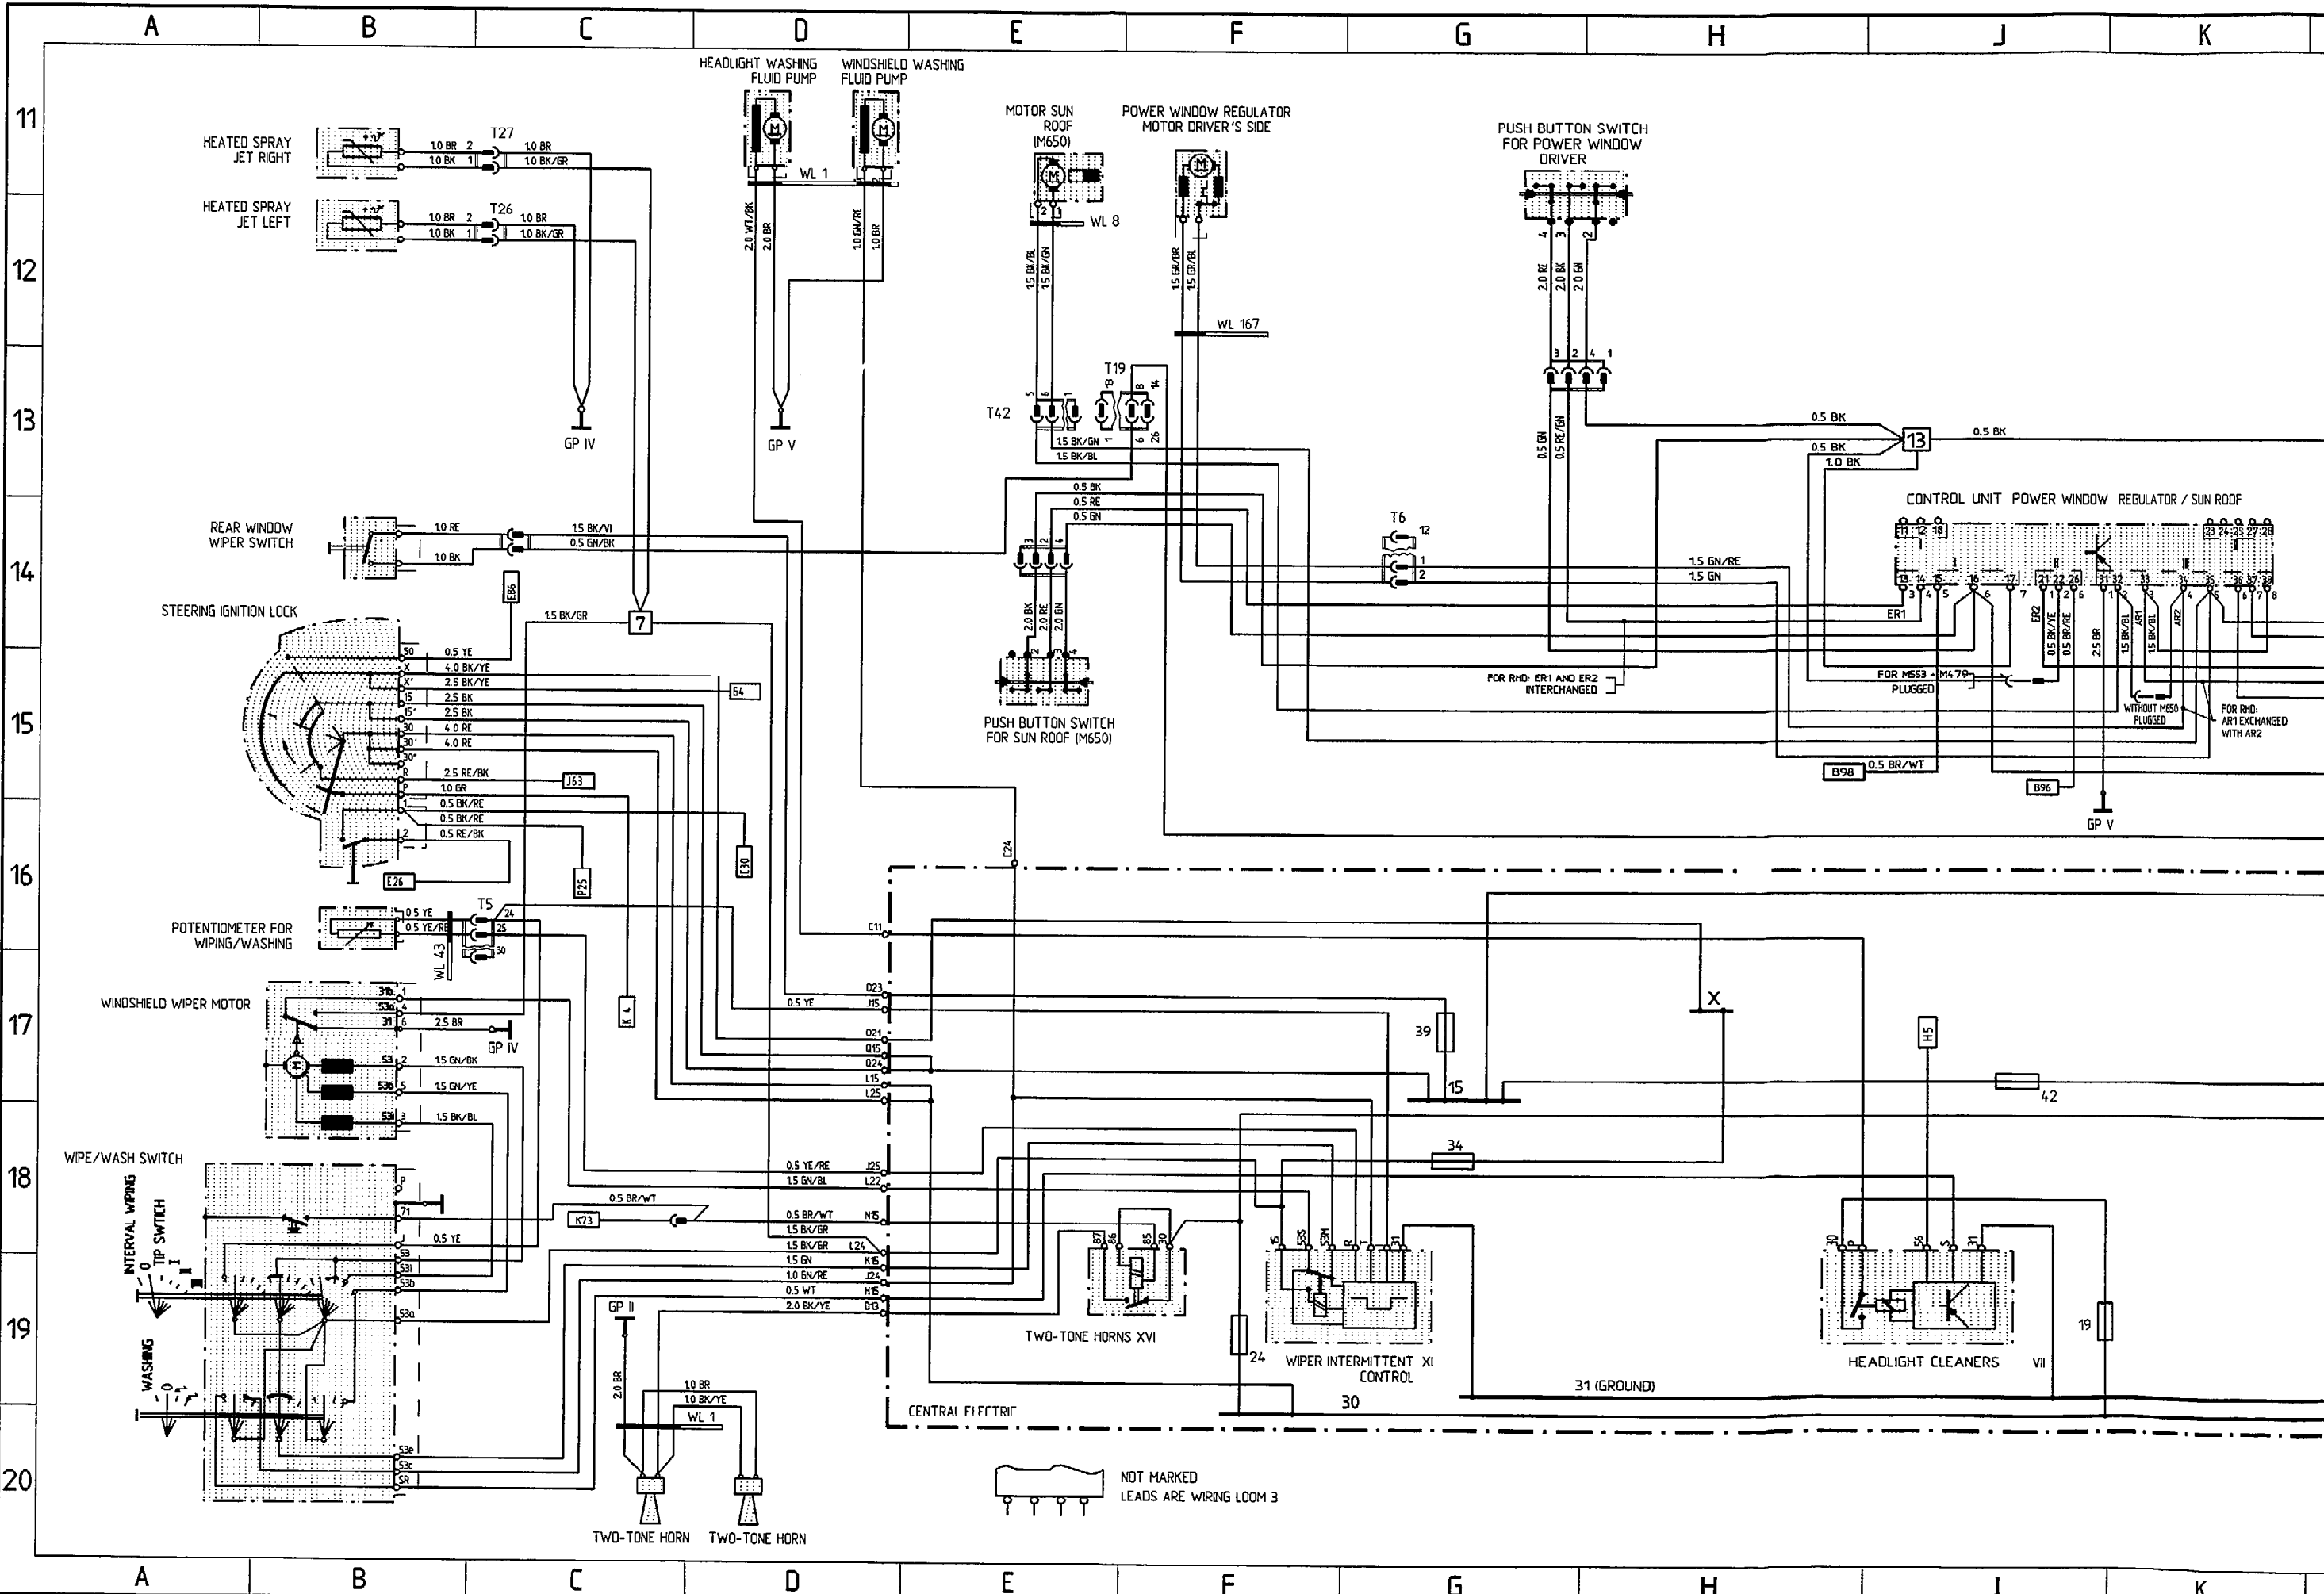





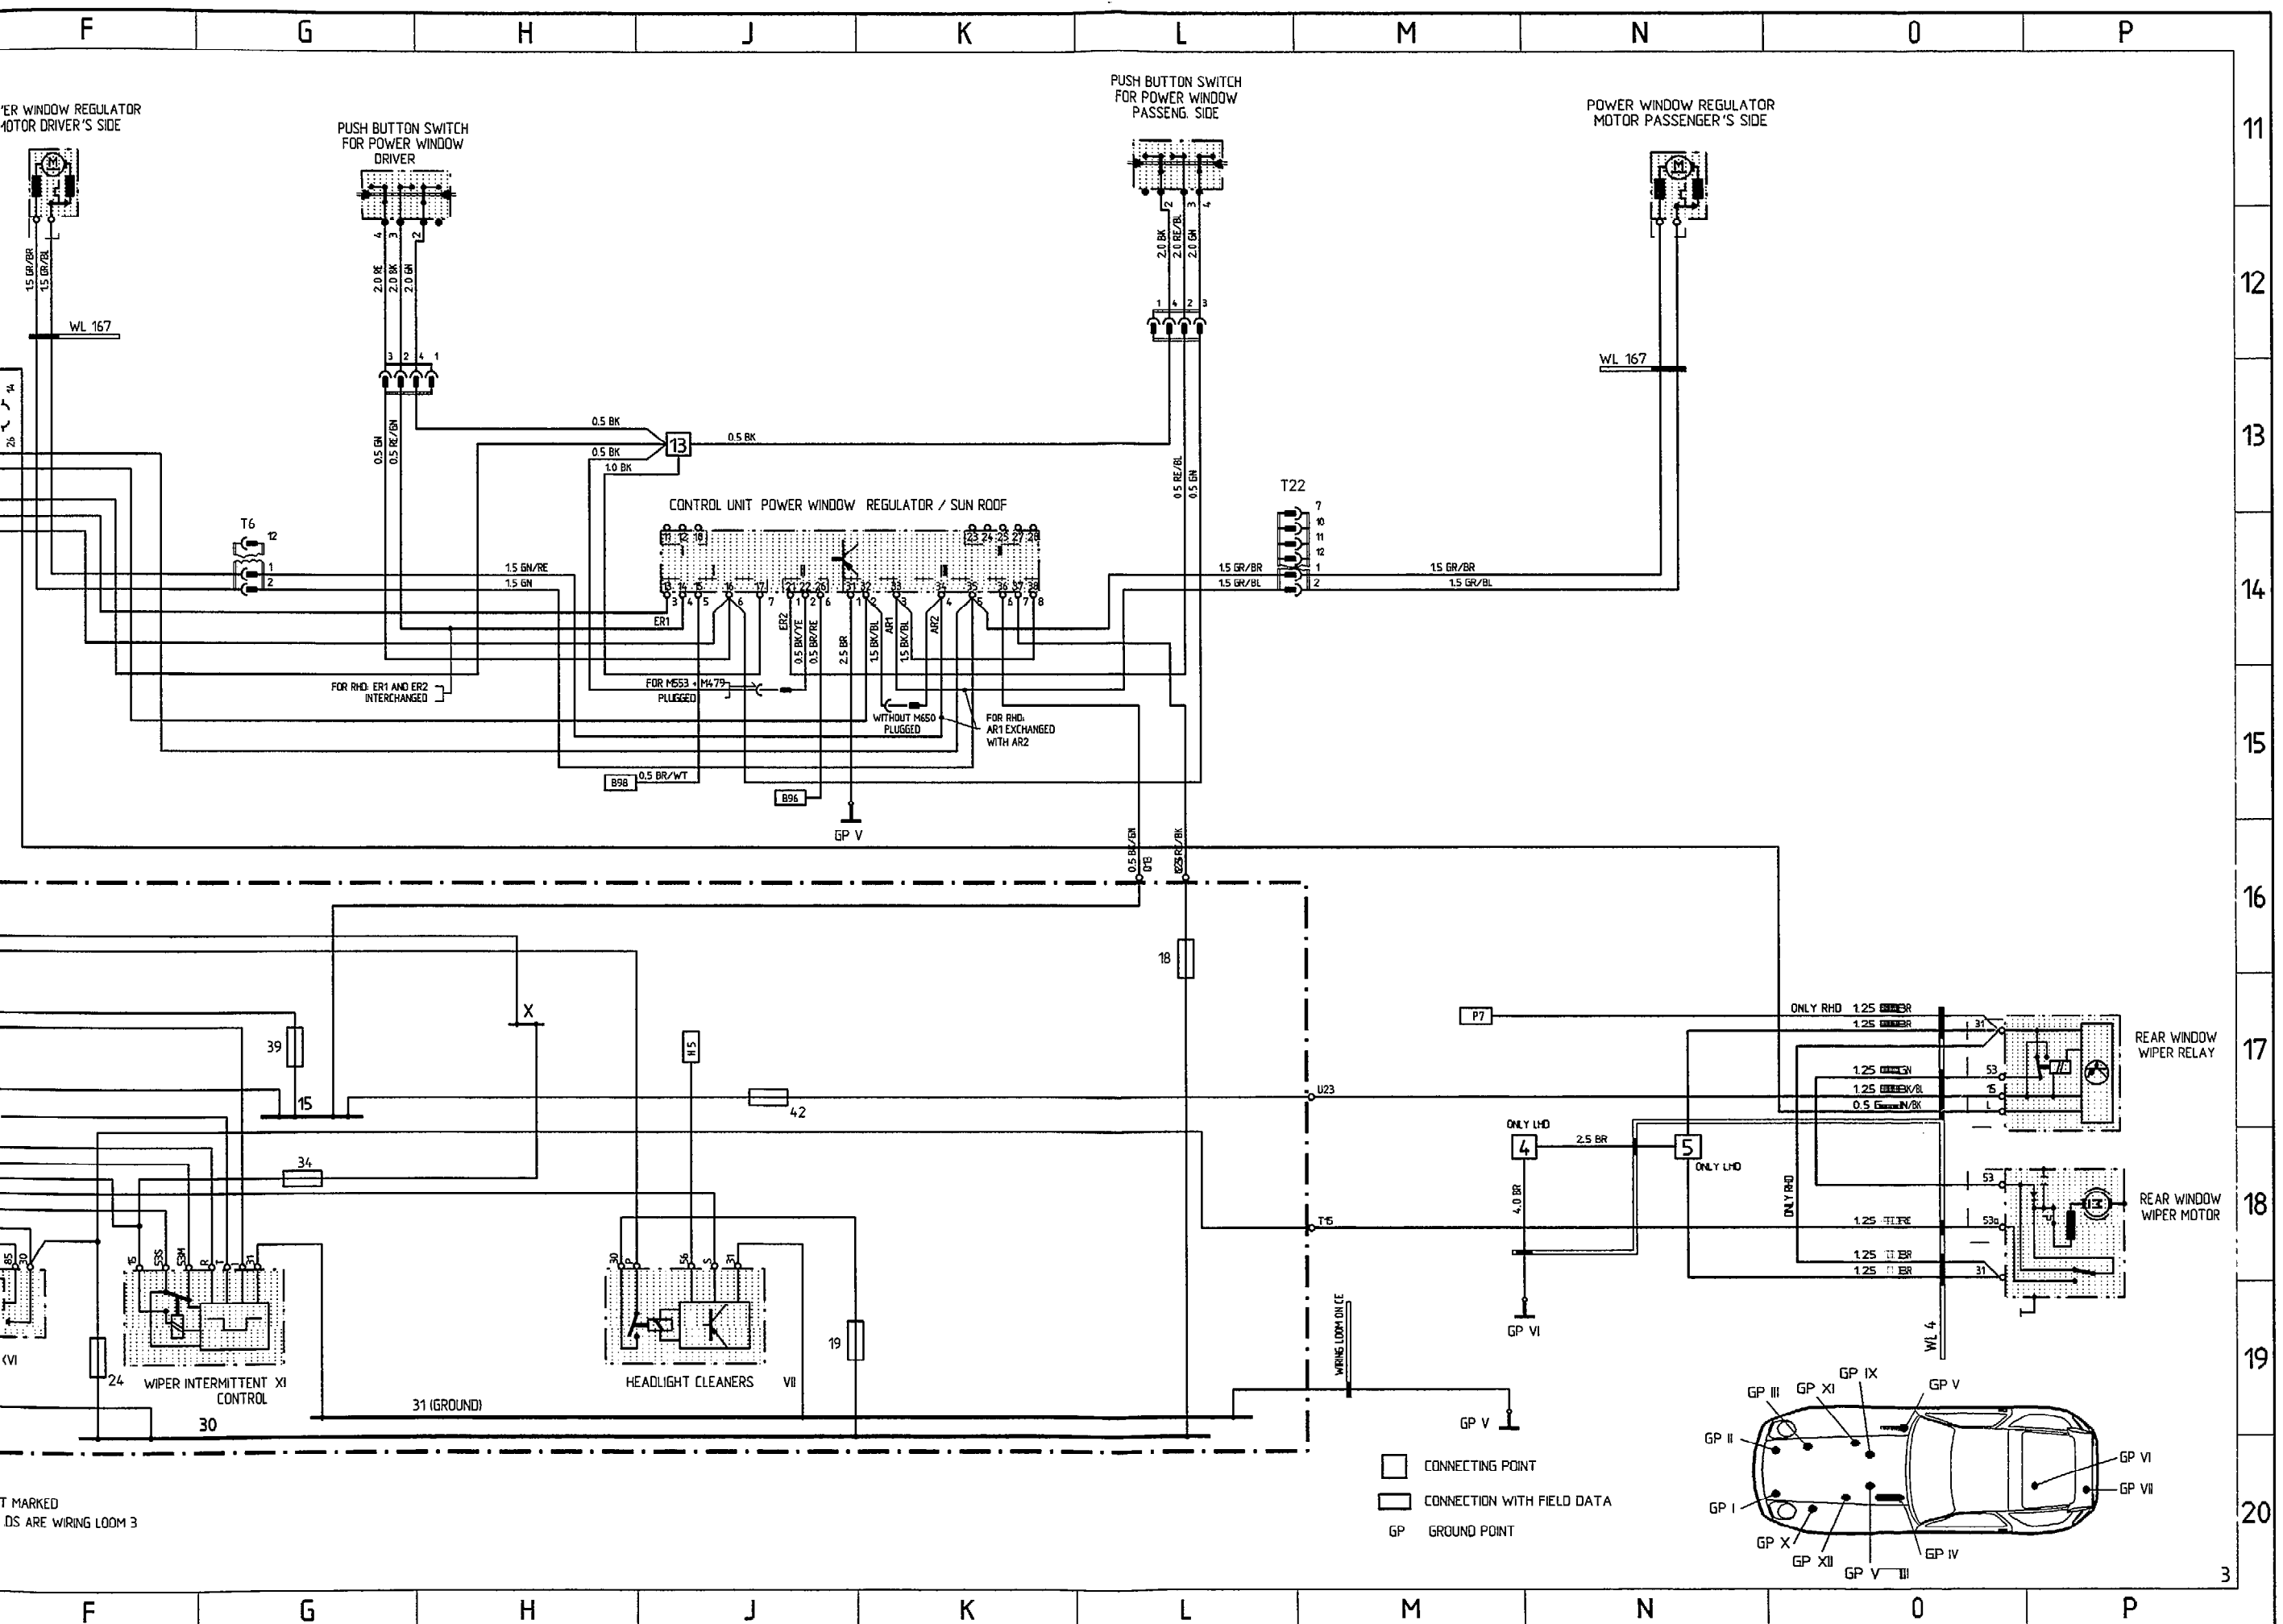

NOT MARKED  
 WIRING LOOM 3

BK = BLACK WT = WHITE RE = RED GN = GREEN YE = YELLOW GR = GREY BR = BROWN BL = BLUE VI = VIOLET PK = PINK

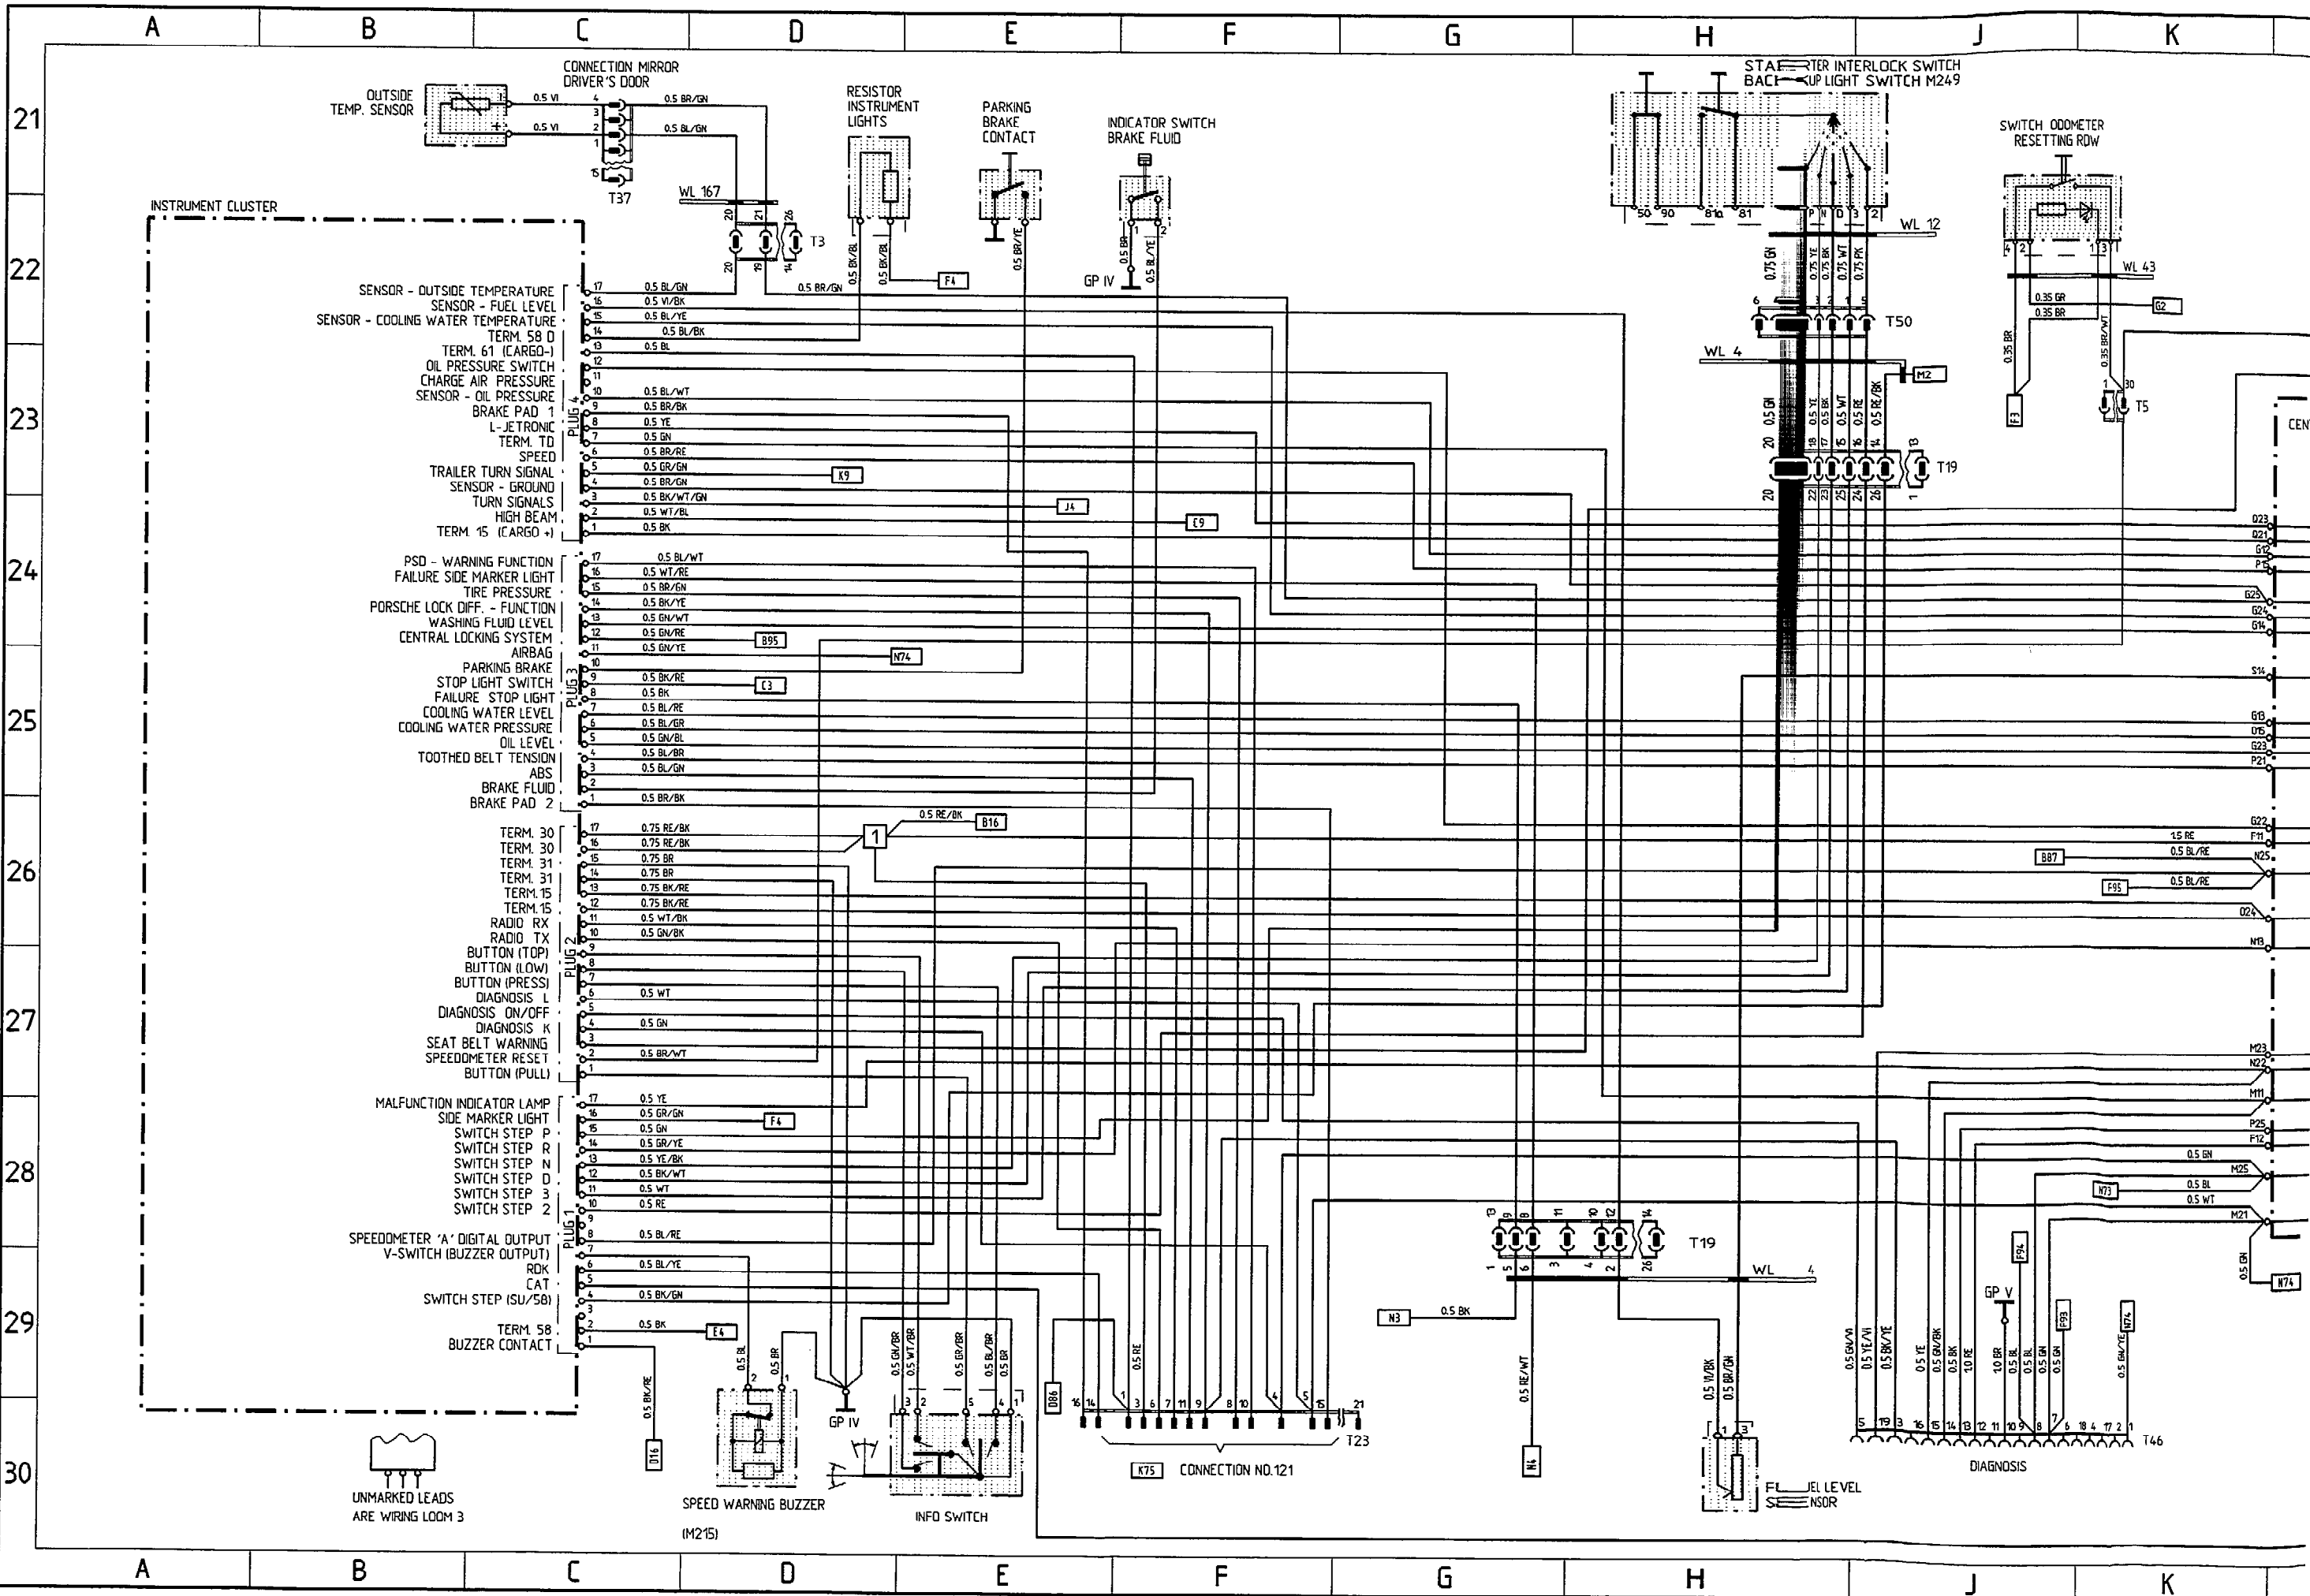

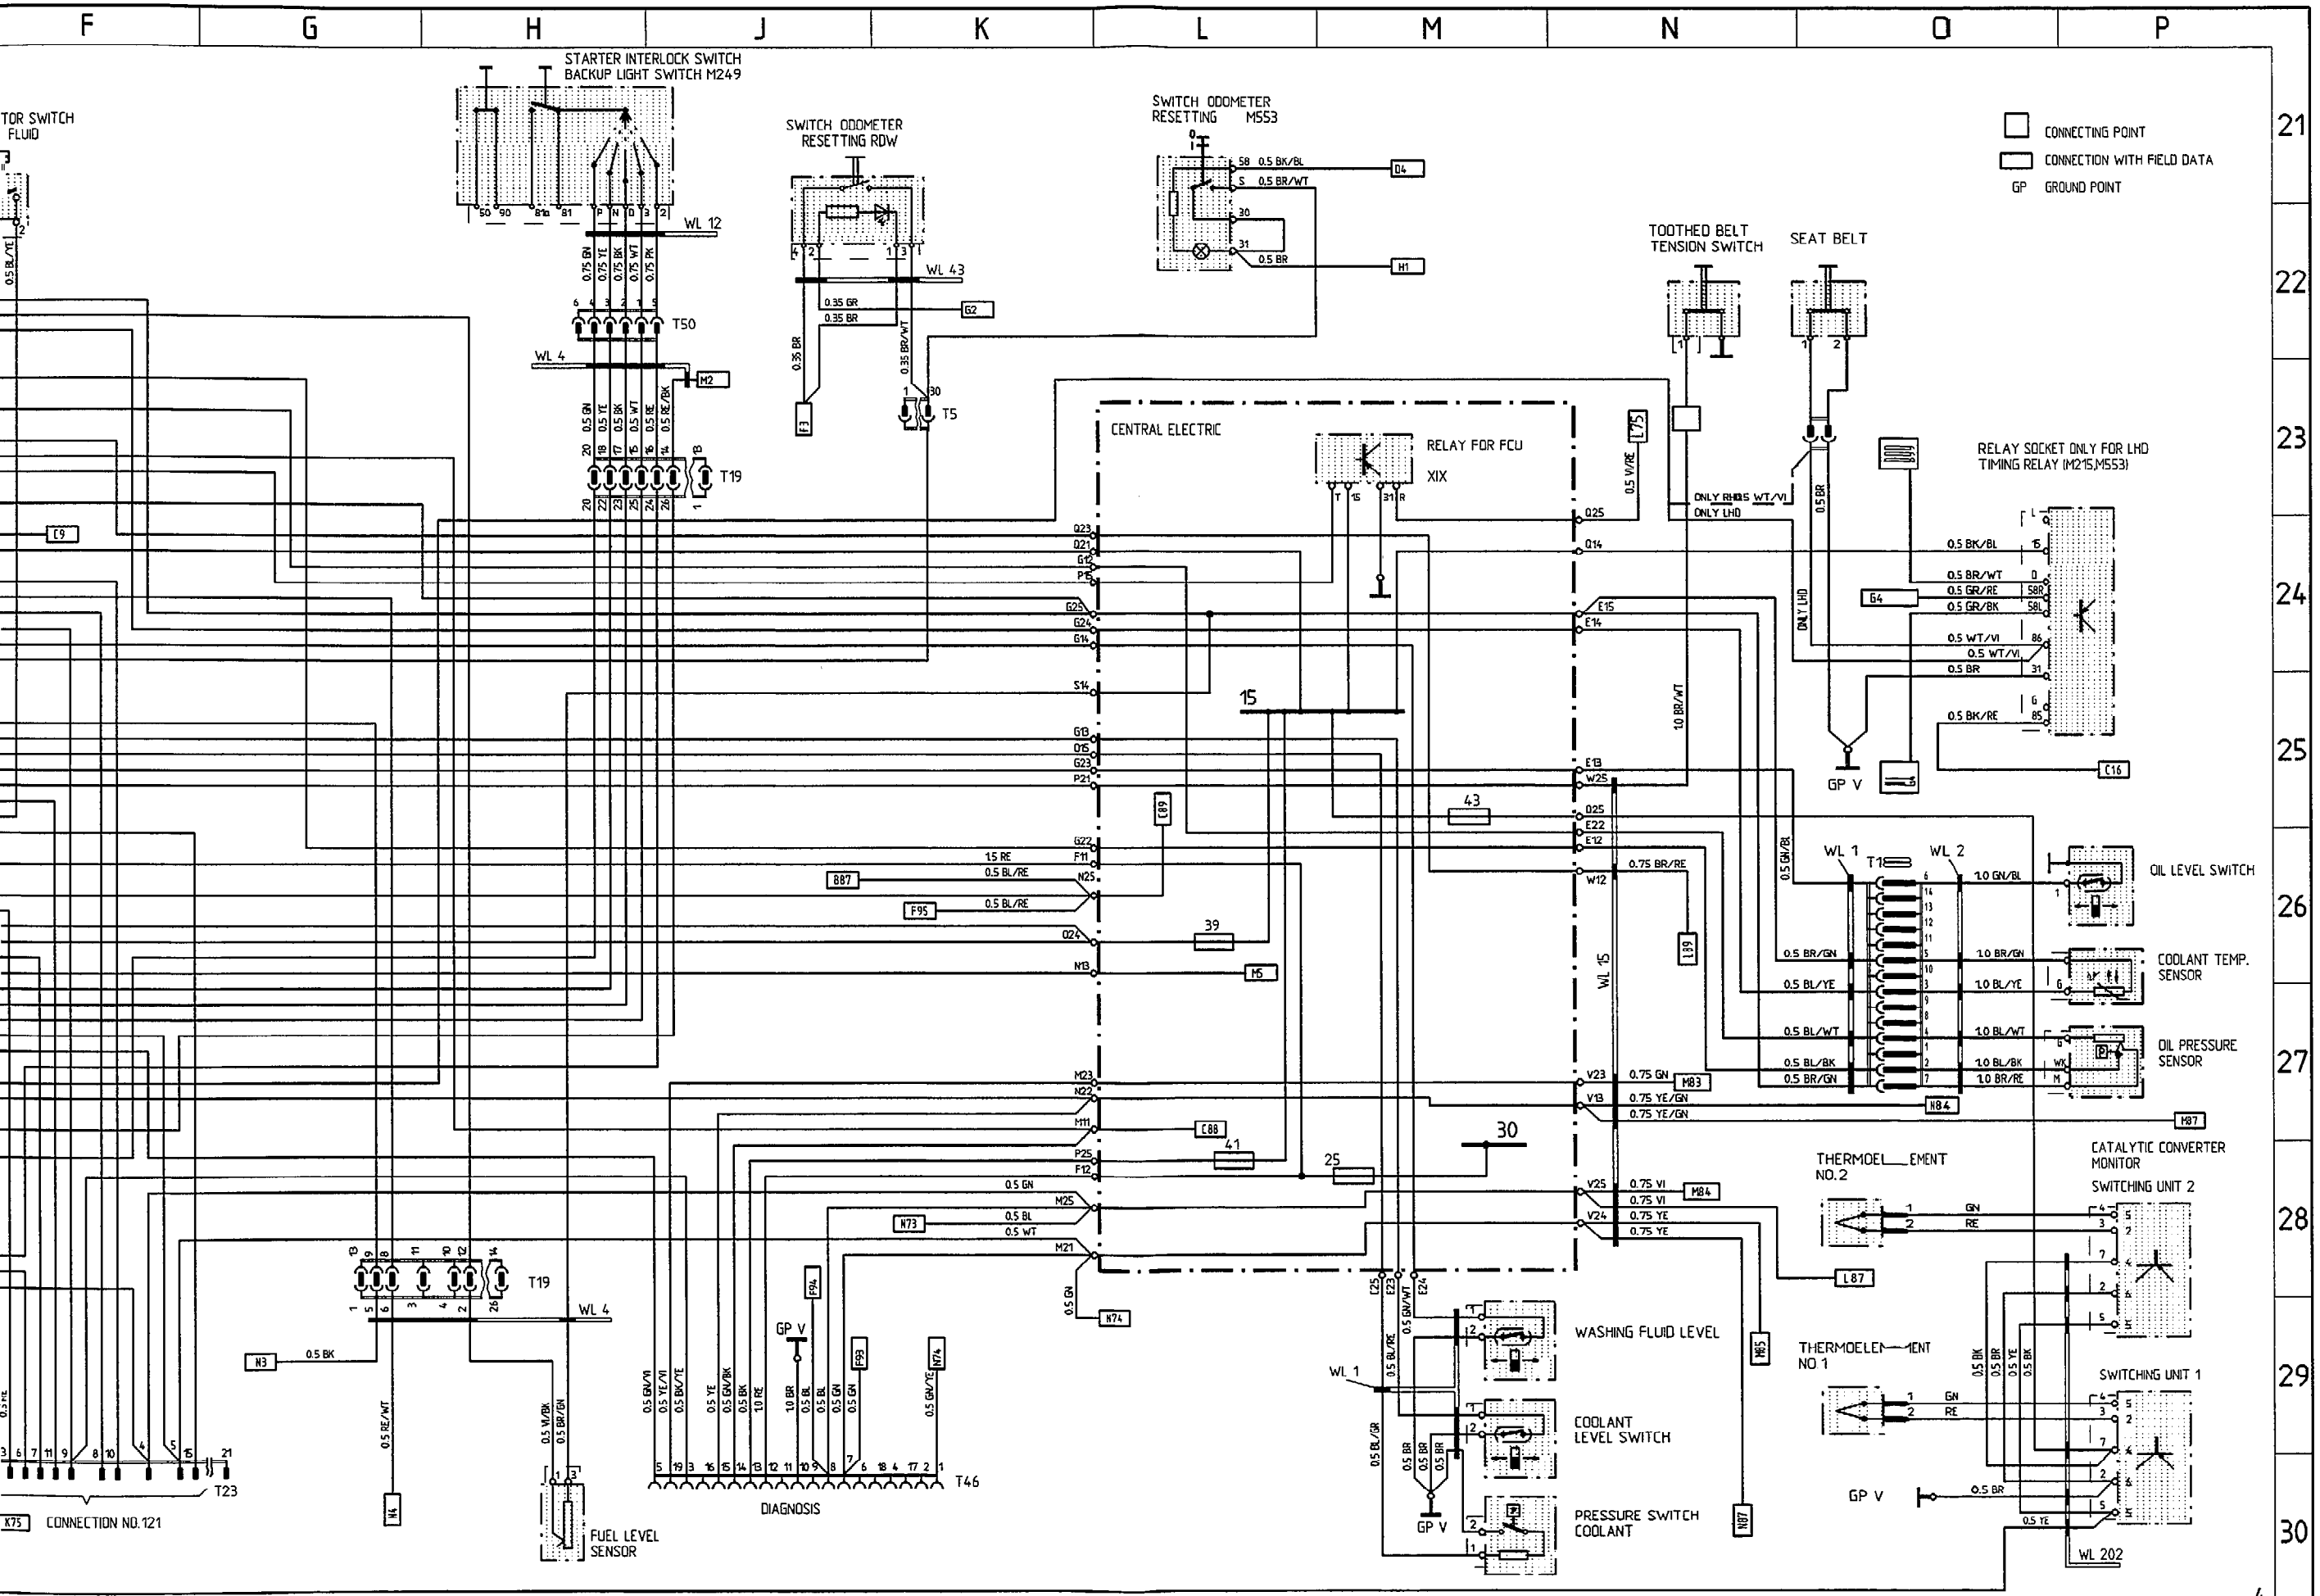

TOR SWITCH  
FLUID

STARTER INTERLOCK SWITCH  
BACKUP LIGHT SWITCH M249

SWITCH ODOMETER  
RESETTING RDW

SWITCH ODOMETER  
RESETTING M553

CENTRAL ELECTRIC

RELAY FOR FCU  
XIX

TOOTHED BELT  
TENSION SWITCH

SEAT BELT

RELAY SOCKET ONLY FOR LHD  
TIMING RELAY (M215/M553)

OIL LEVEL SWITCH

COOLANT TEMP.  
SENSOR

OIL PRESSURE  
SENSOR

THERMOELEMENT  
NO. 2

CATALYTIC CONVERTER  
MONITOR  
SWITCHING UNIT 2

THERMOELEMENT  
NO. 1

SWITCHING UNIT 1

K75 CONNECTION NO. 121

FUEL LEVEL  
SENSOR


DIAGNOSIS


WASHING FLUID LEVEL


COOLANT  
LEVEL SWITCH


PRESSURE SWITCH  
COOLANT

BK = BLACK WT = WHITE RE = RED GN = GREEN YE = YELLOW GR = GREY BR = BROWN BL = BLUE VI = VIOLET PK = PINK

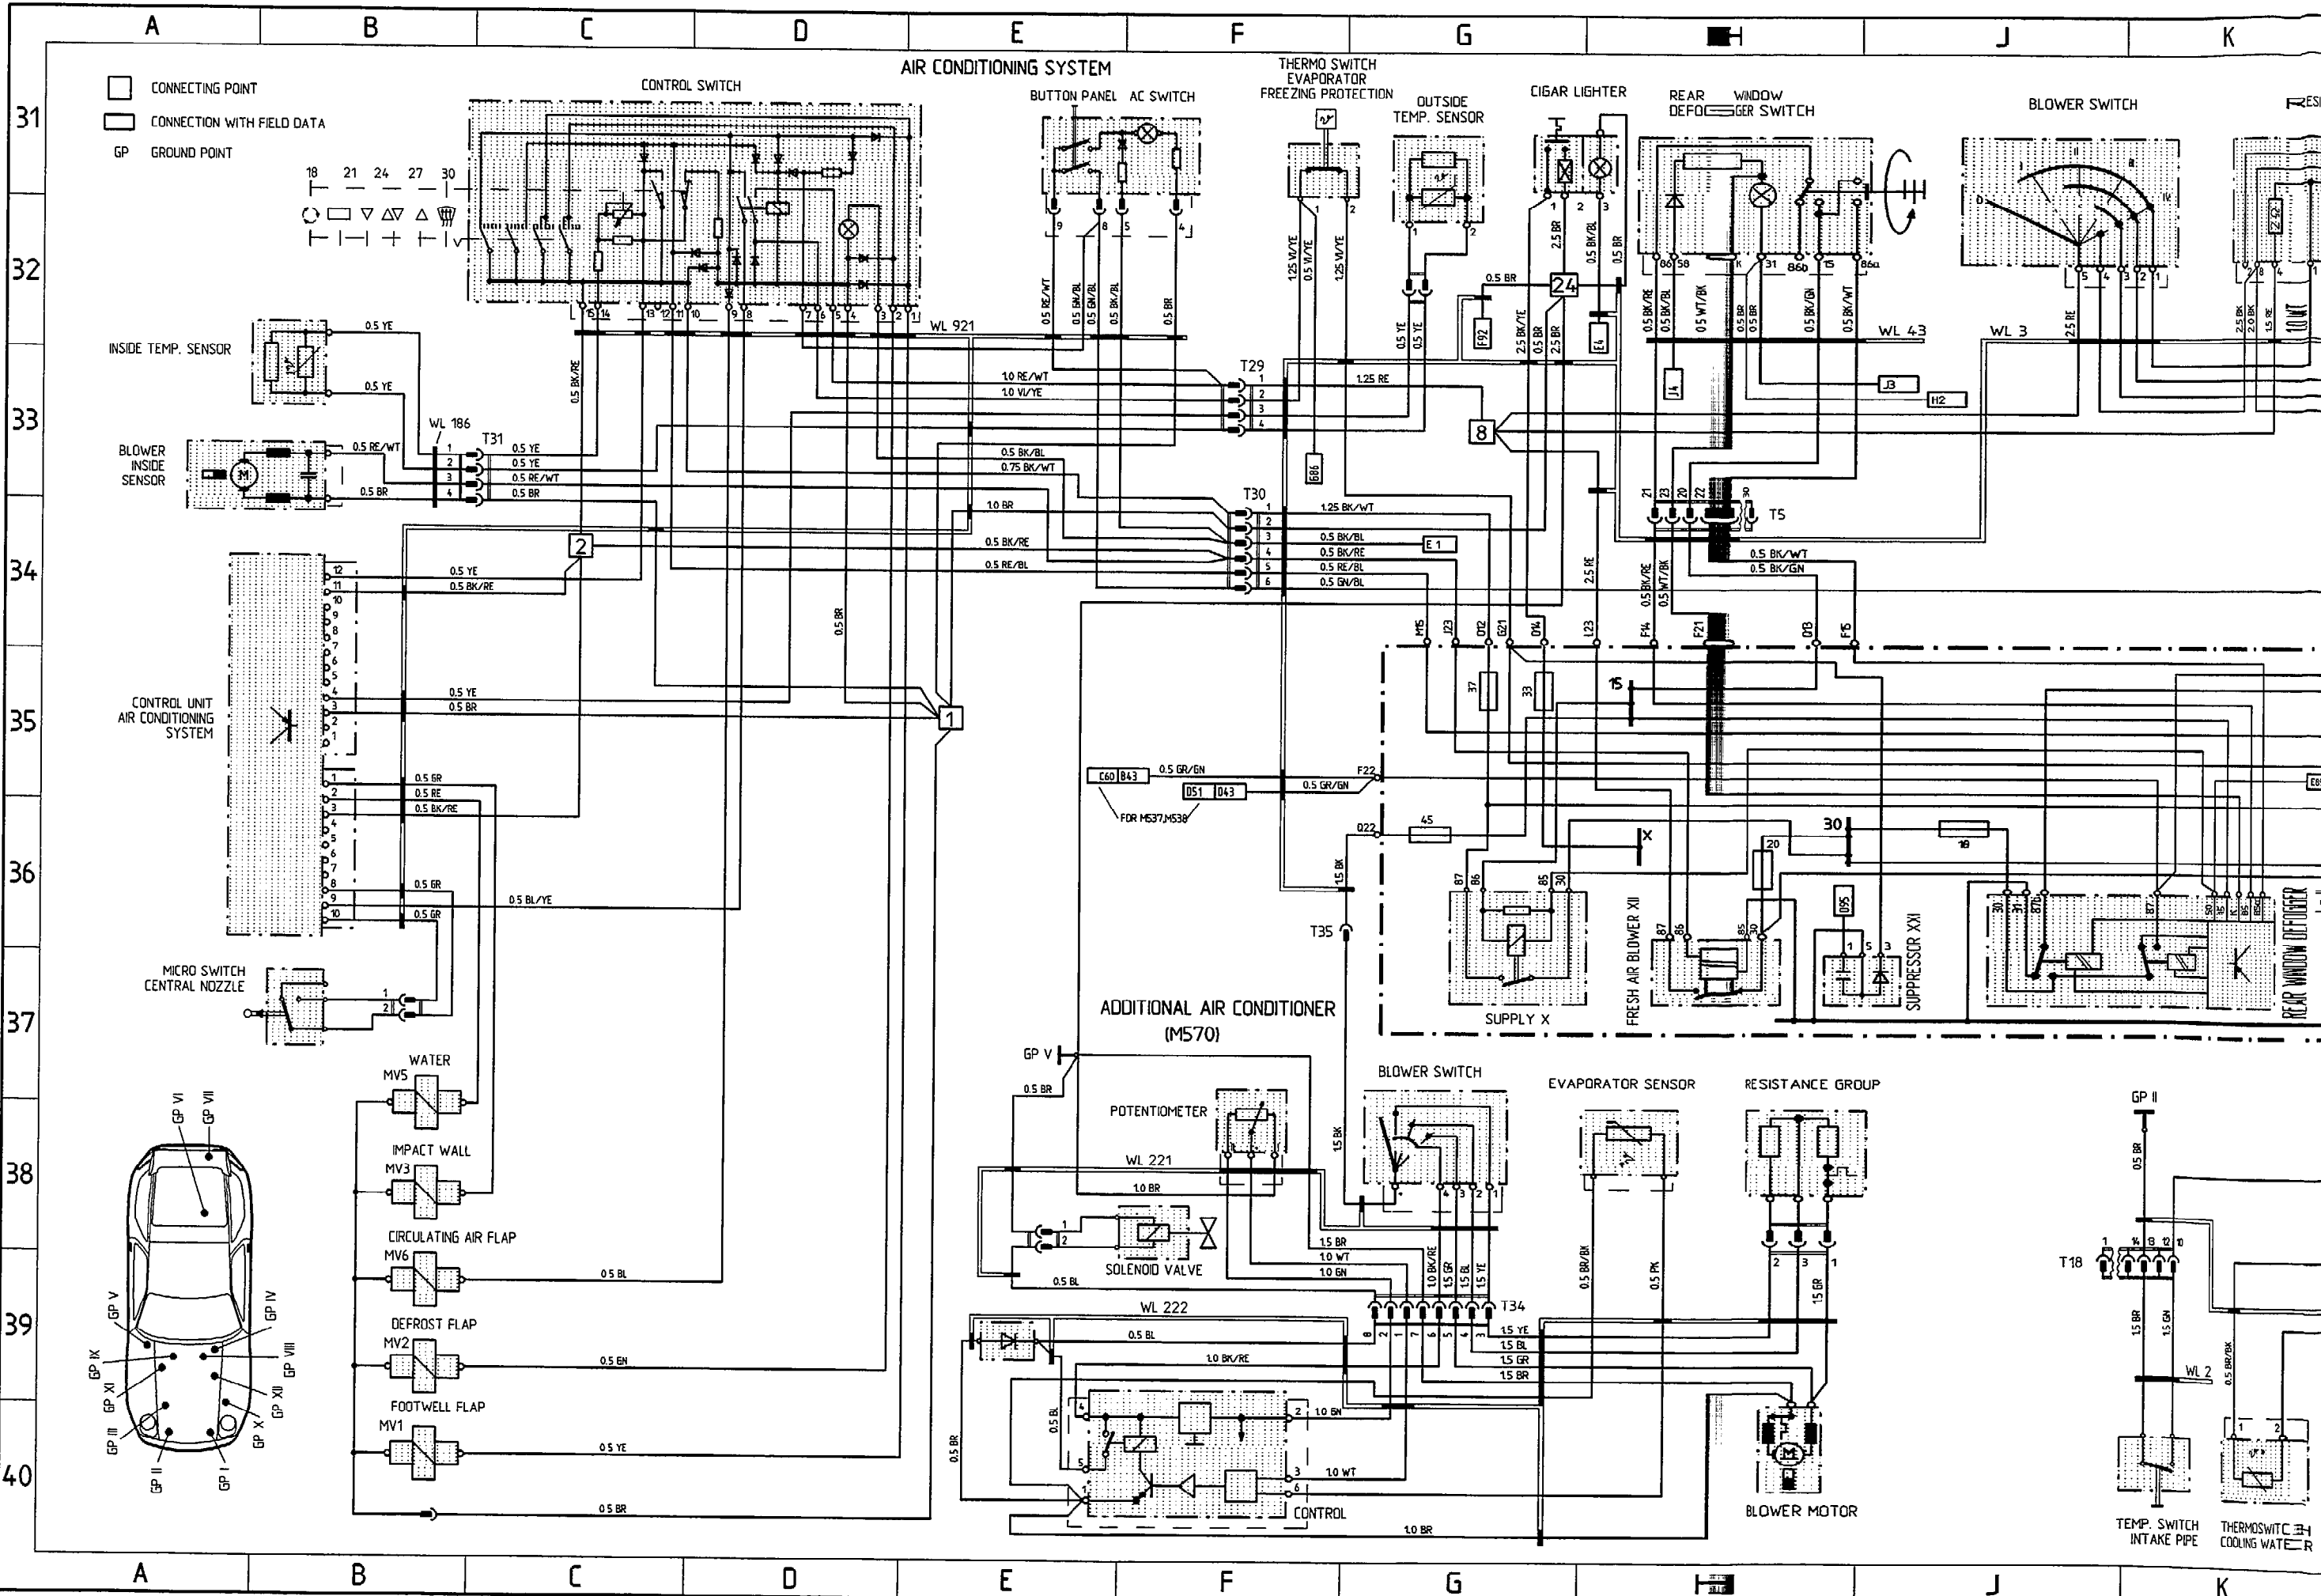


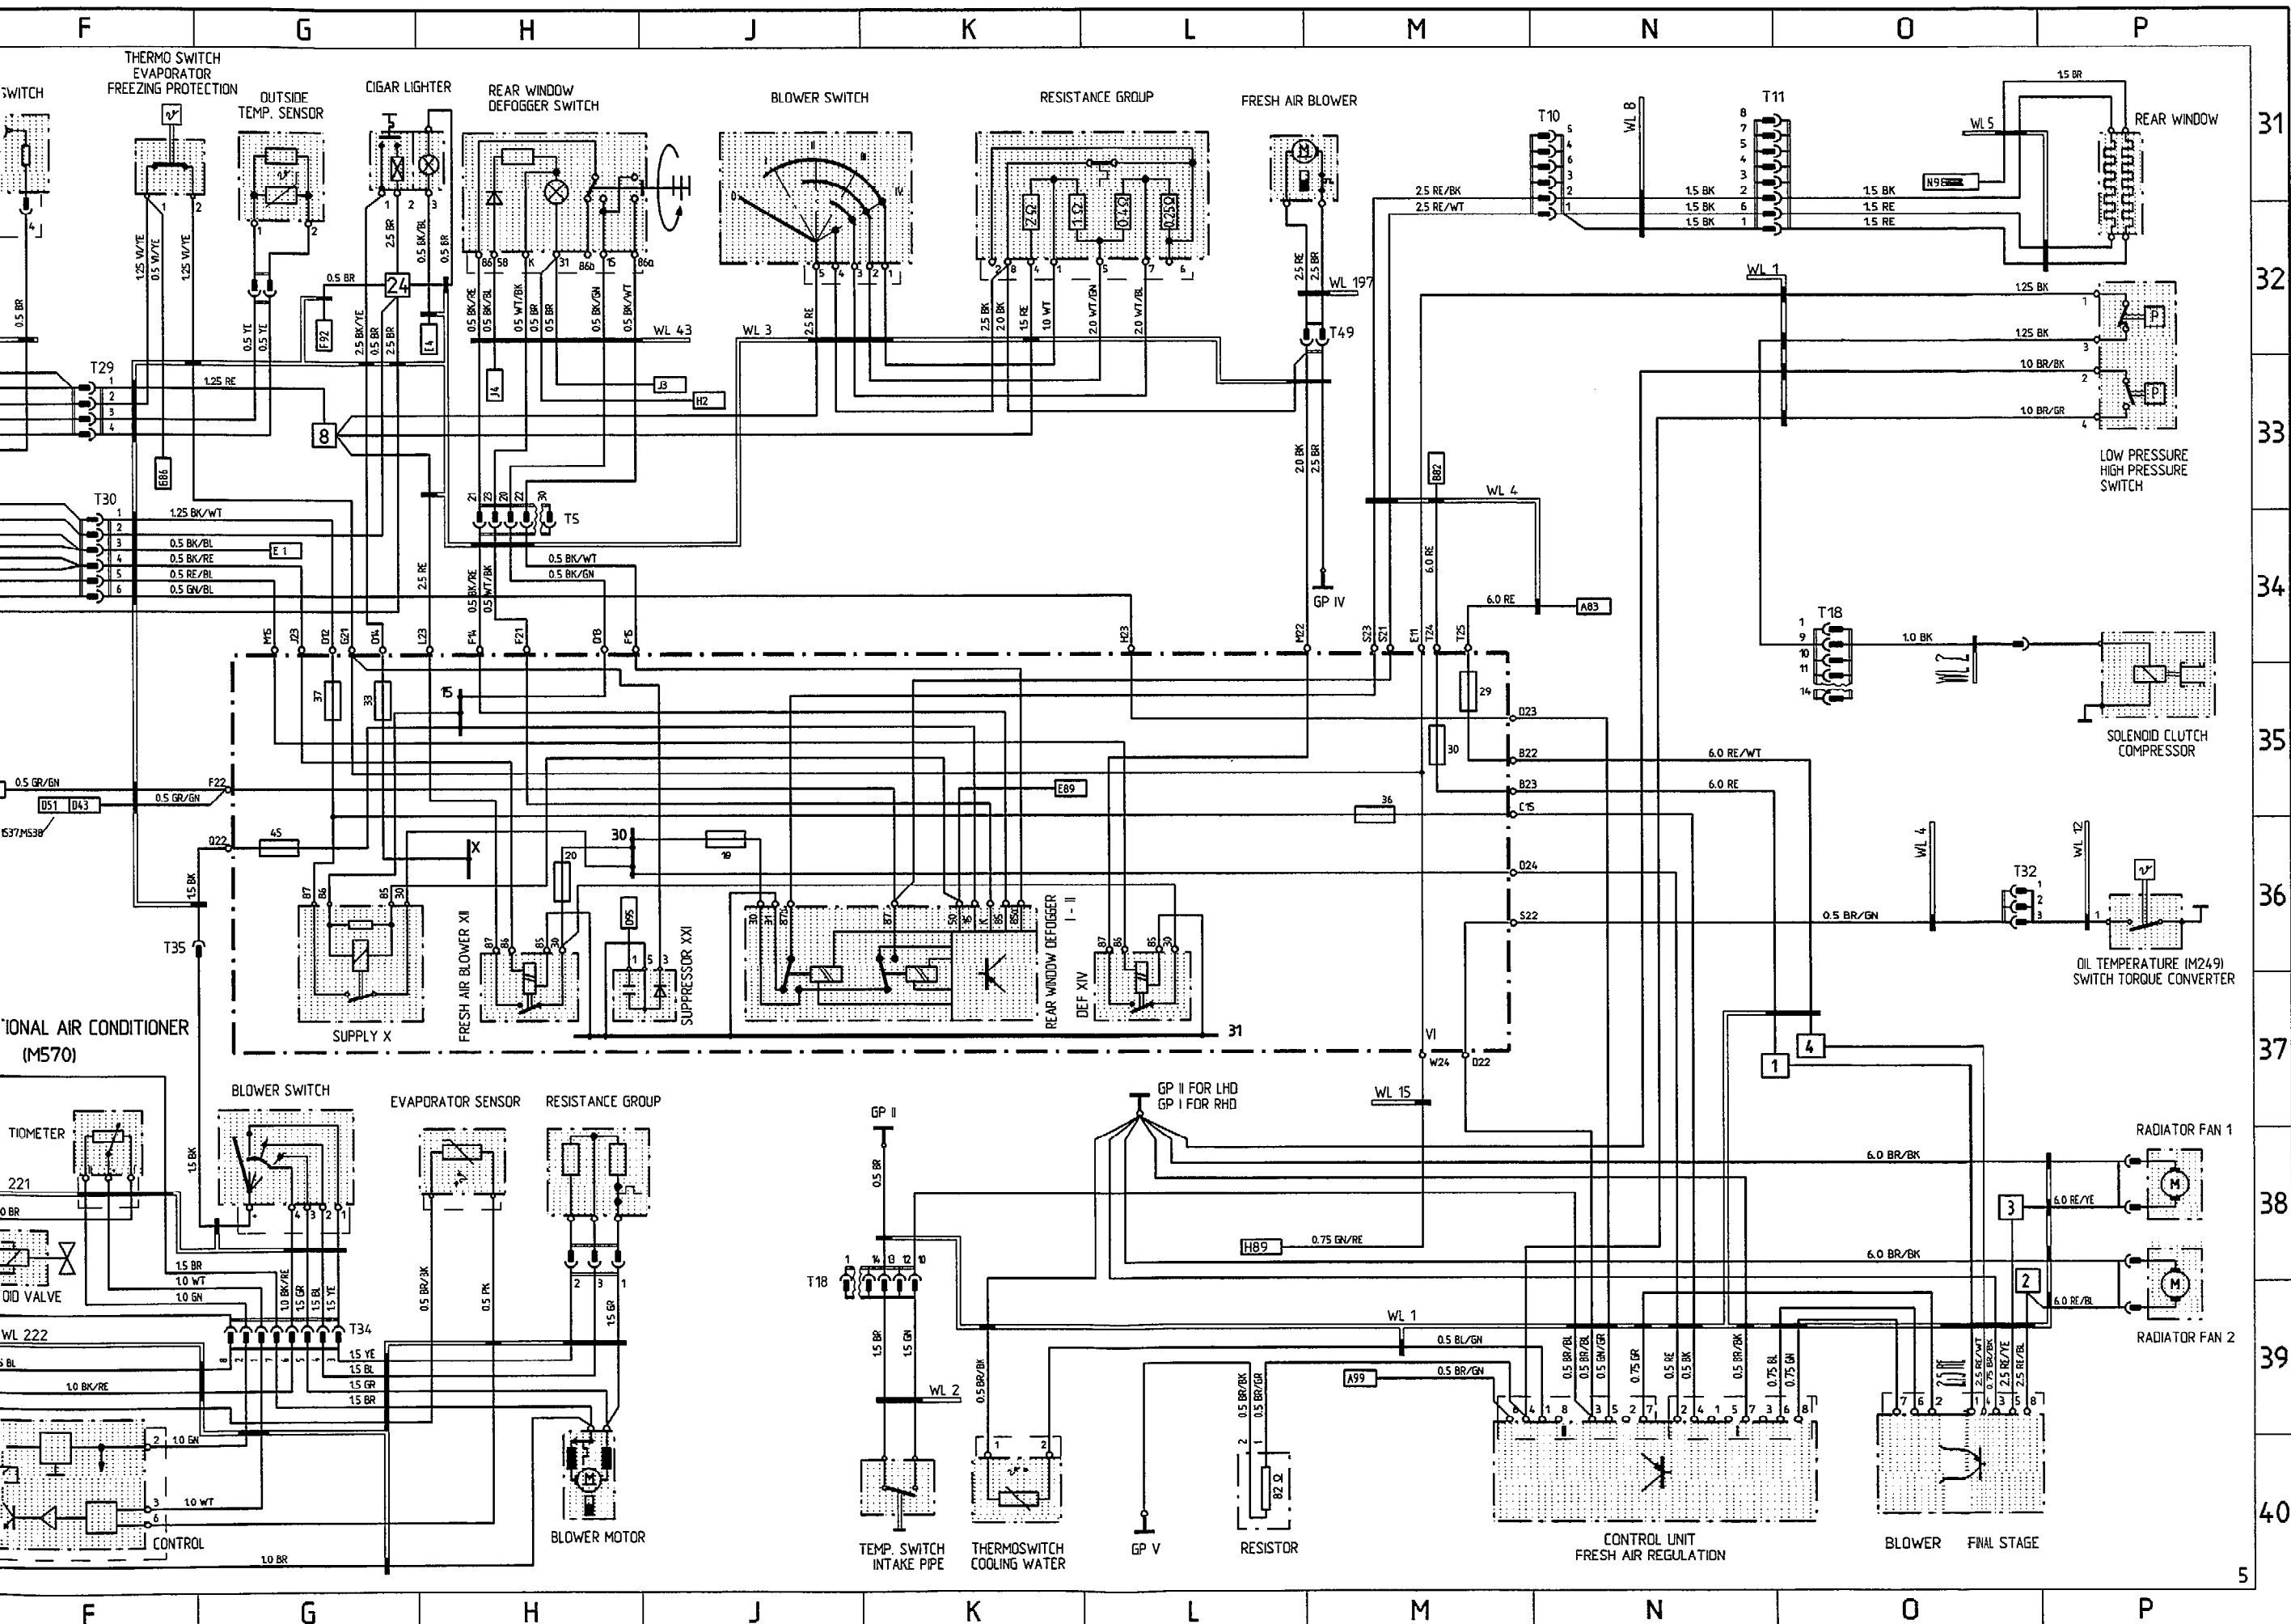

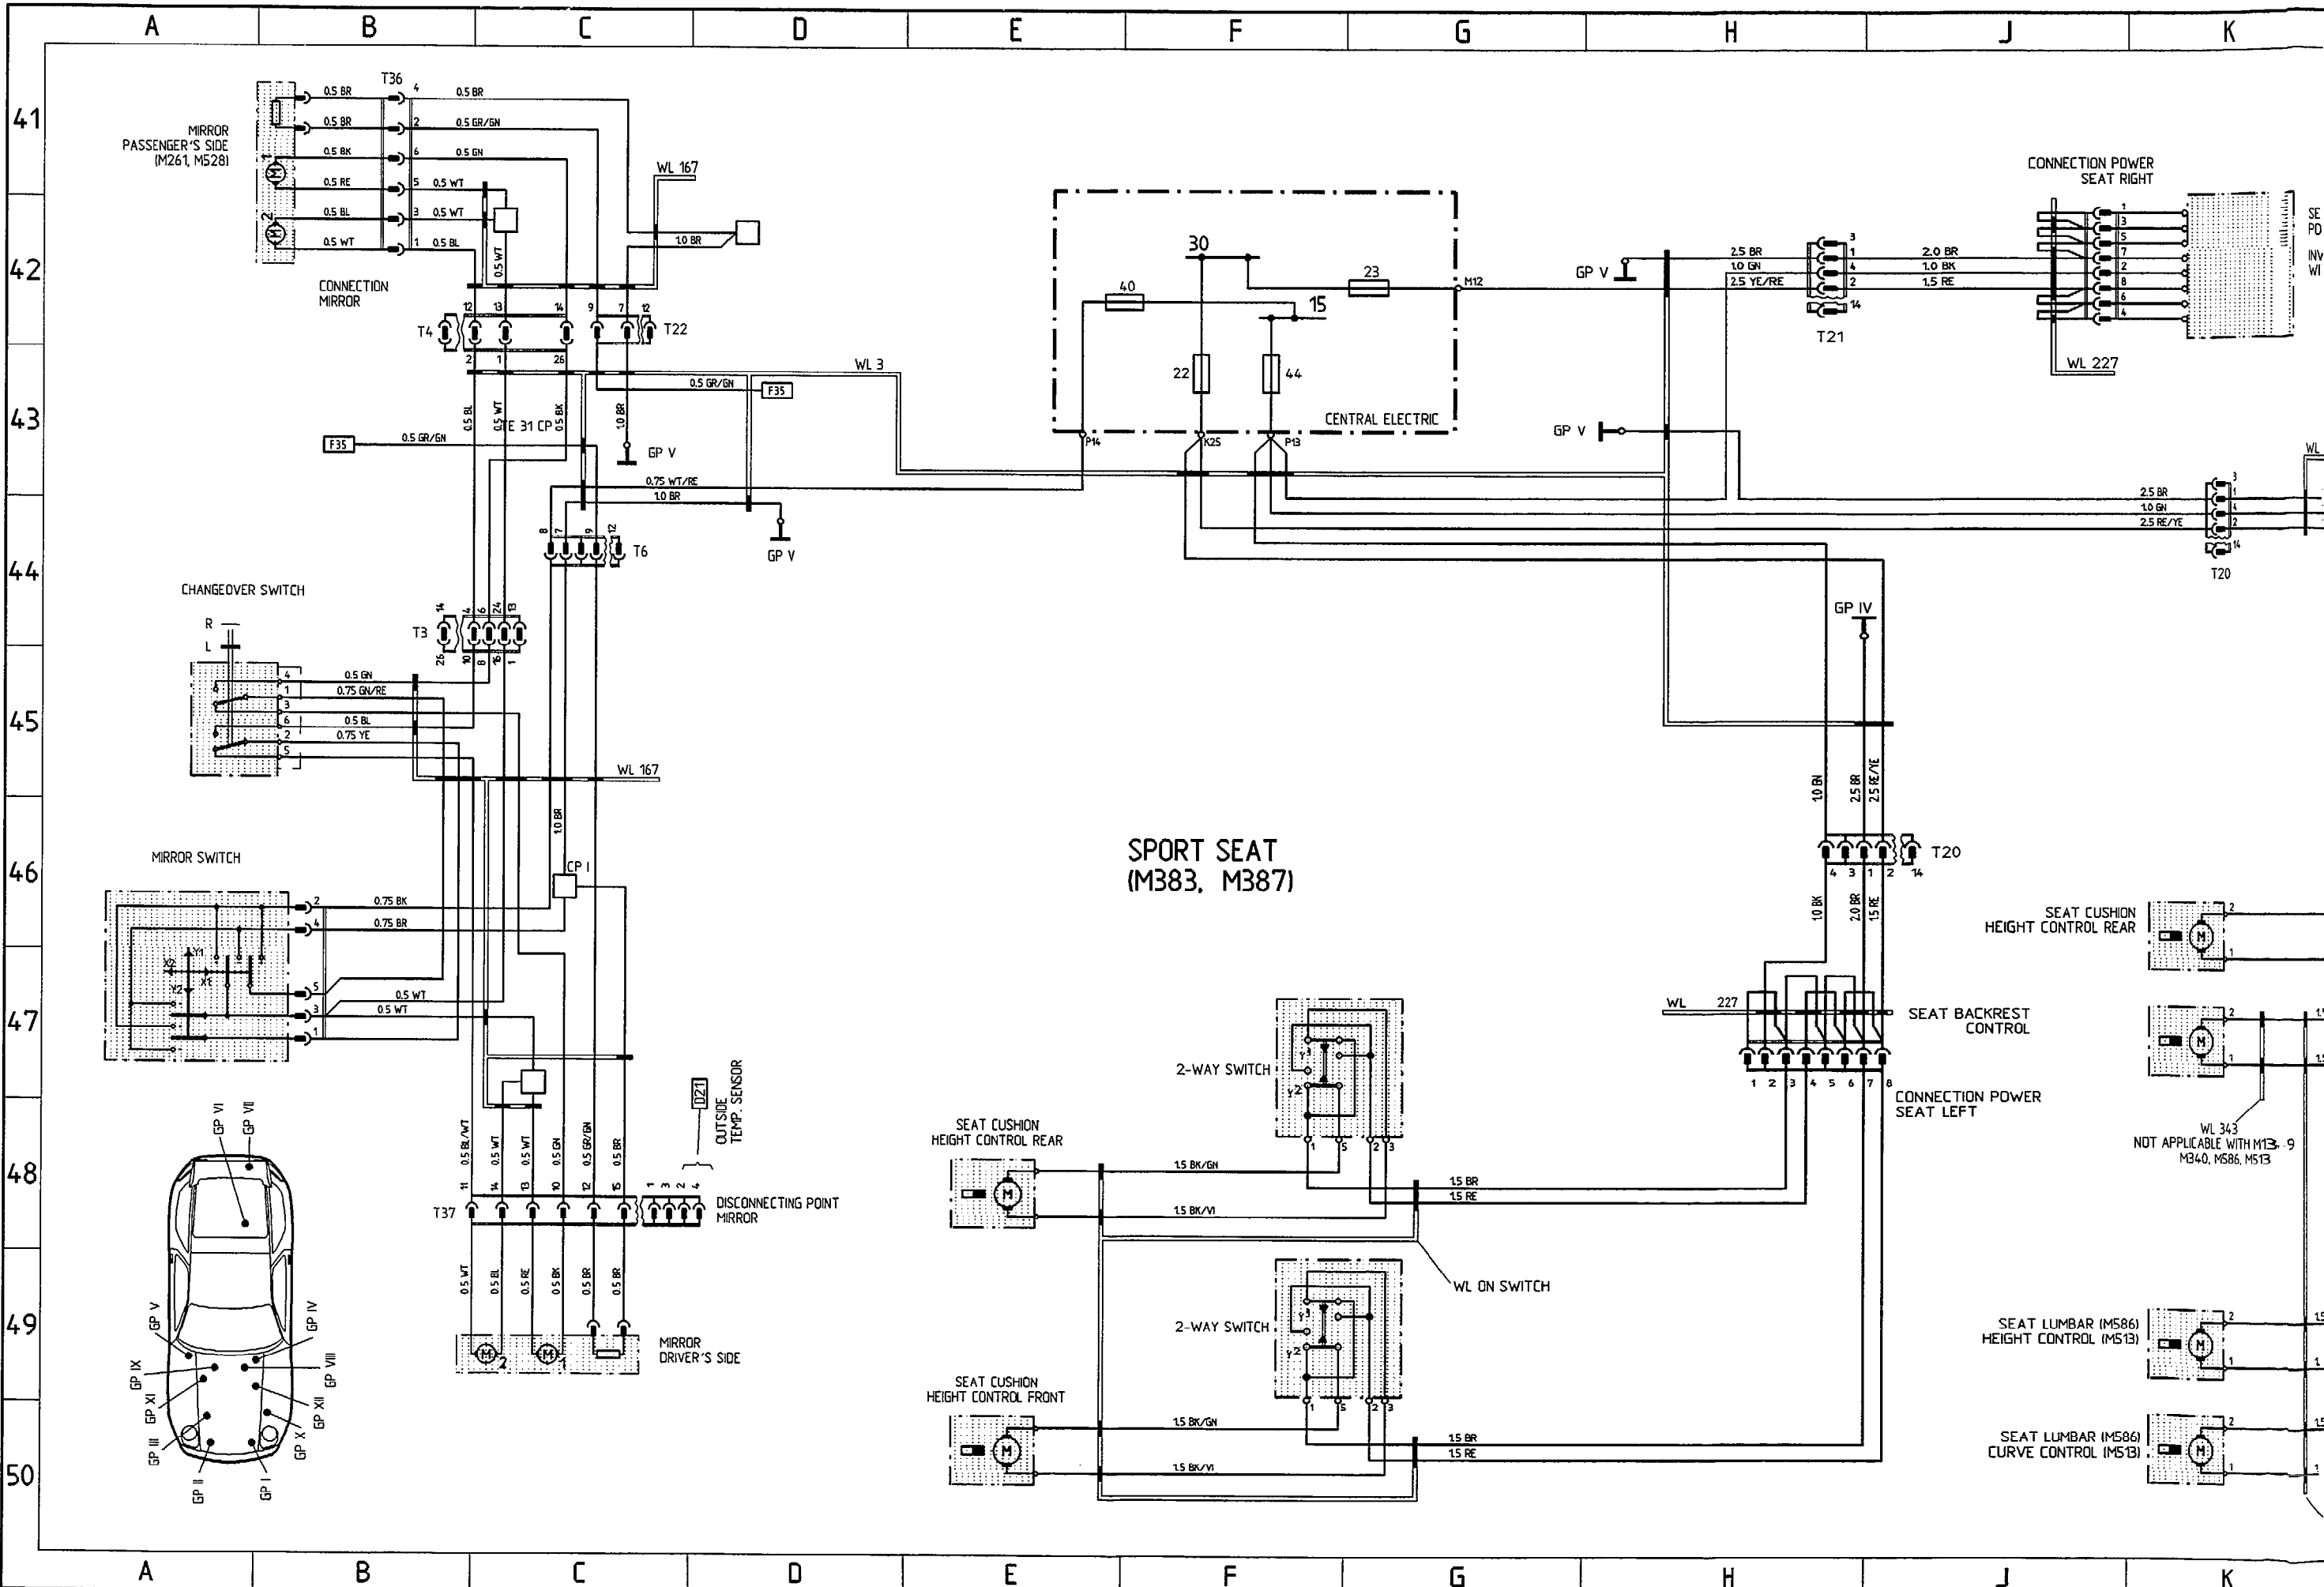


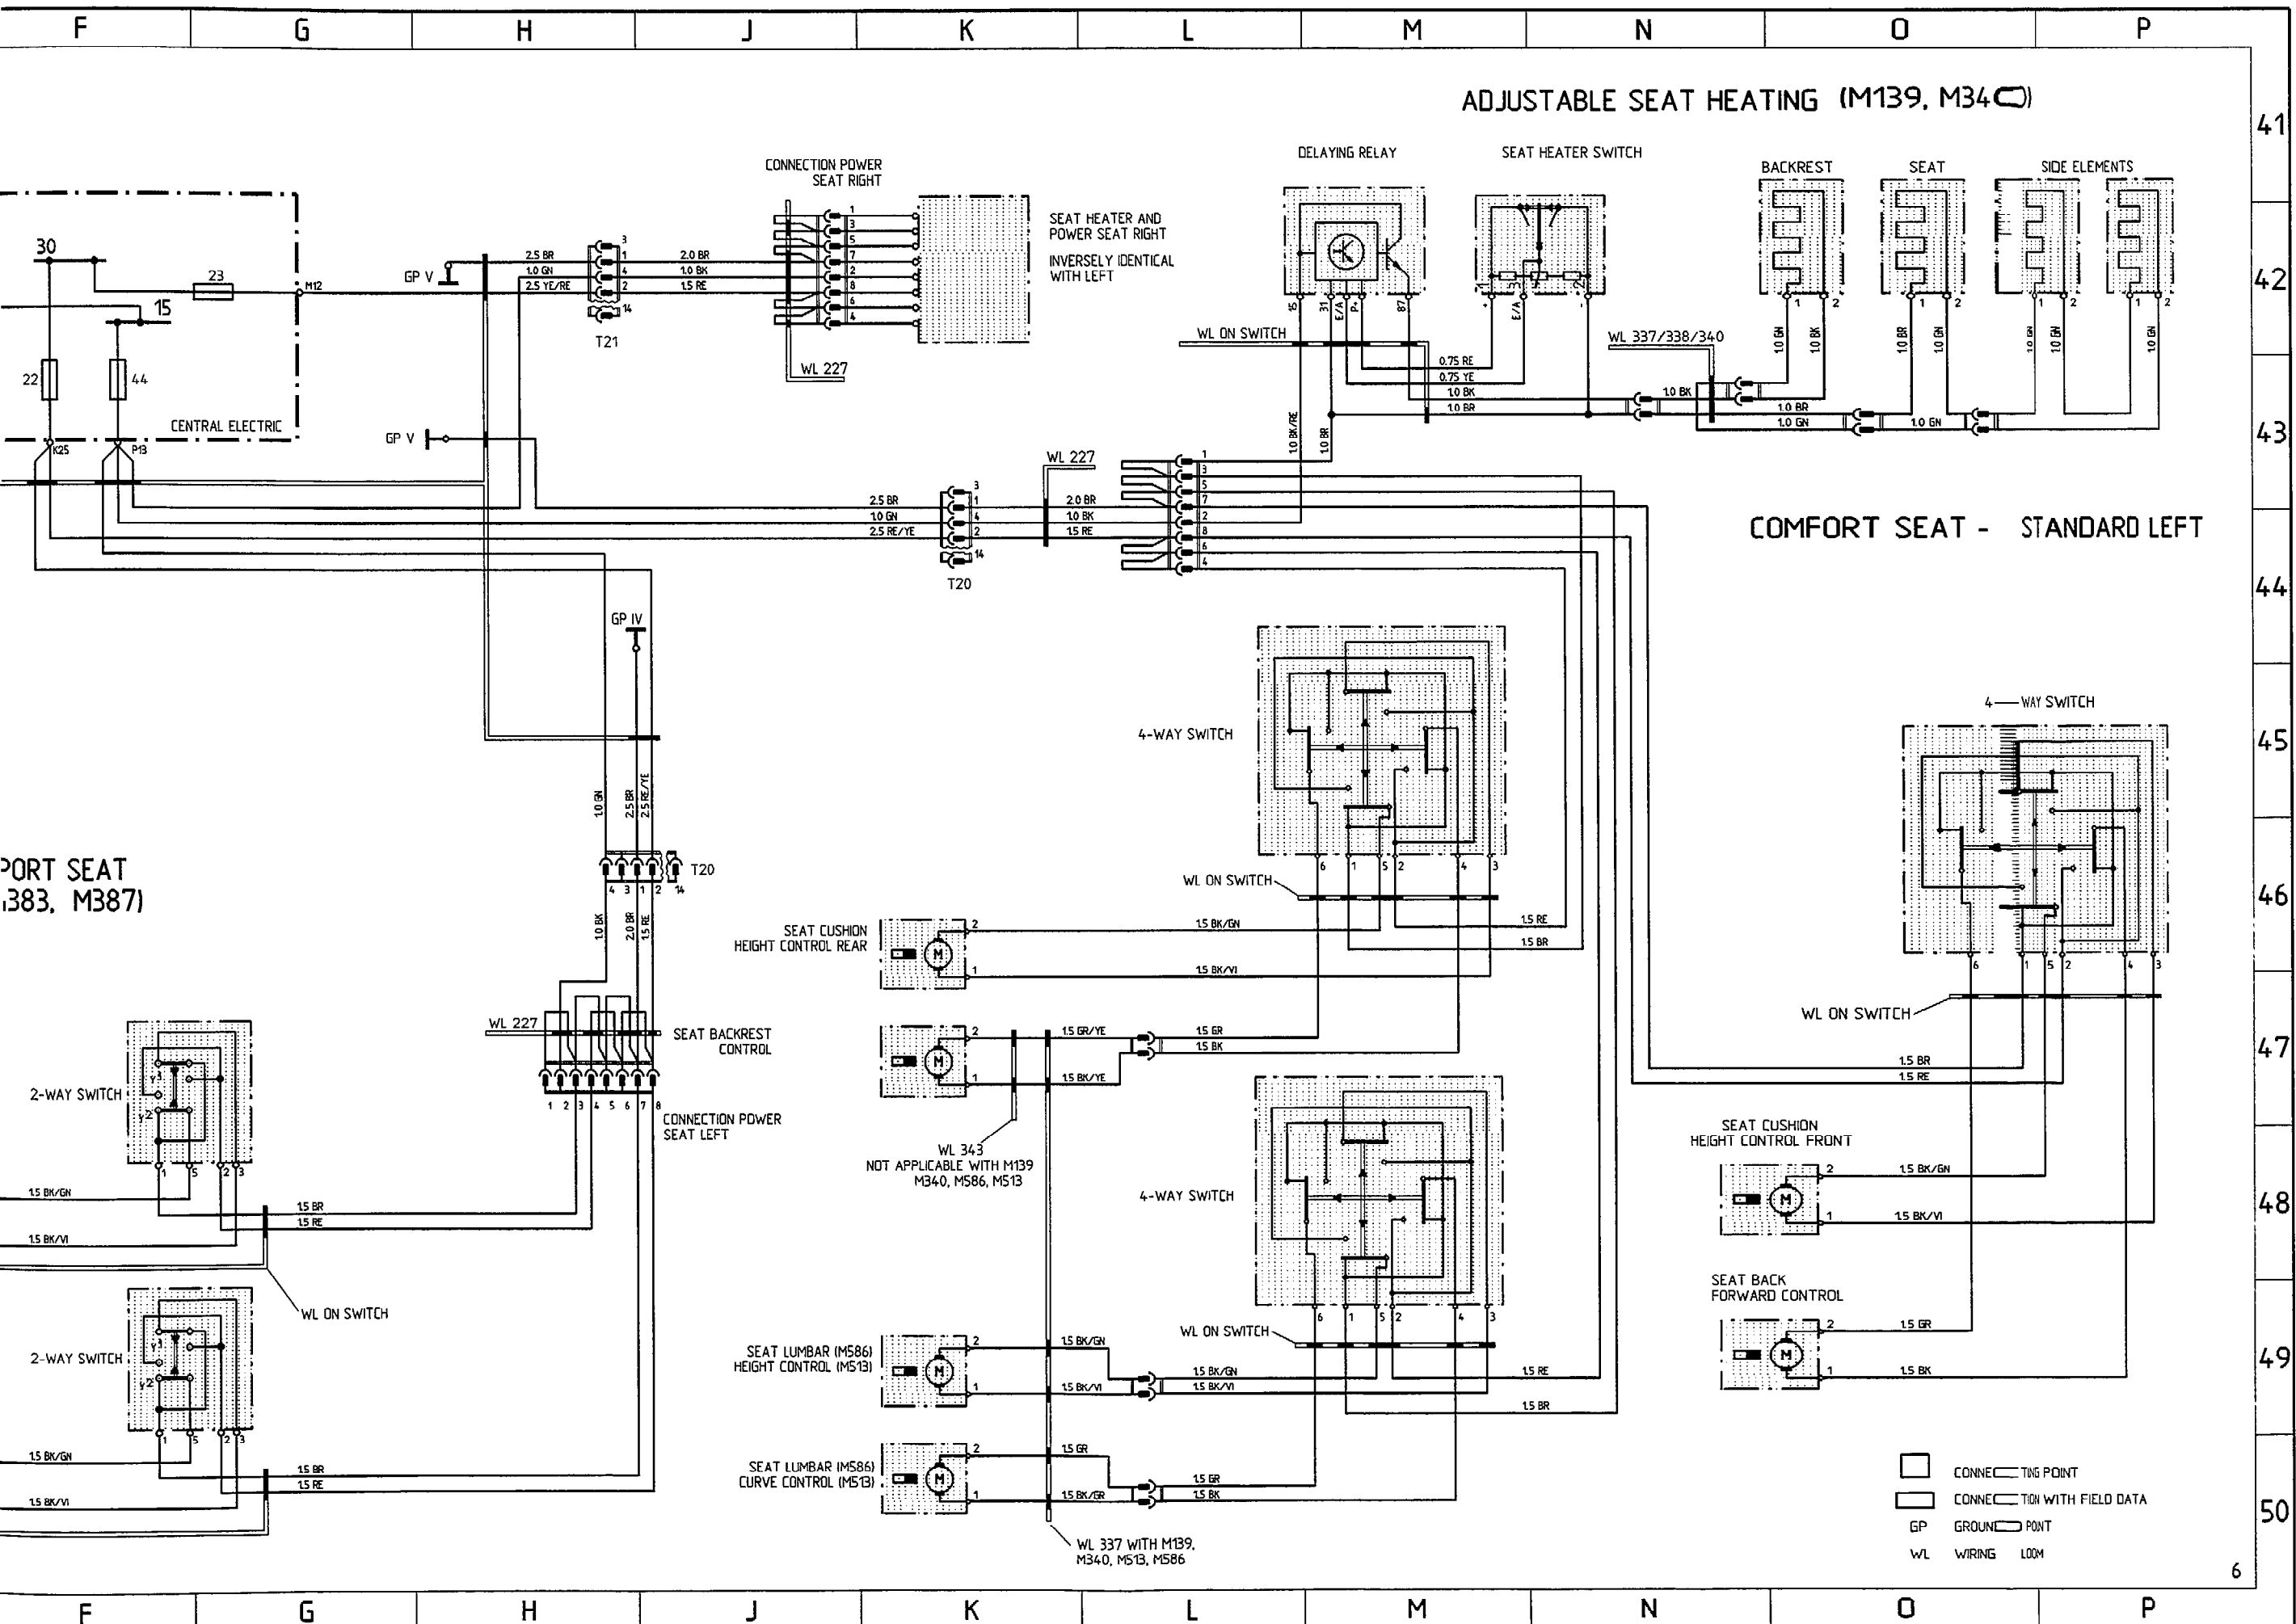



BK = BLACK WT = WHITE RE = RED GN = GREEN YE = YELLOW GR = GREY BR = BROWN BL = BLUE VI = VIOLET PK = PINK

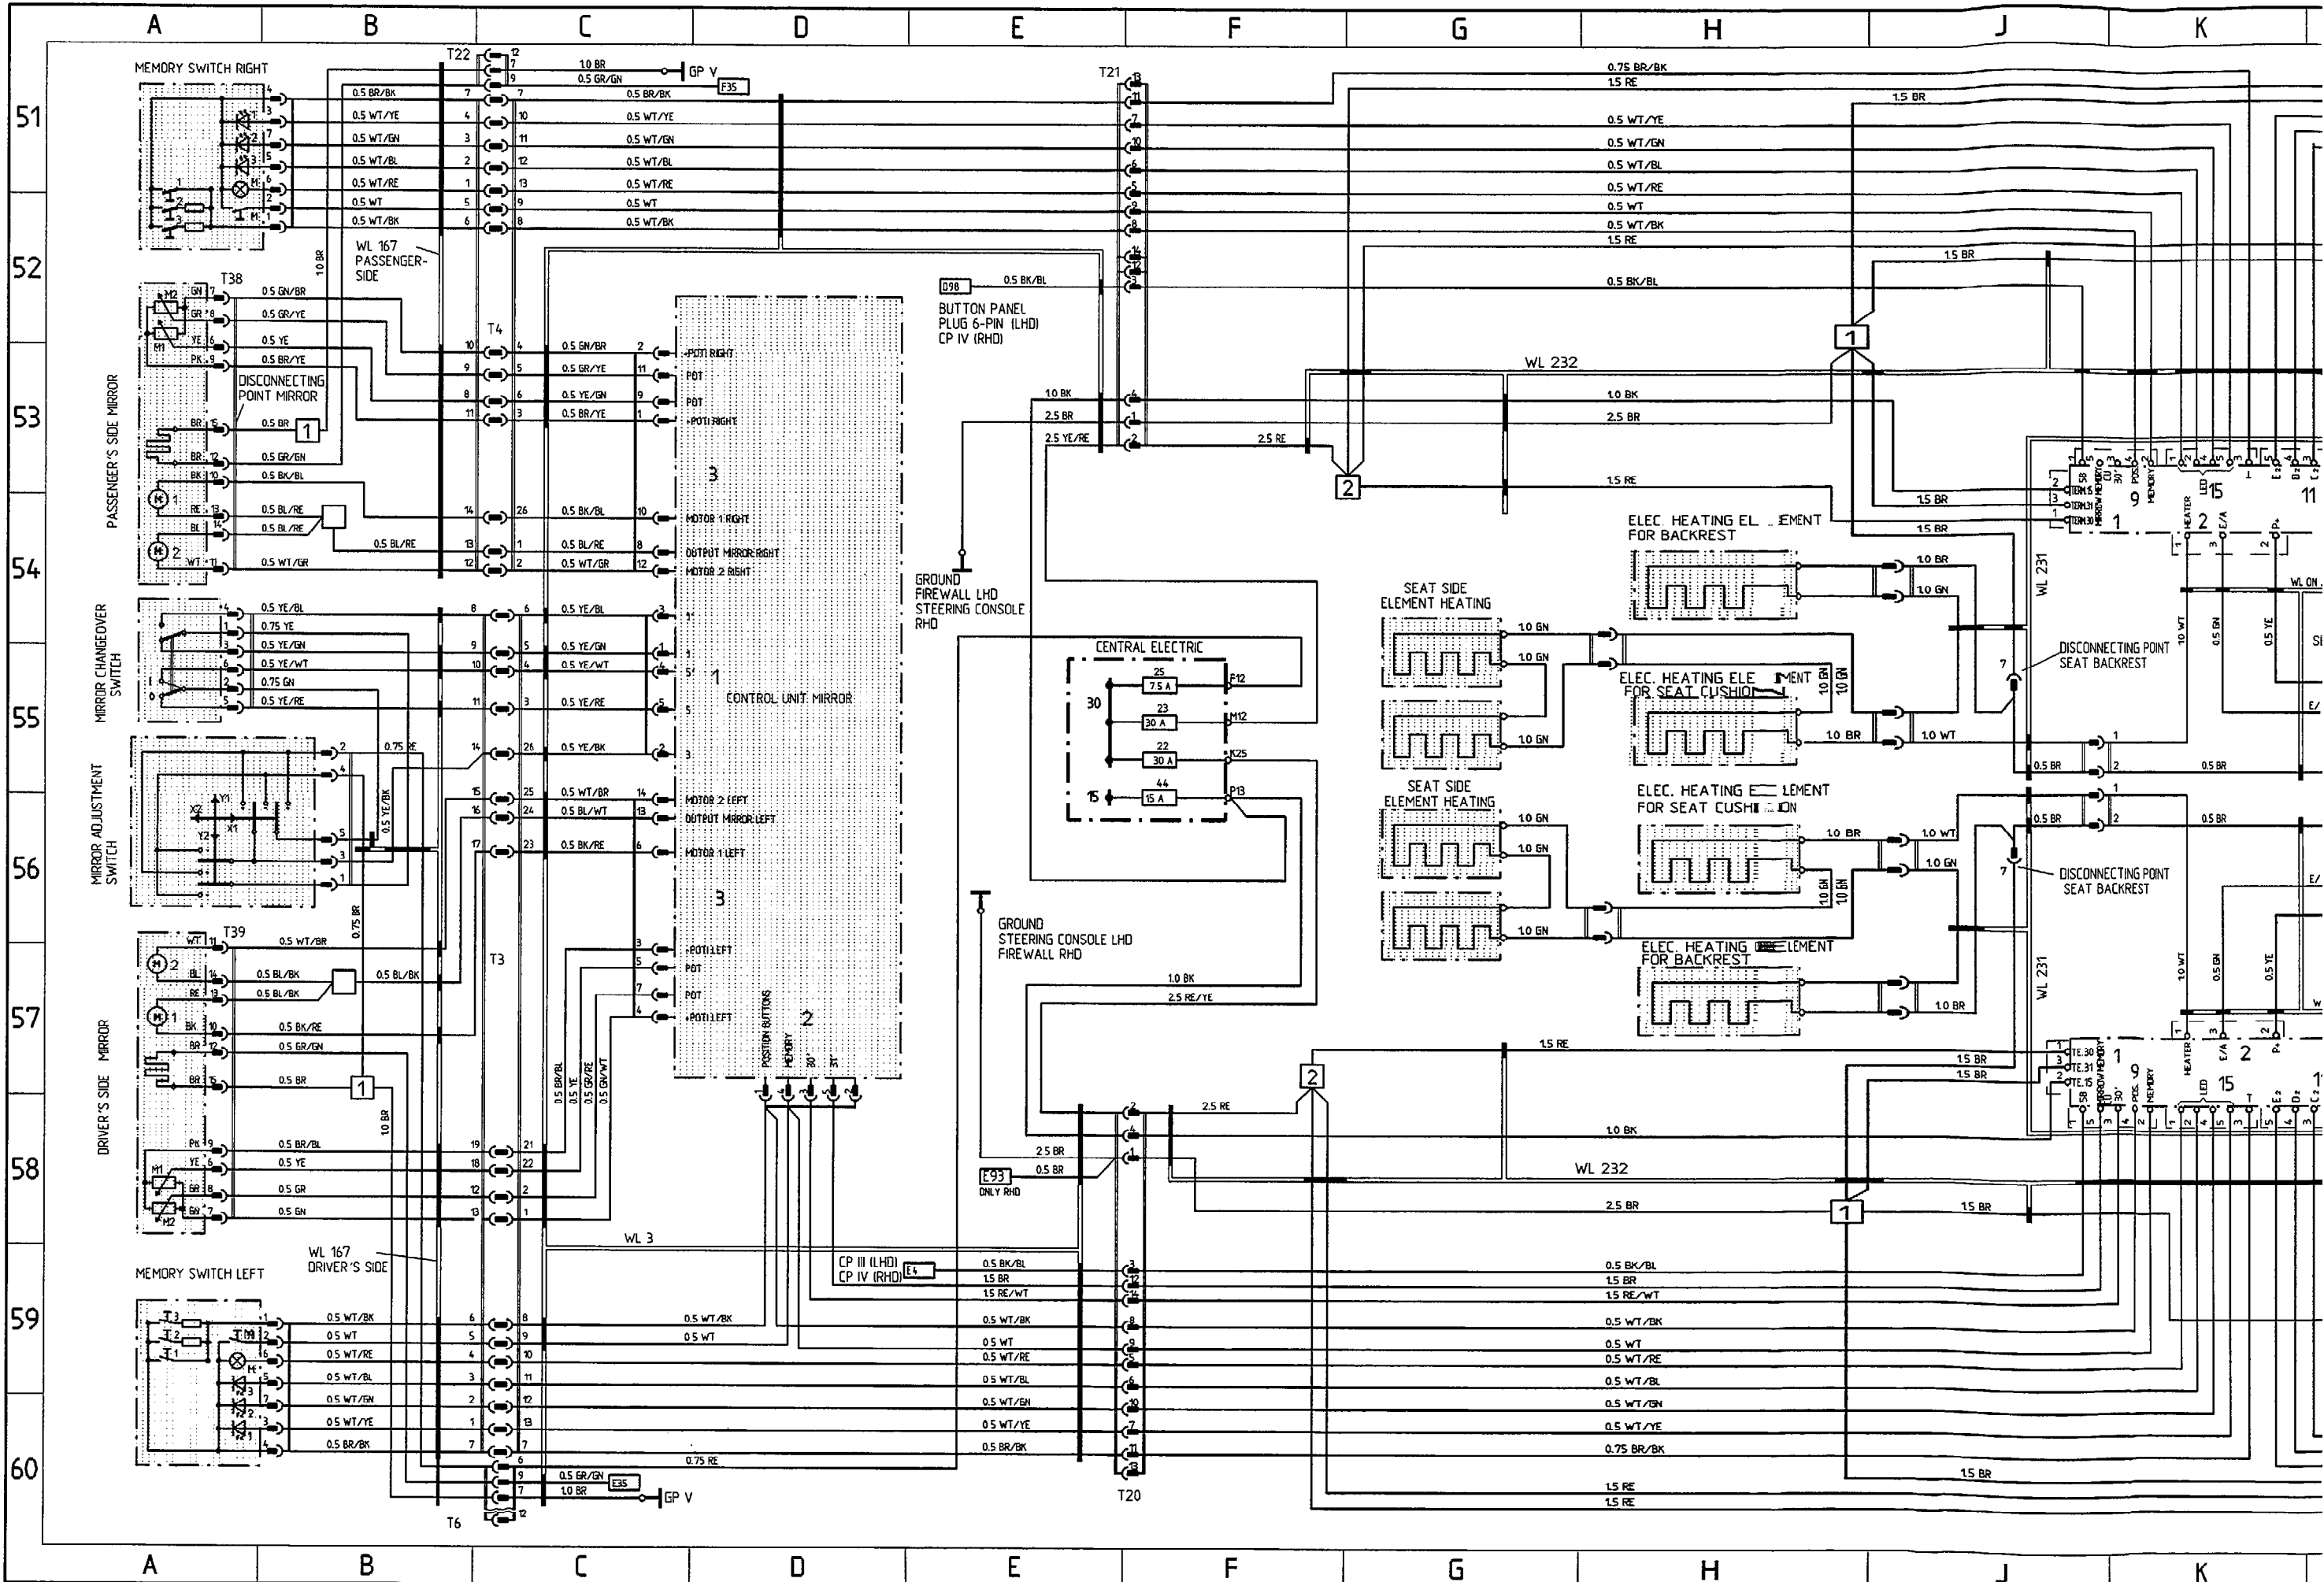




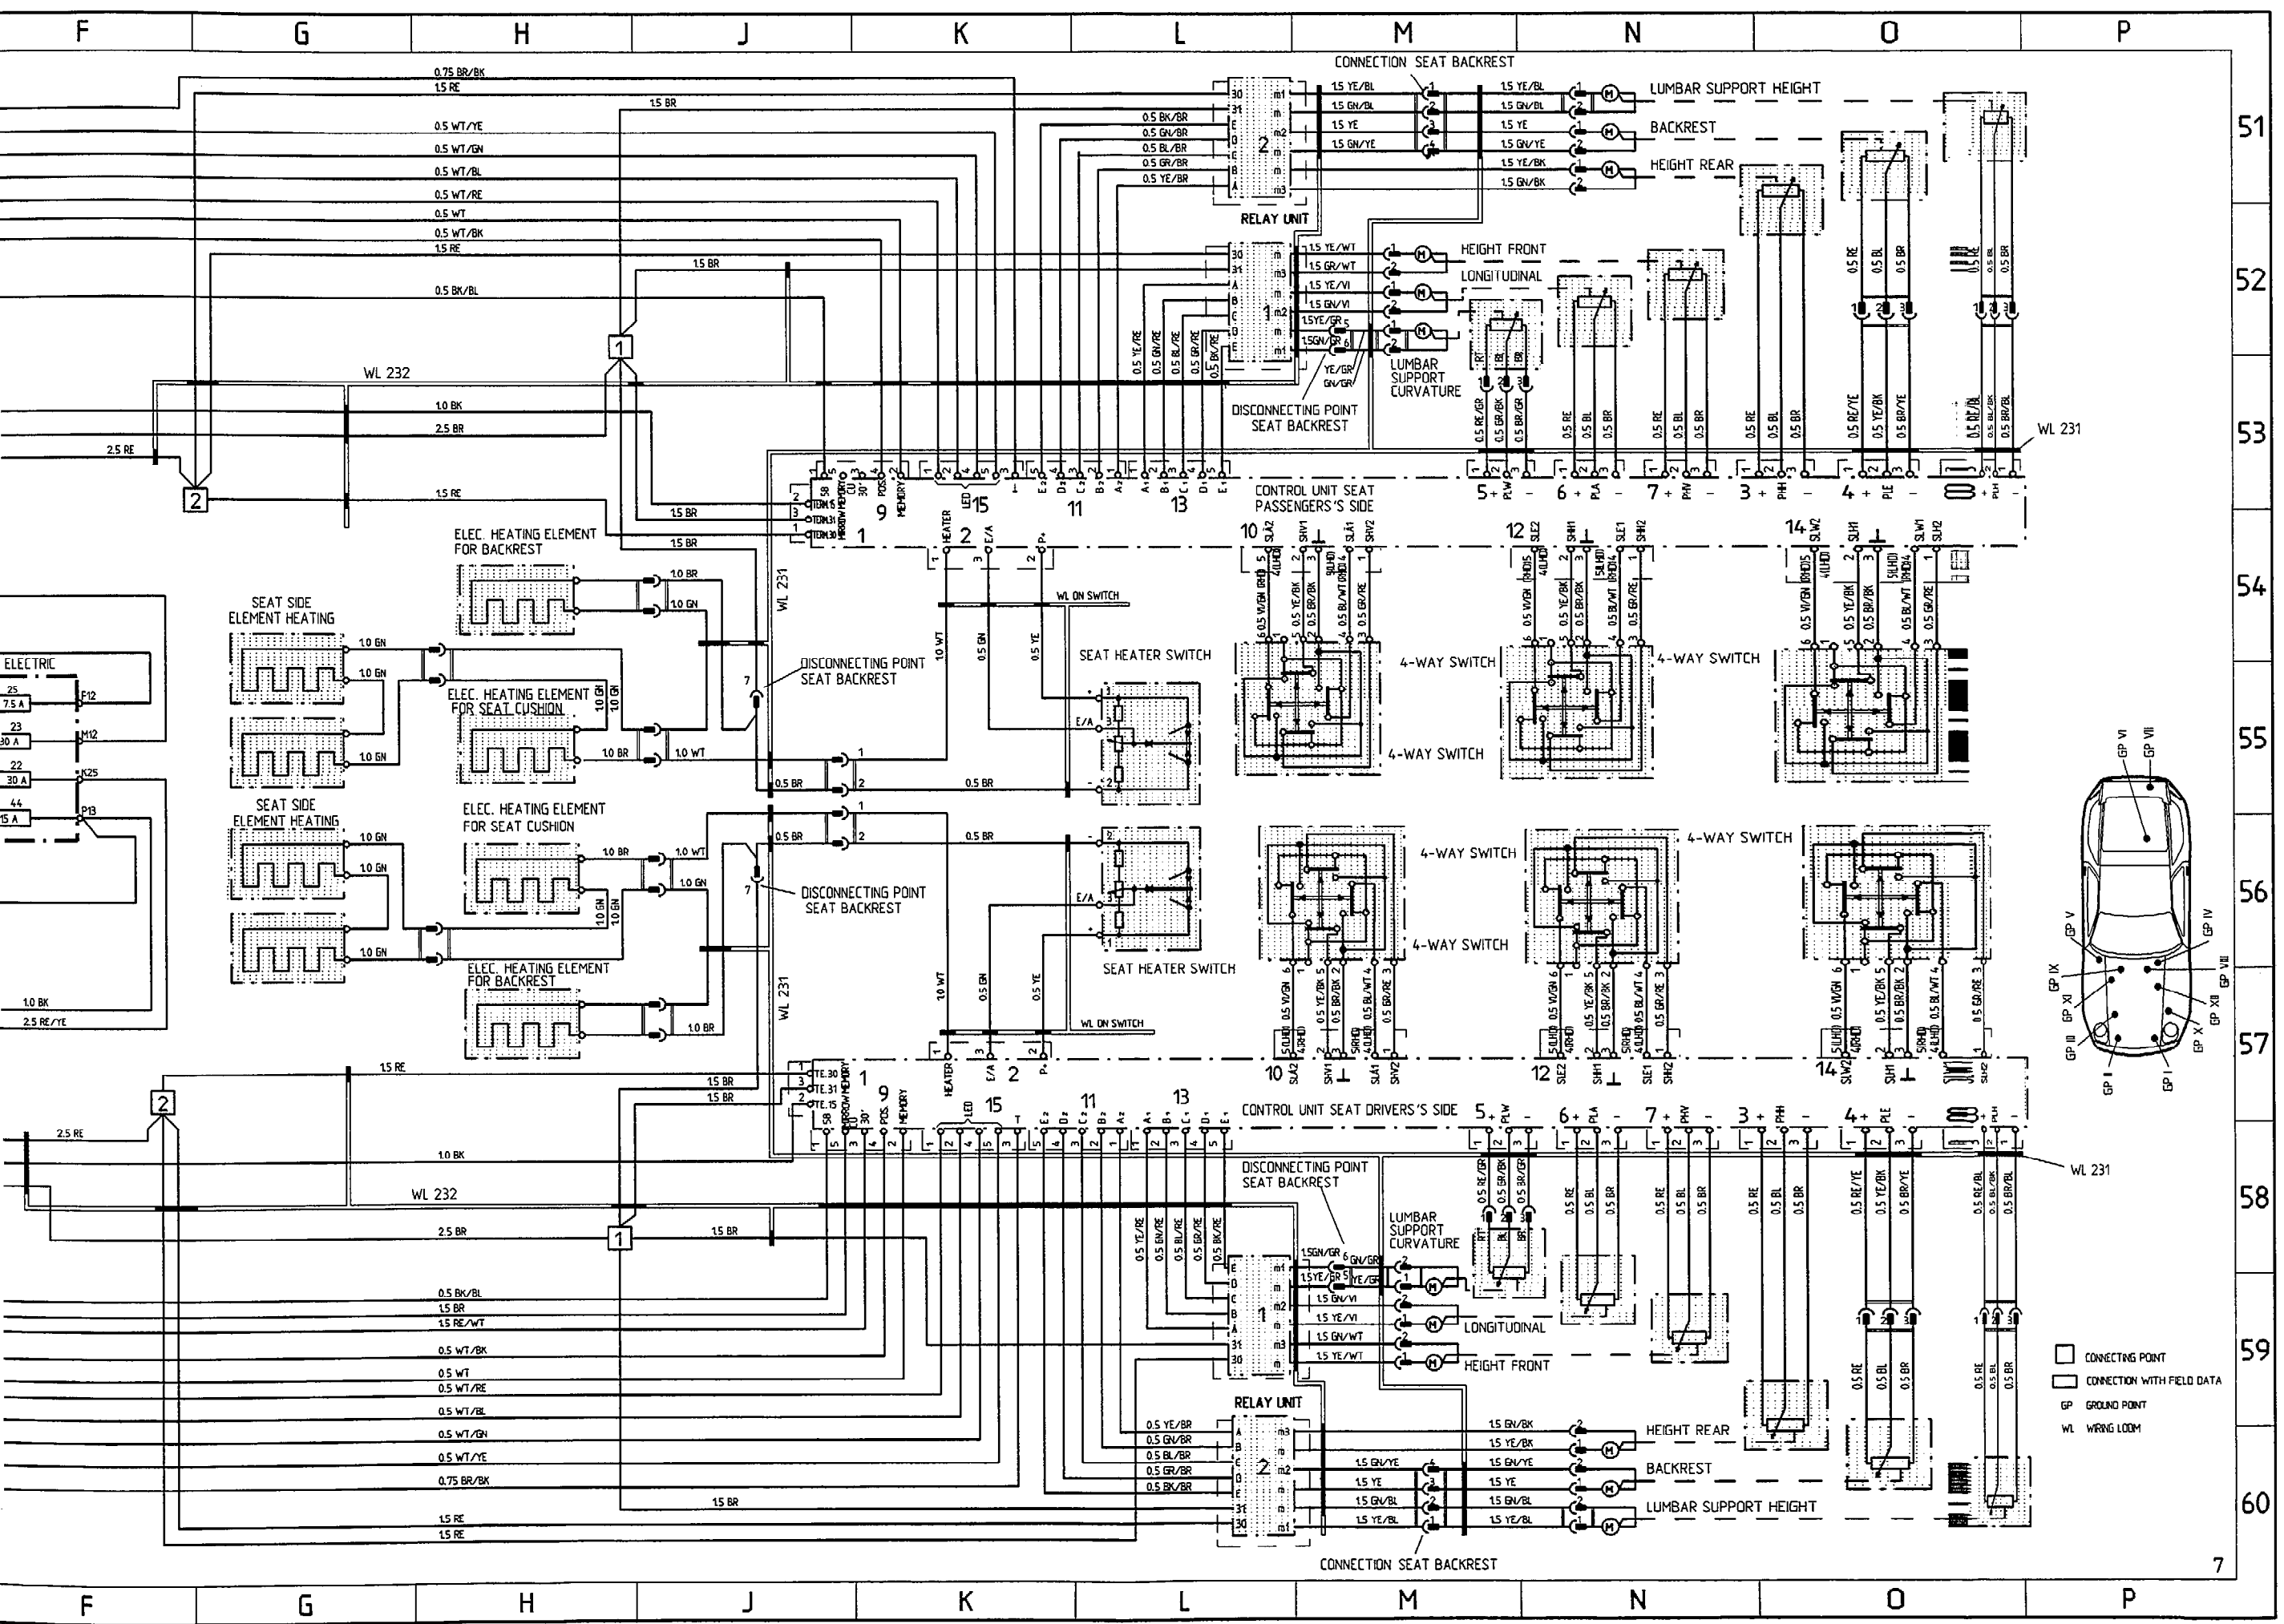


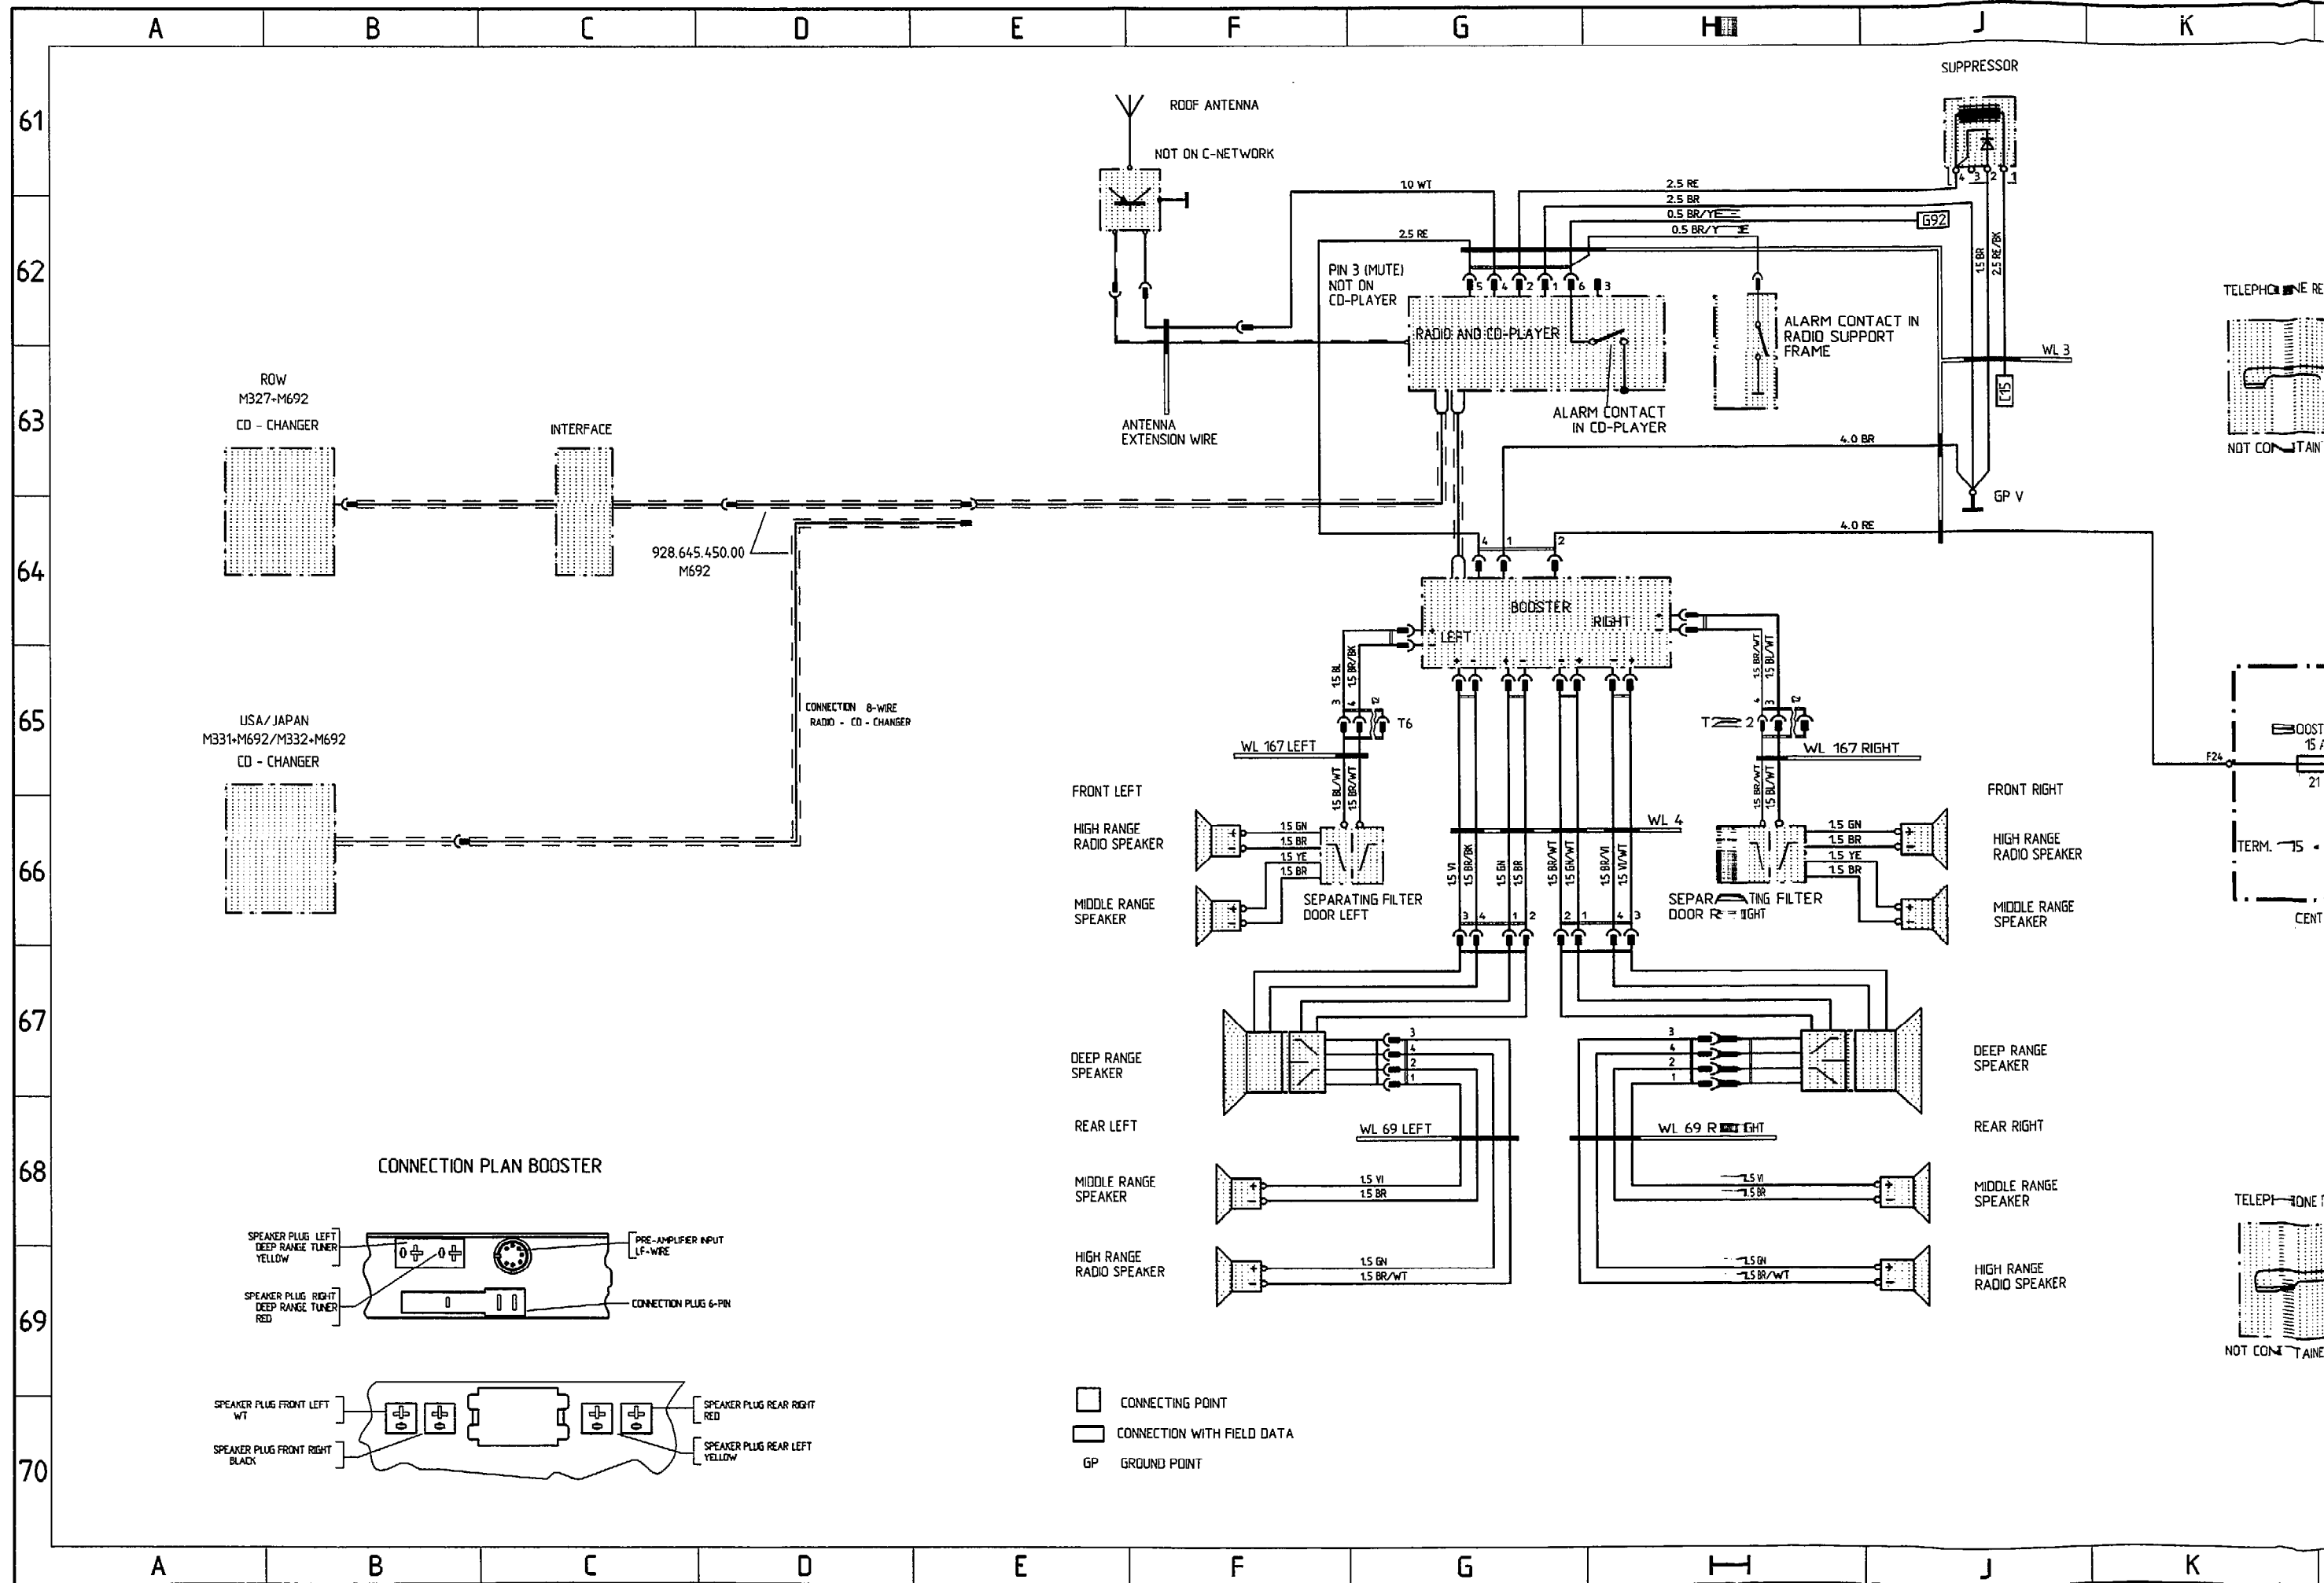

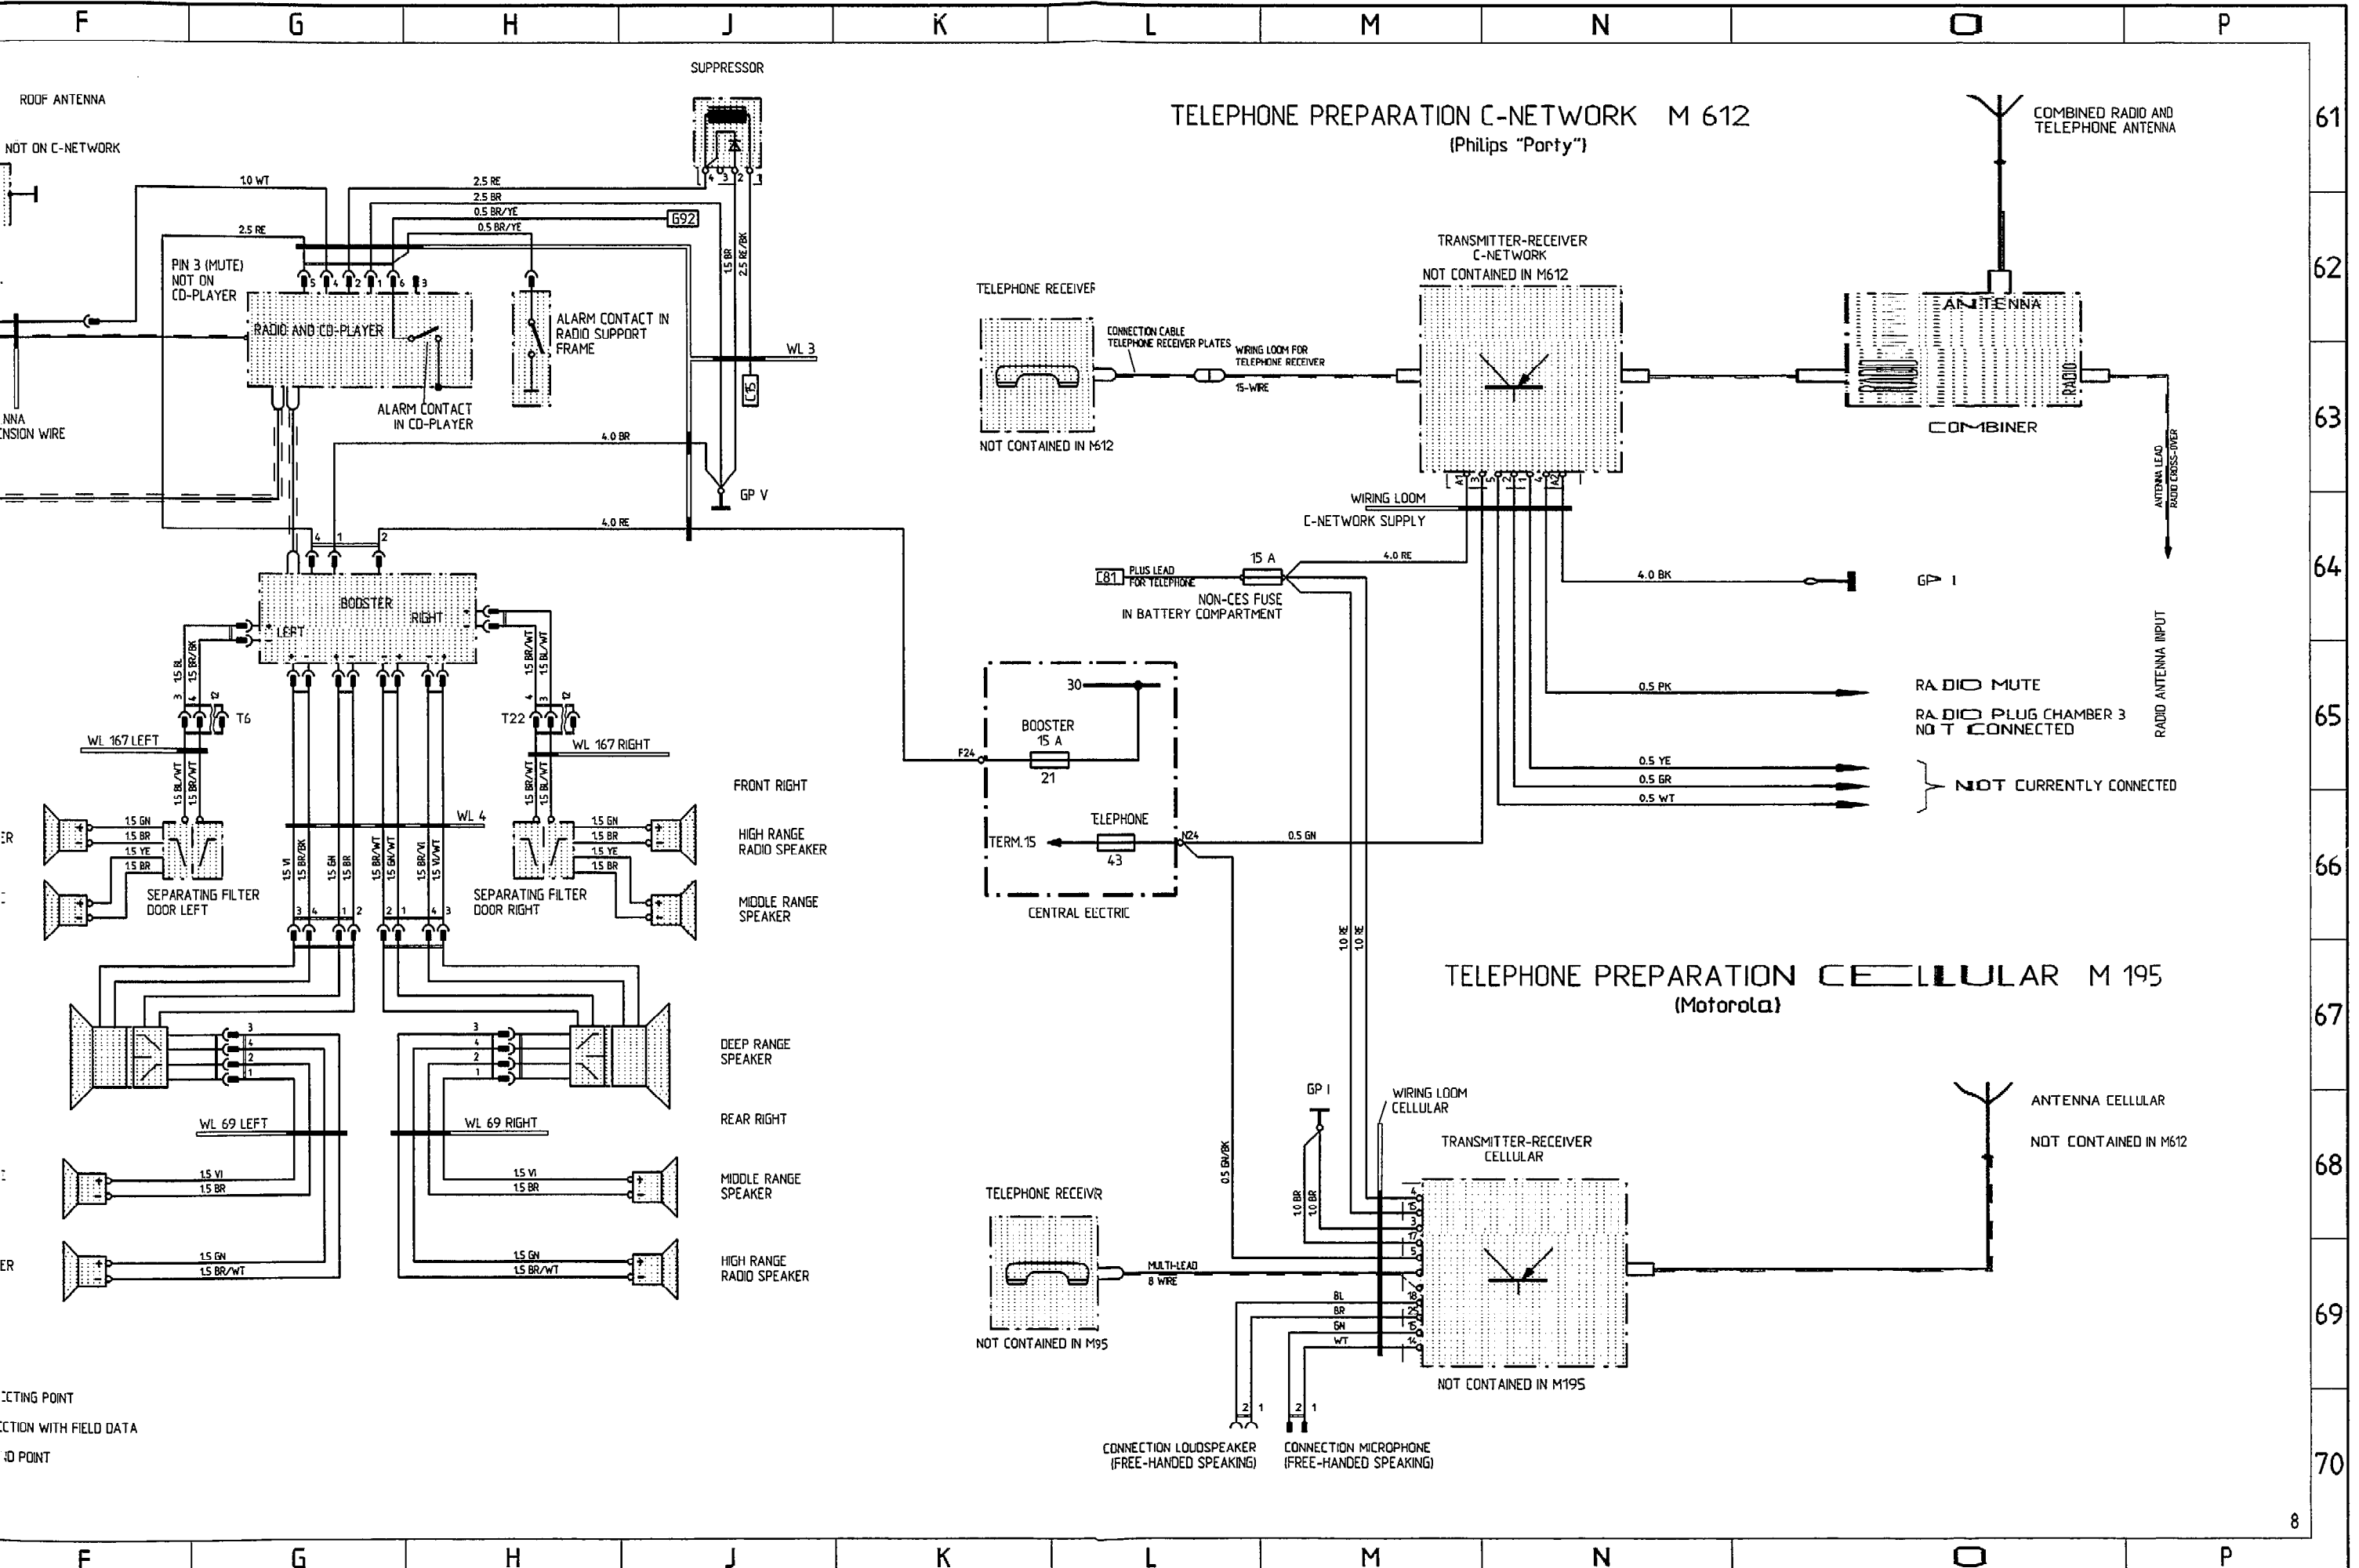


BK = BLACK WT = WHITE RE = RED GN = GREEN YE = YELLOW GR = GREY BR = BROWN BL = BLUE V = VIOLET PK = PINK

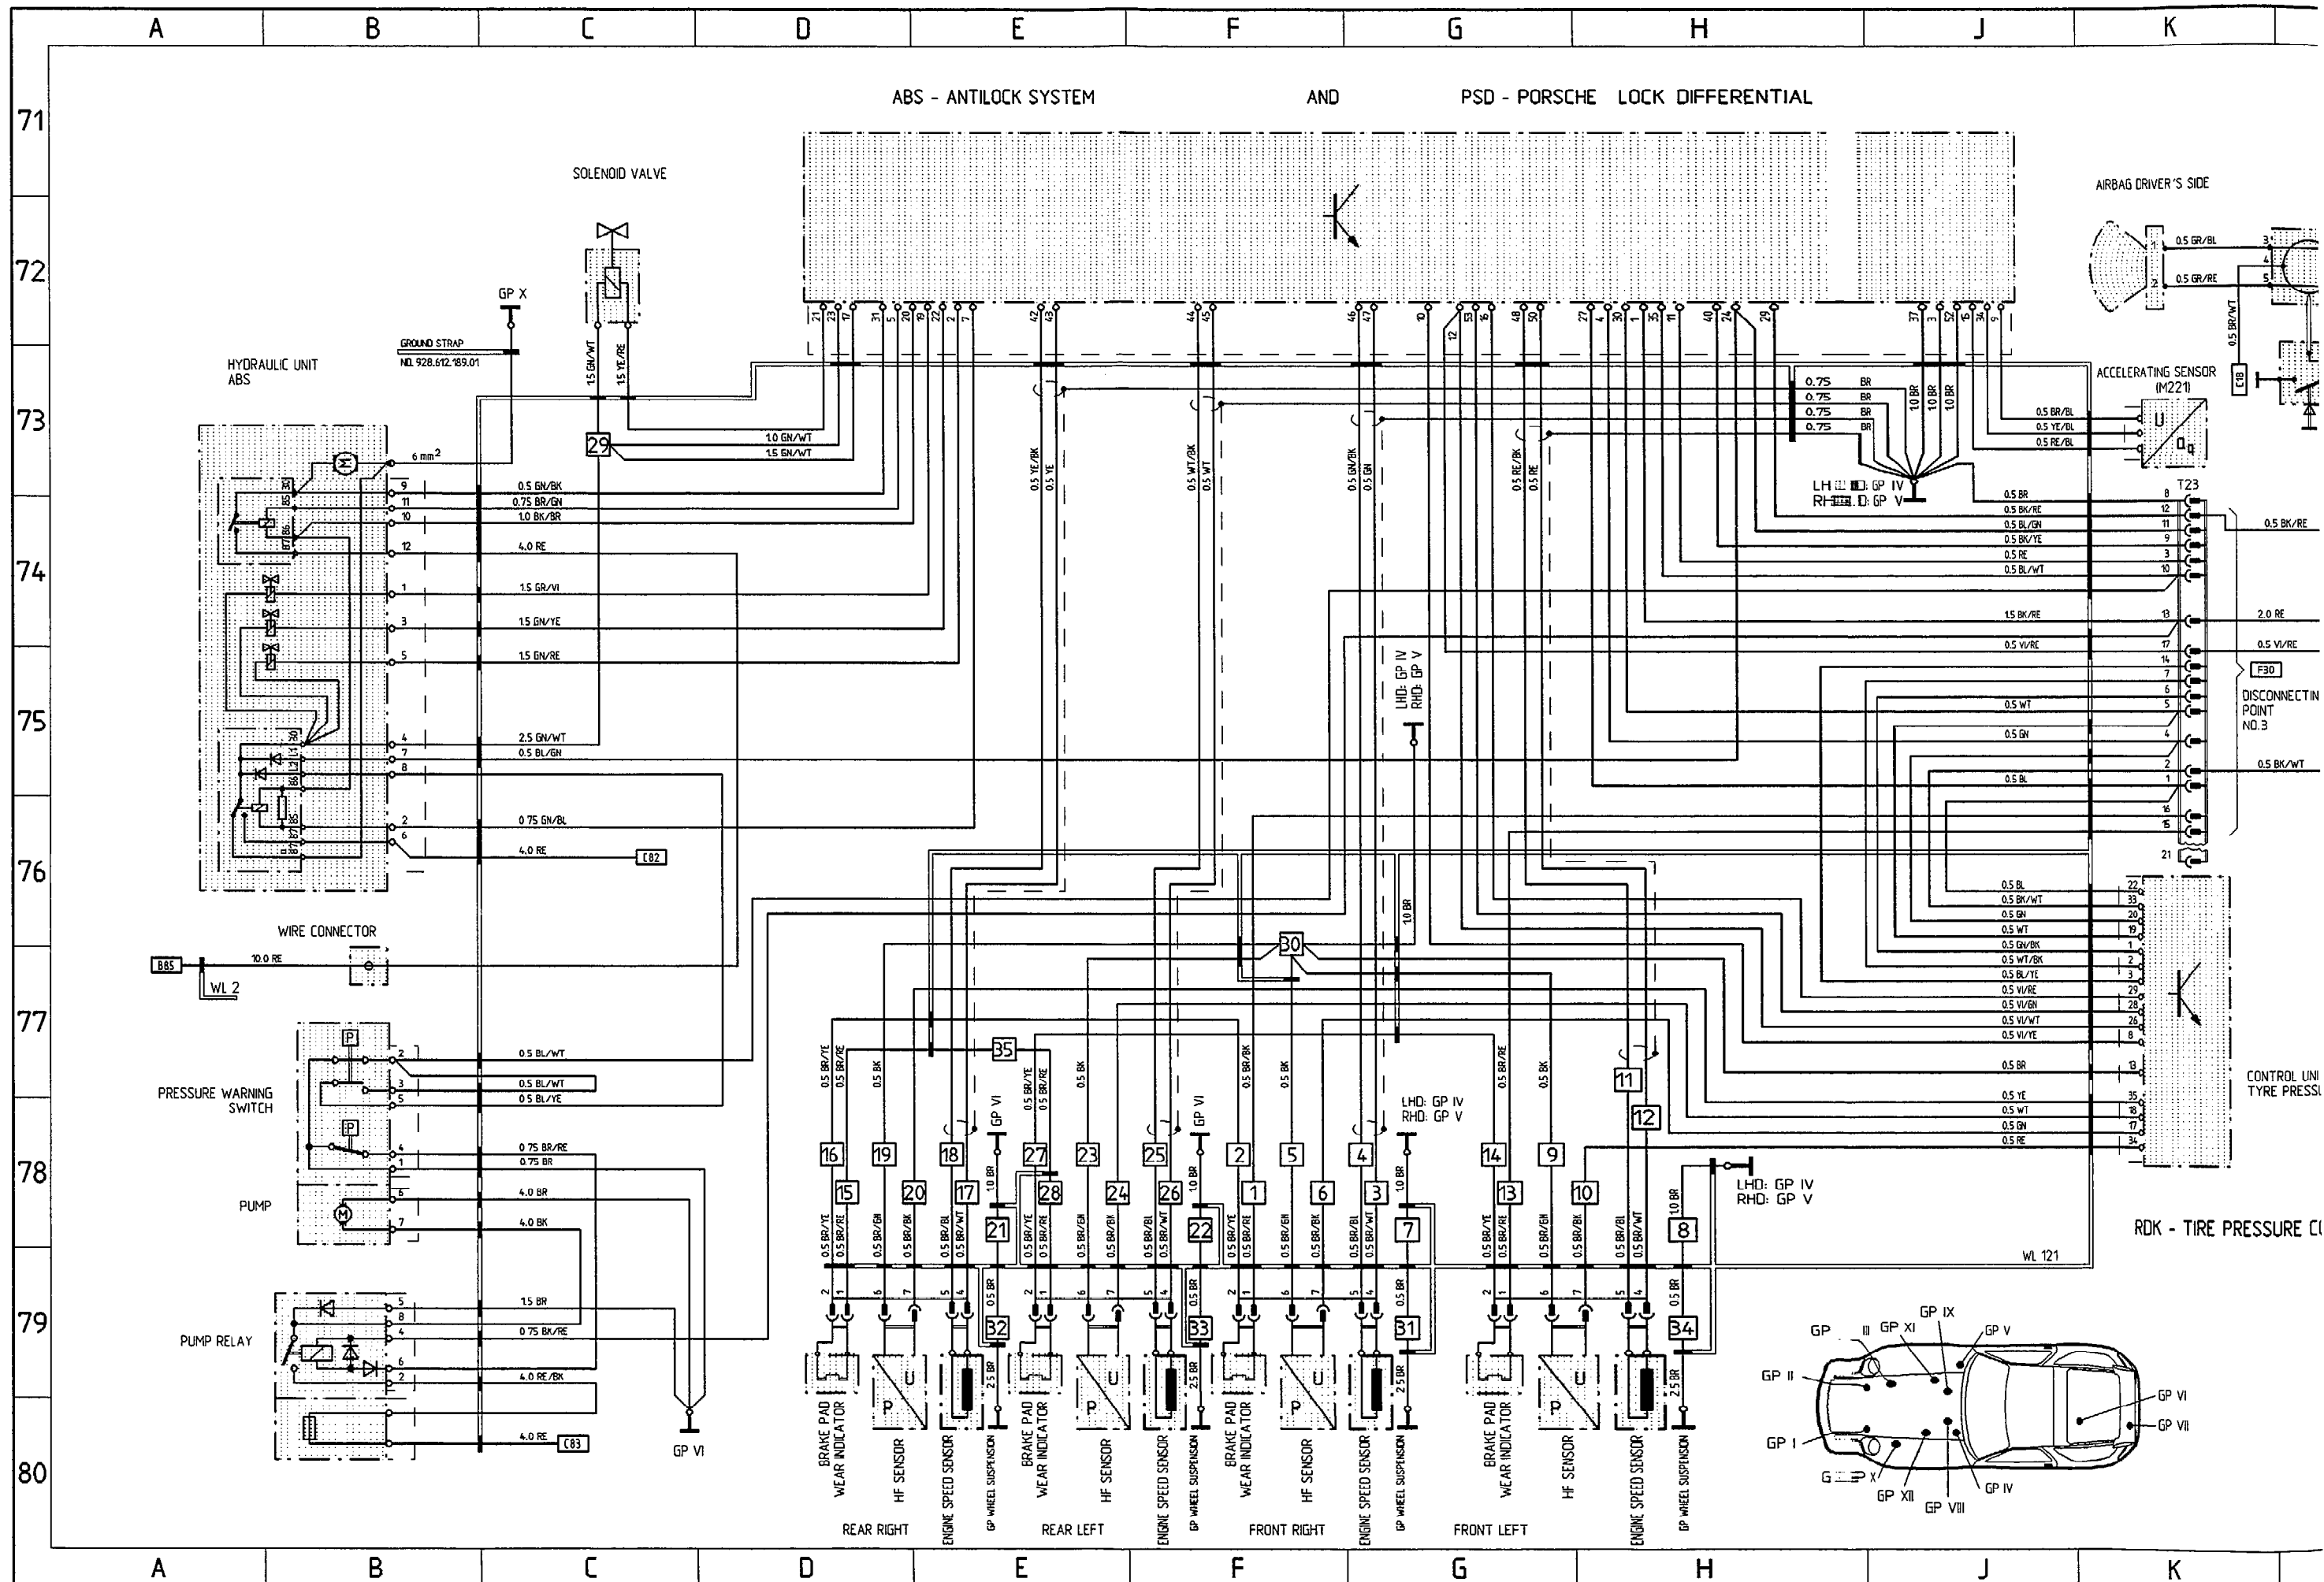


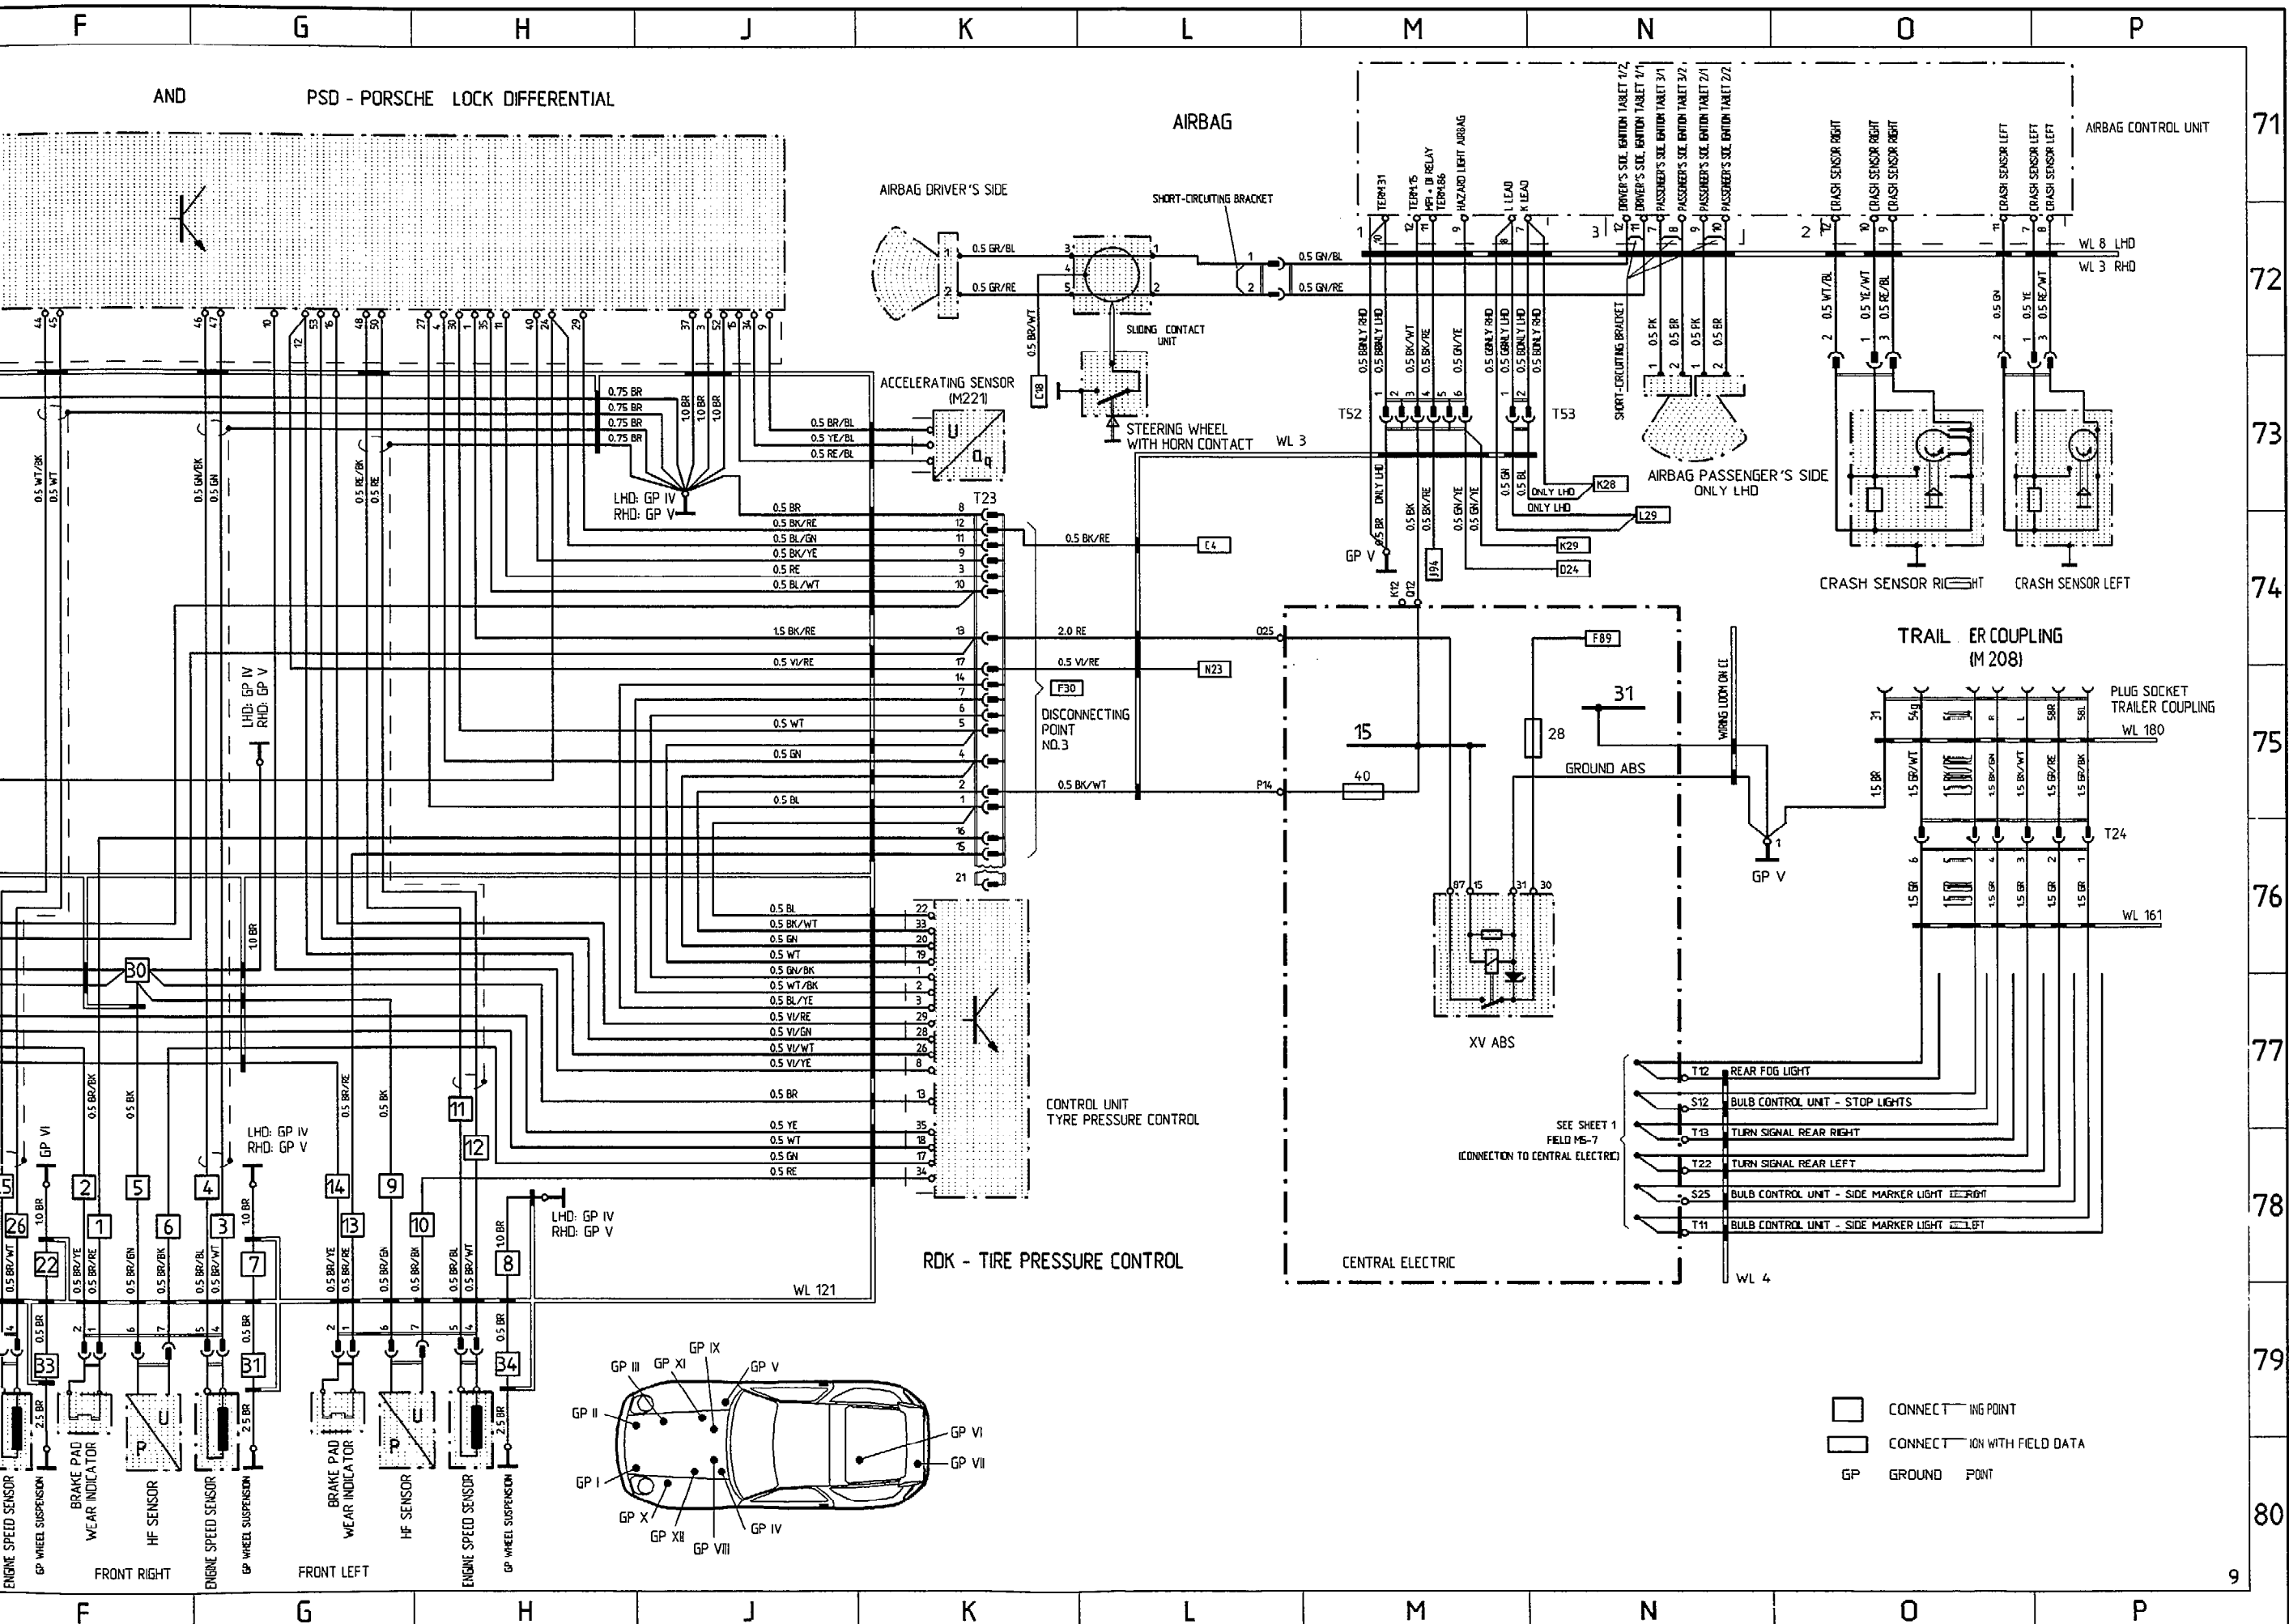


# 928 GTS MODEL 93/2 SHEET 10

## MOTOR, FUEL AND IGNITION, CRUISE CONTROL

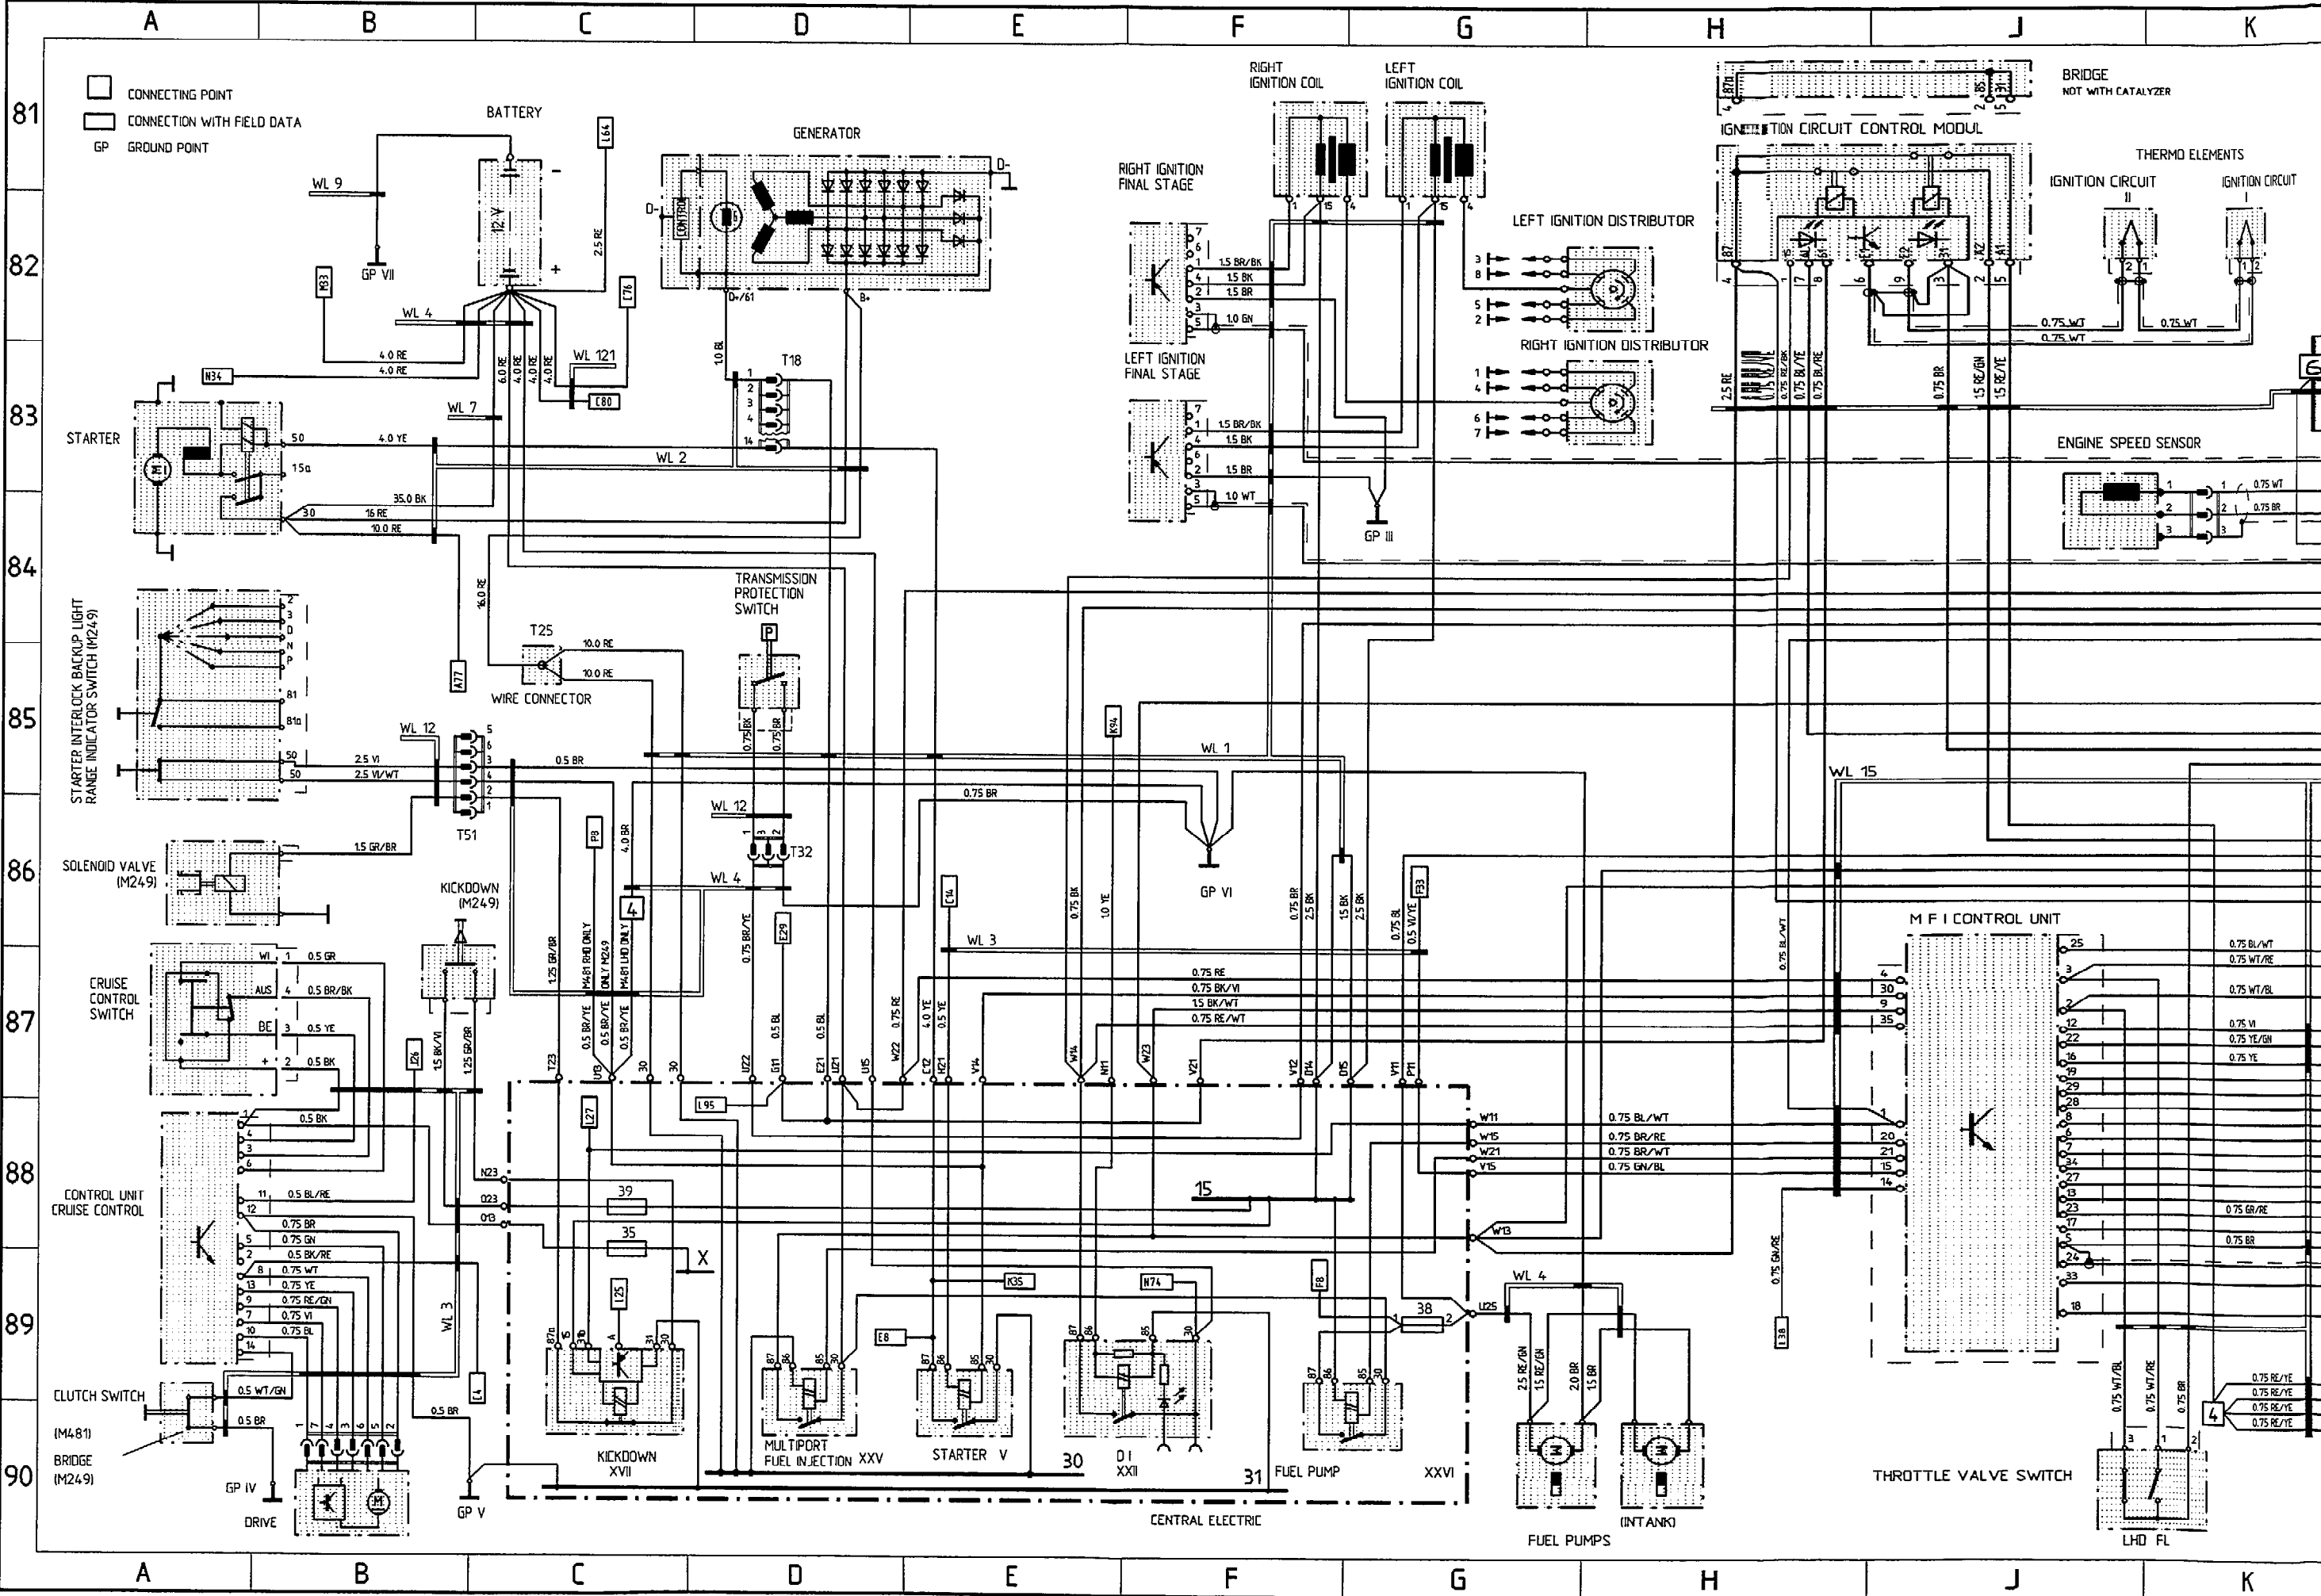


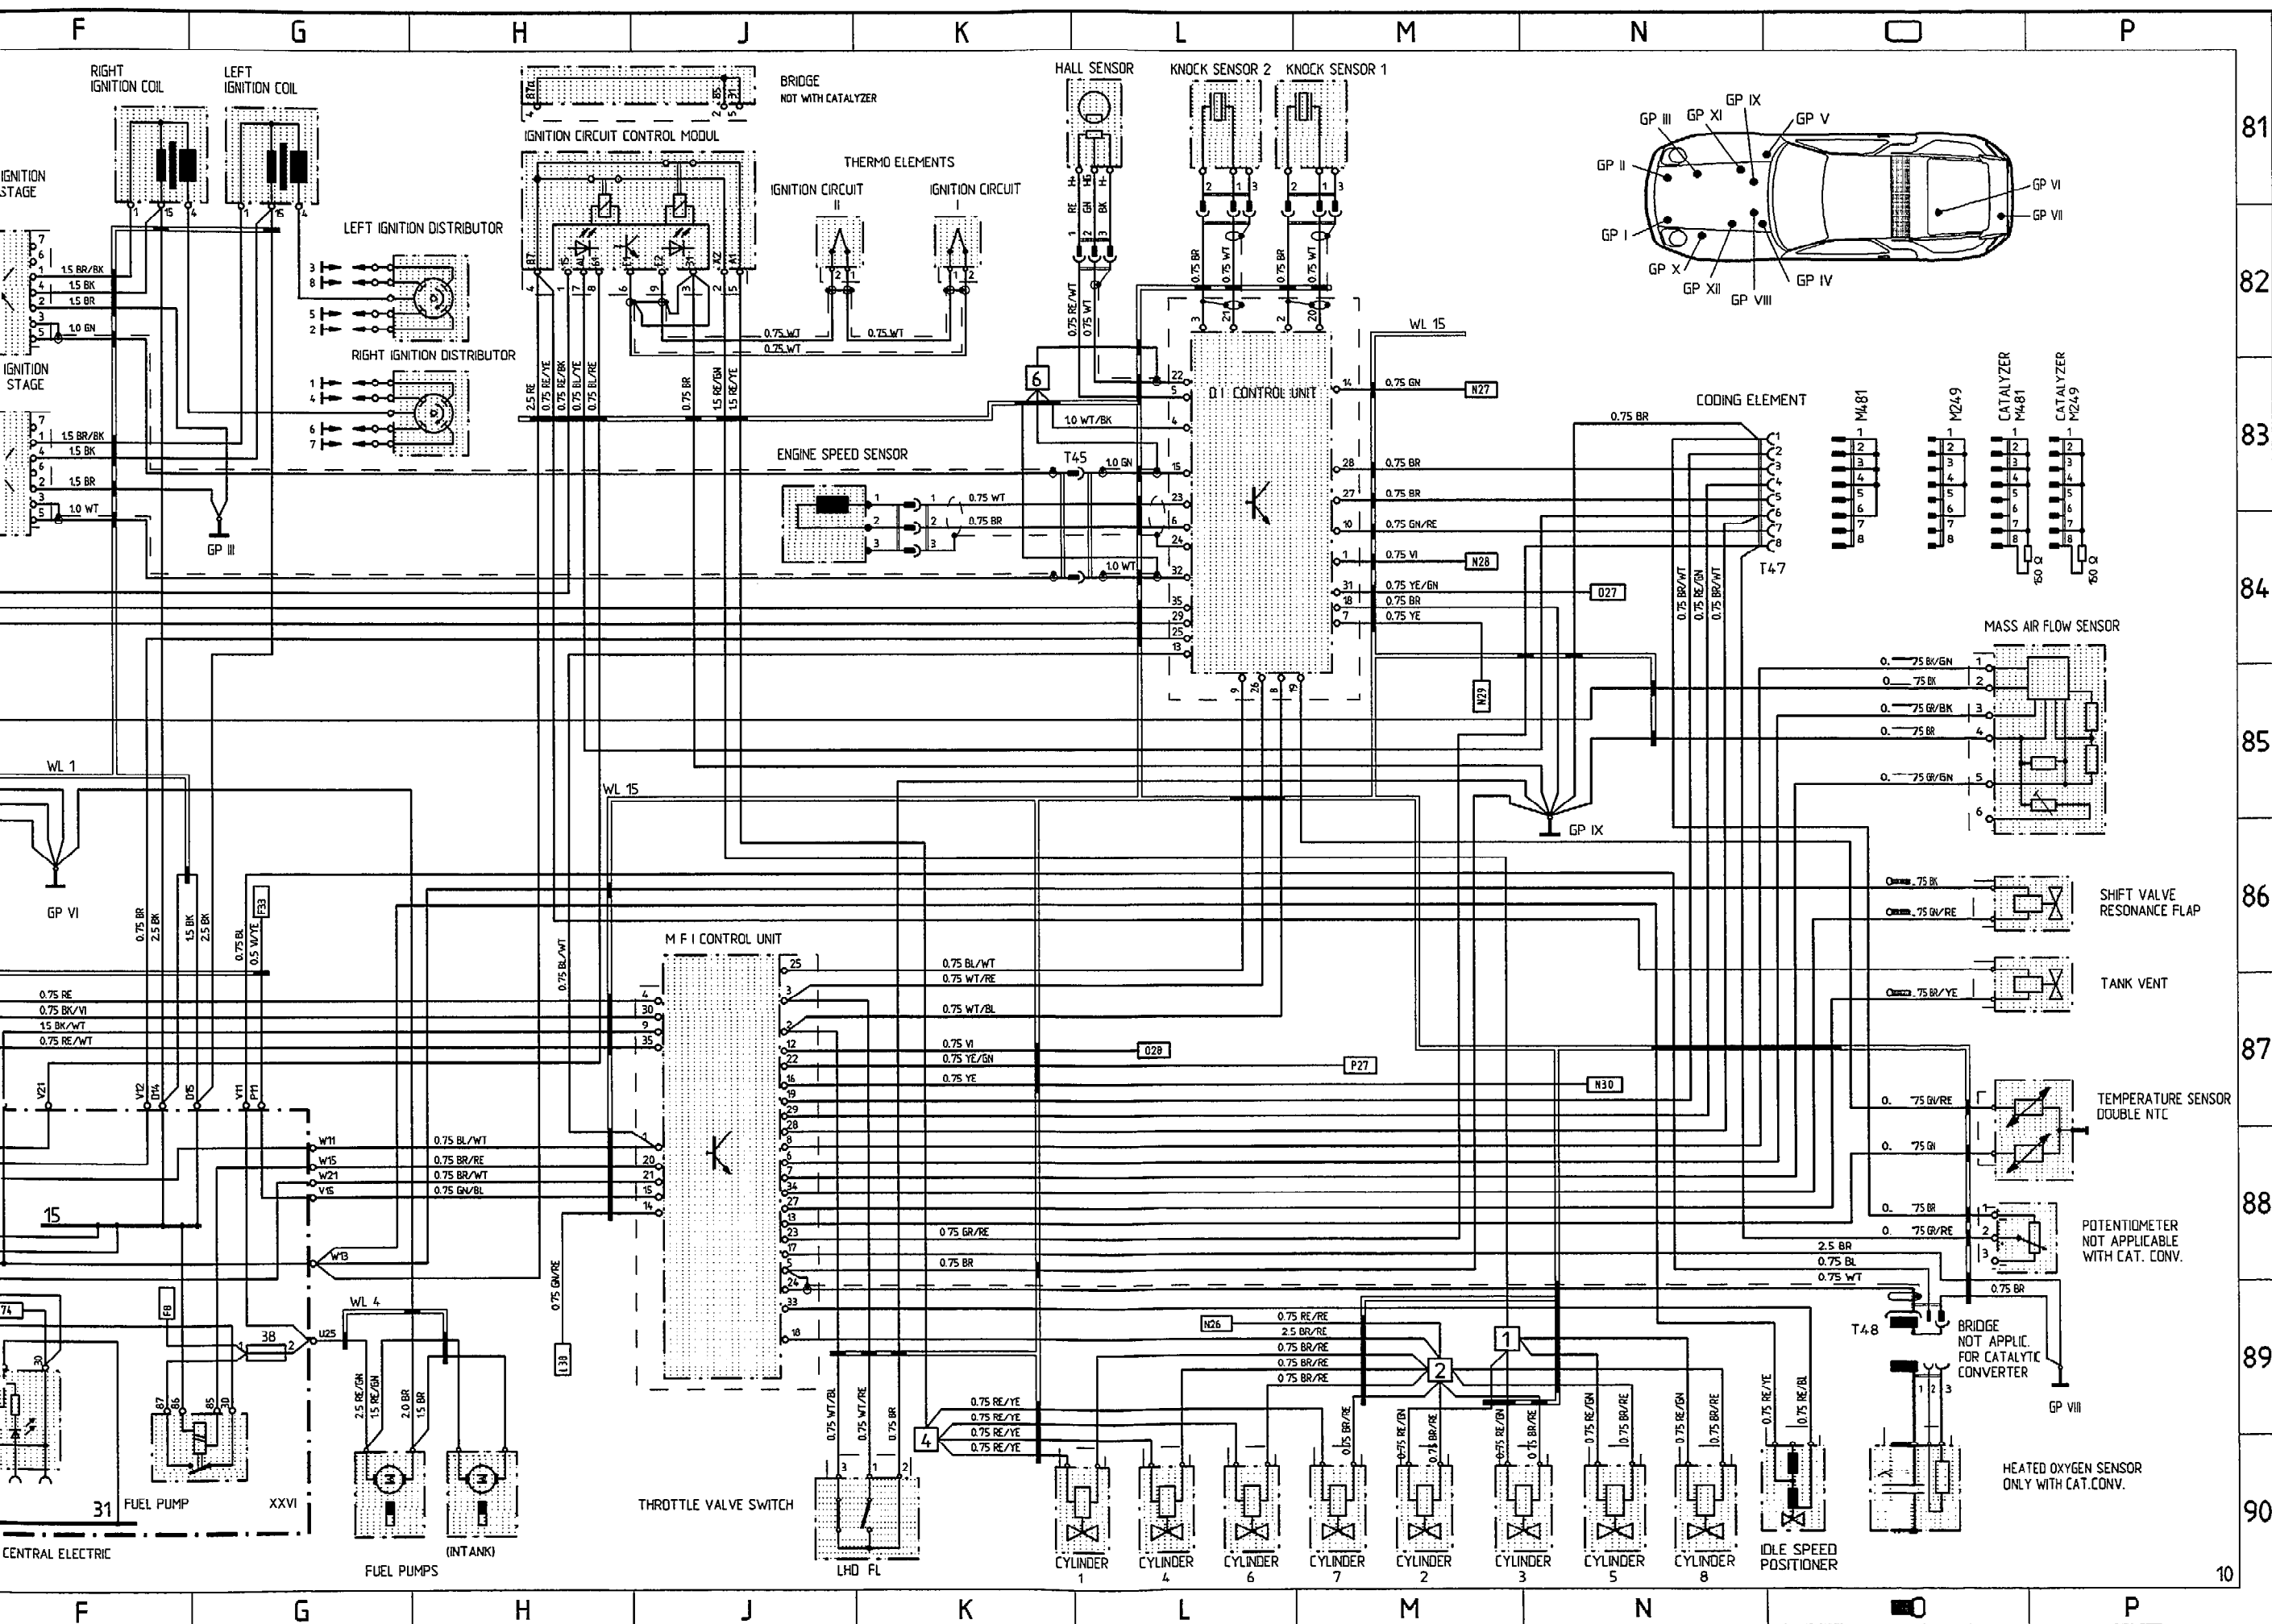



BK = BLACK WT = WHITE RE = RED GN = GREEN YE = YELLOW GR = GREY BR = BROWN BL = BLUE VI = VIOLET PK = PINK

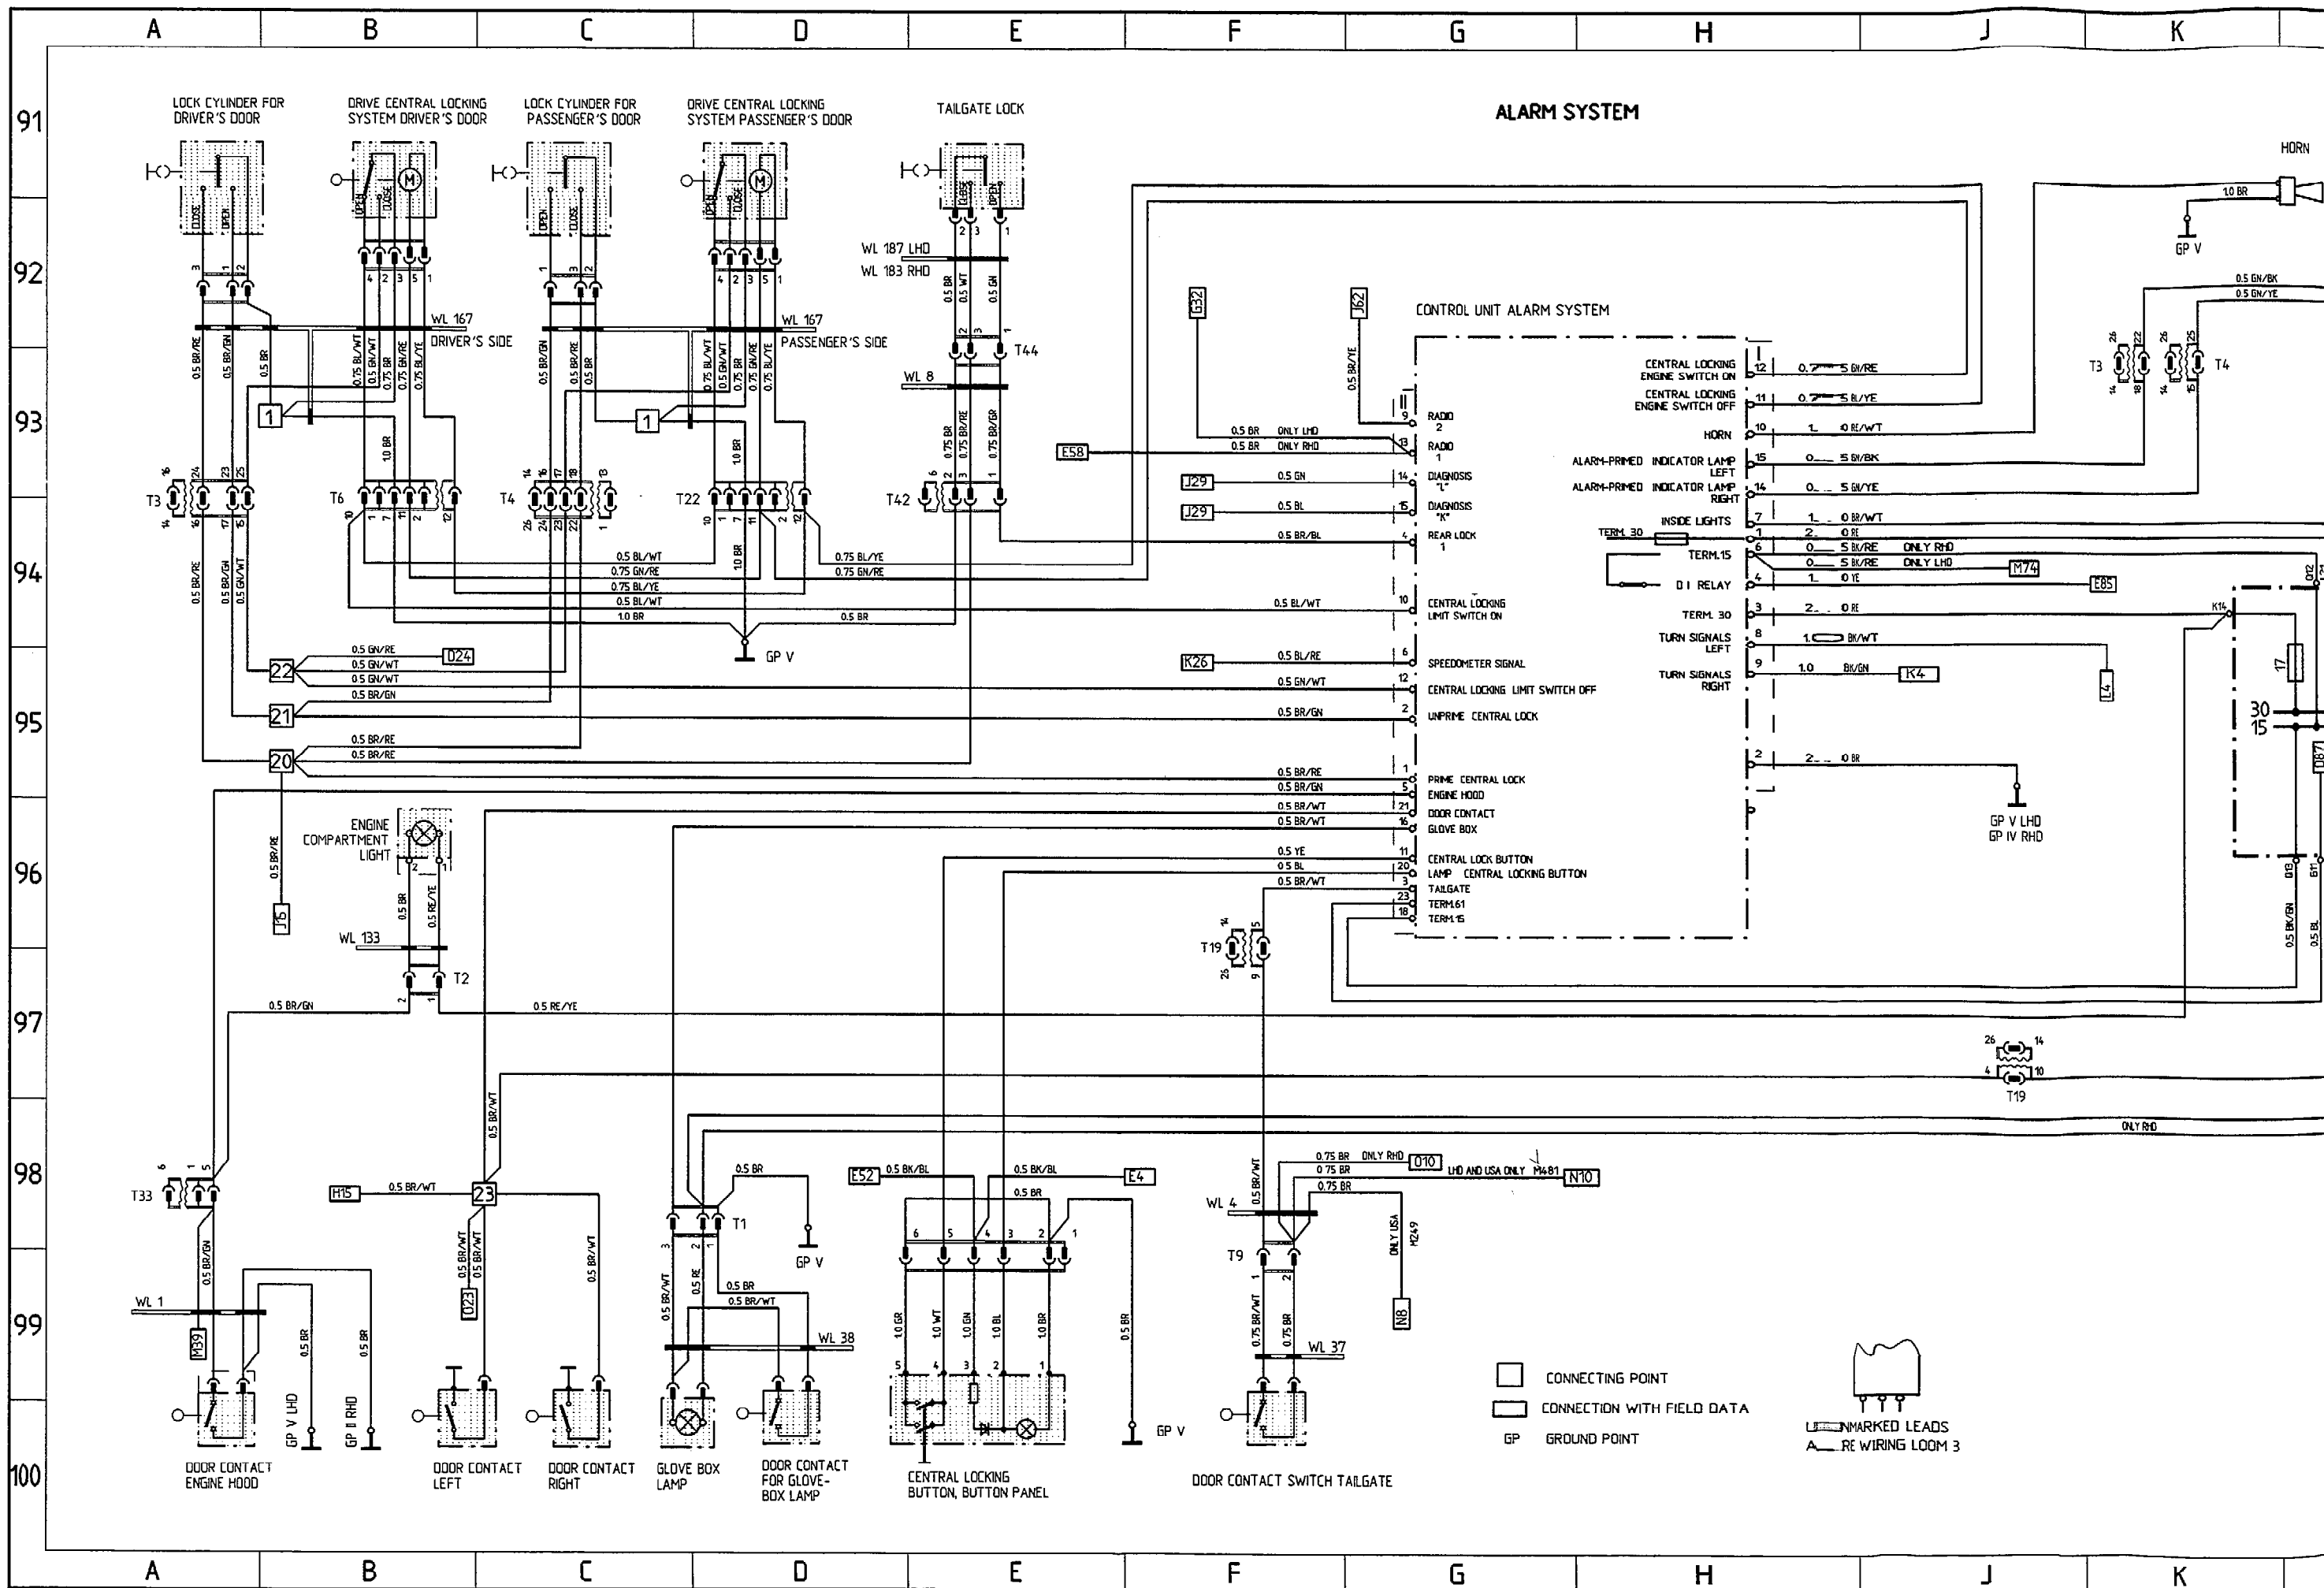



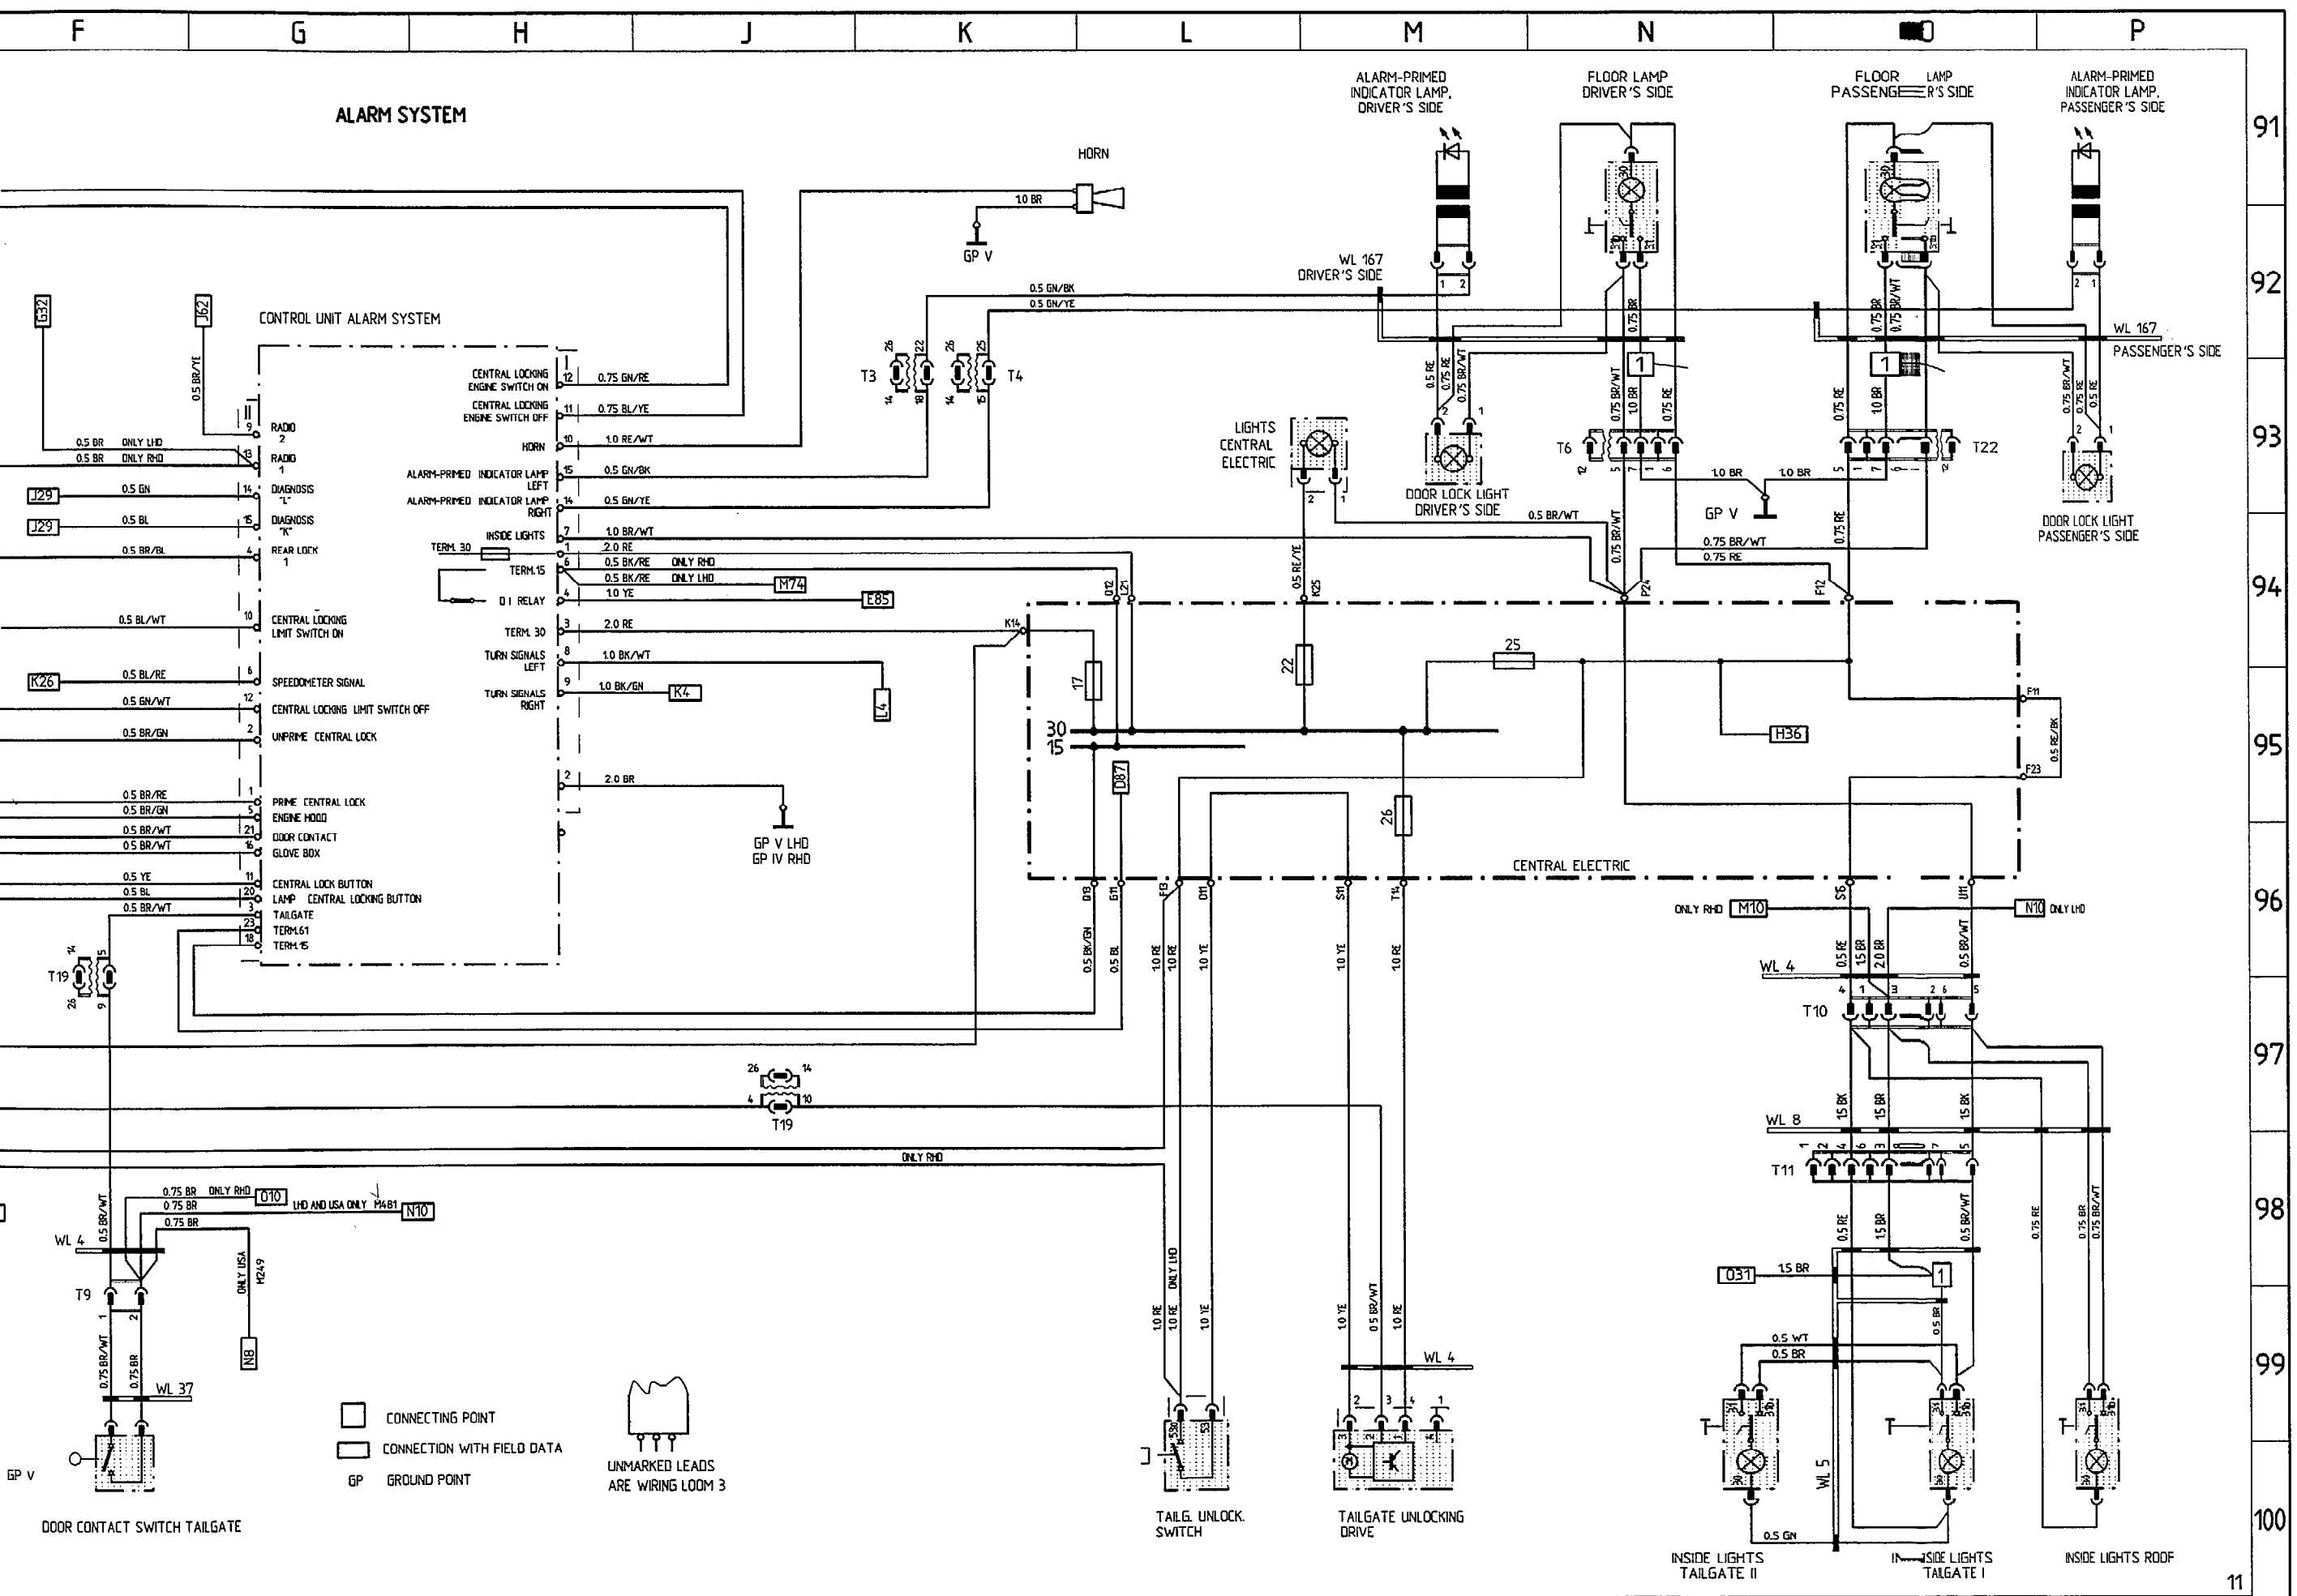

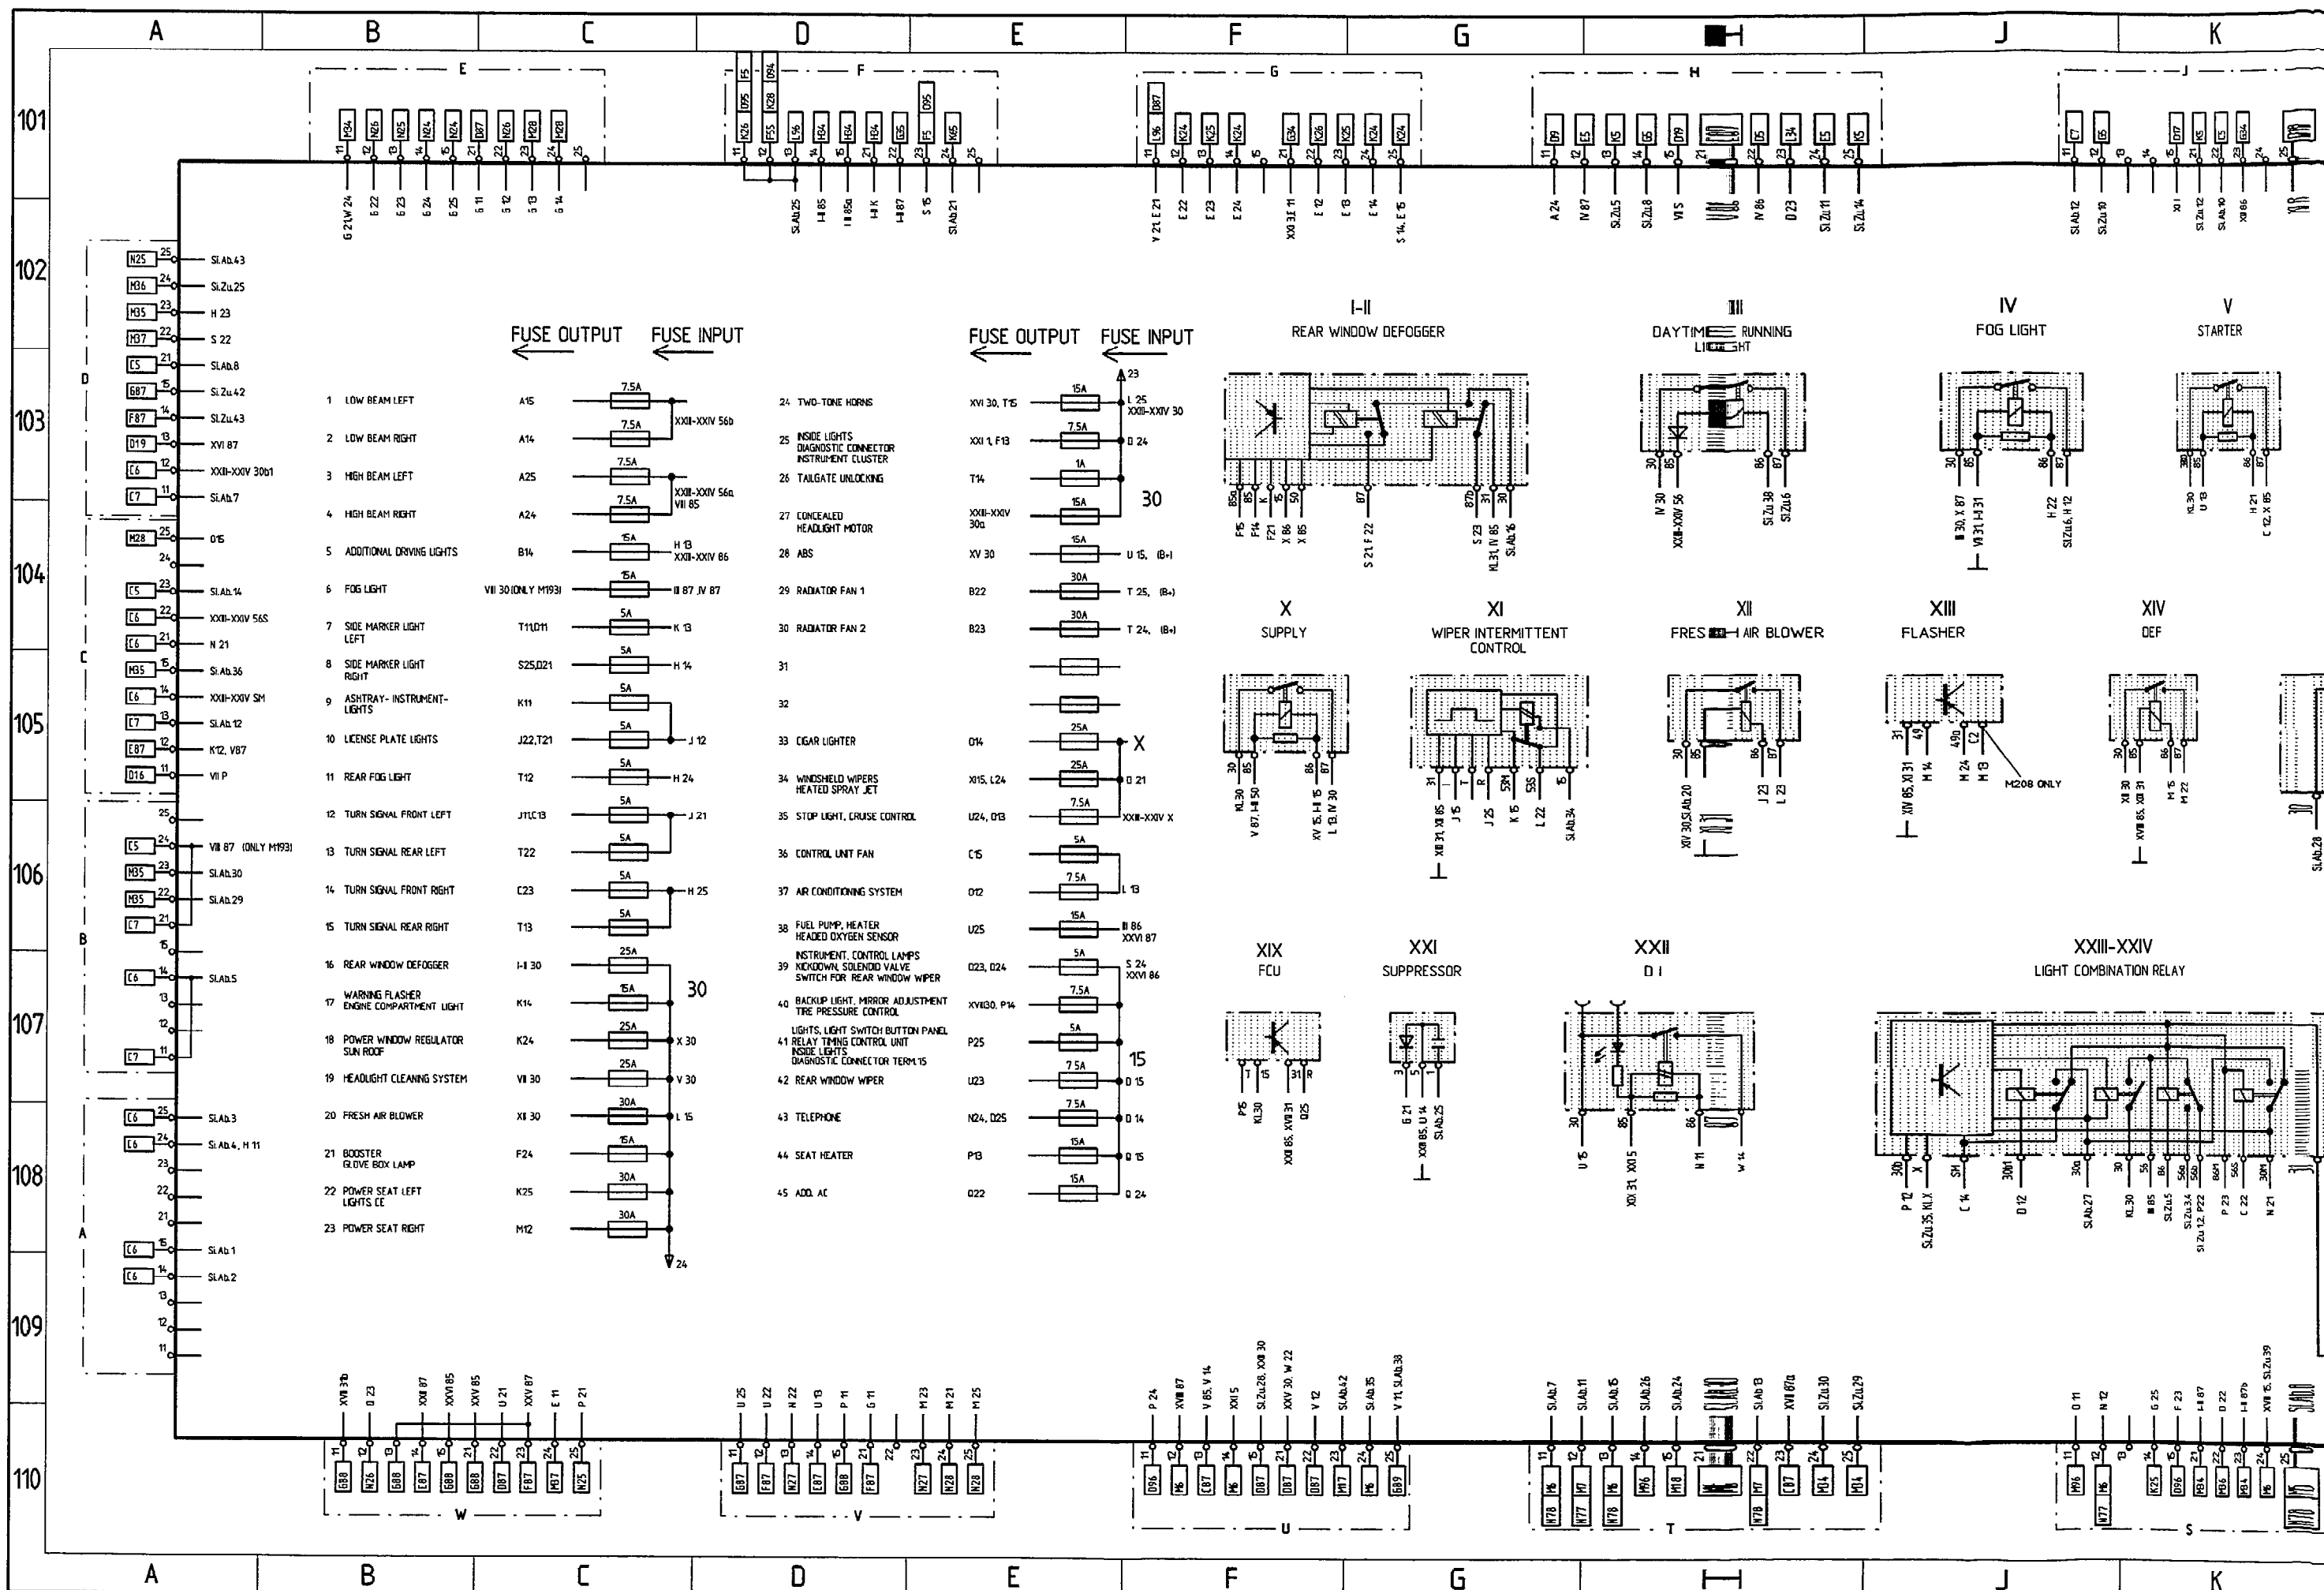

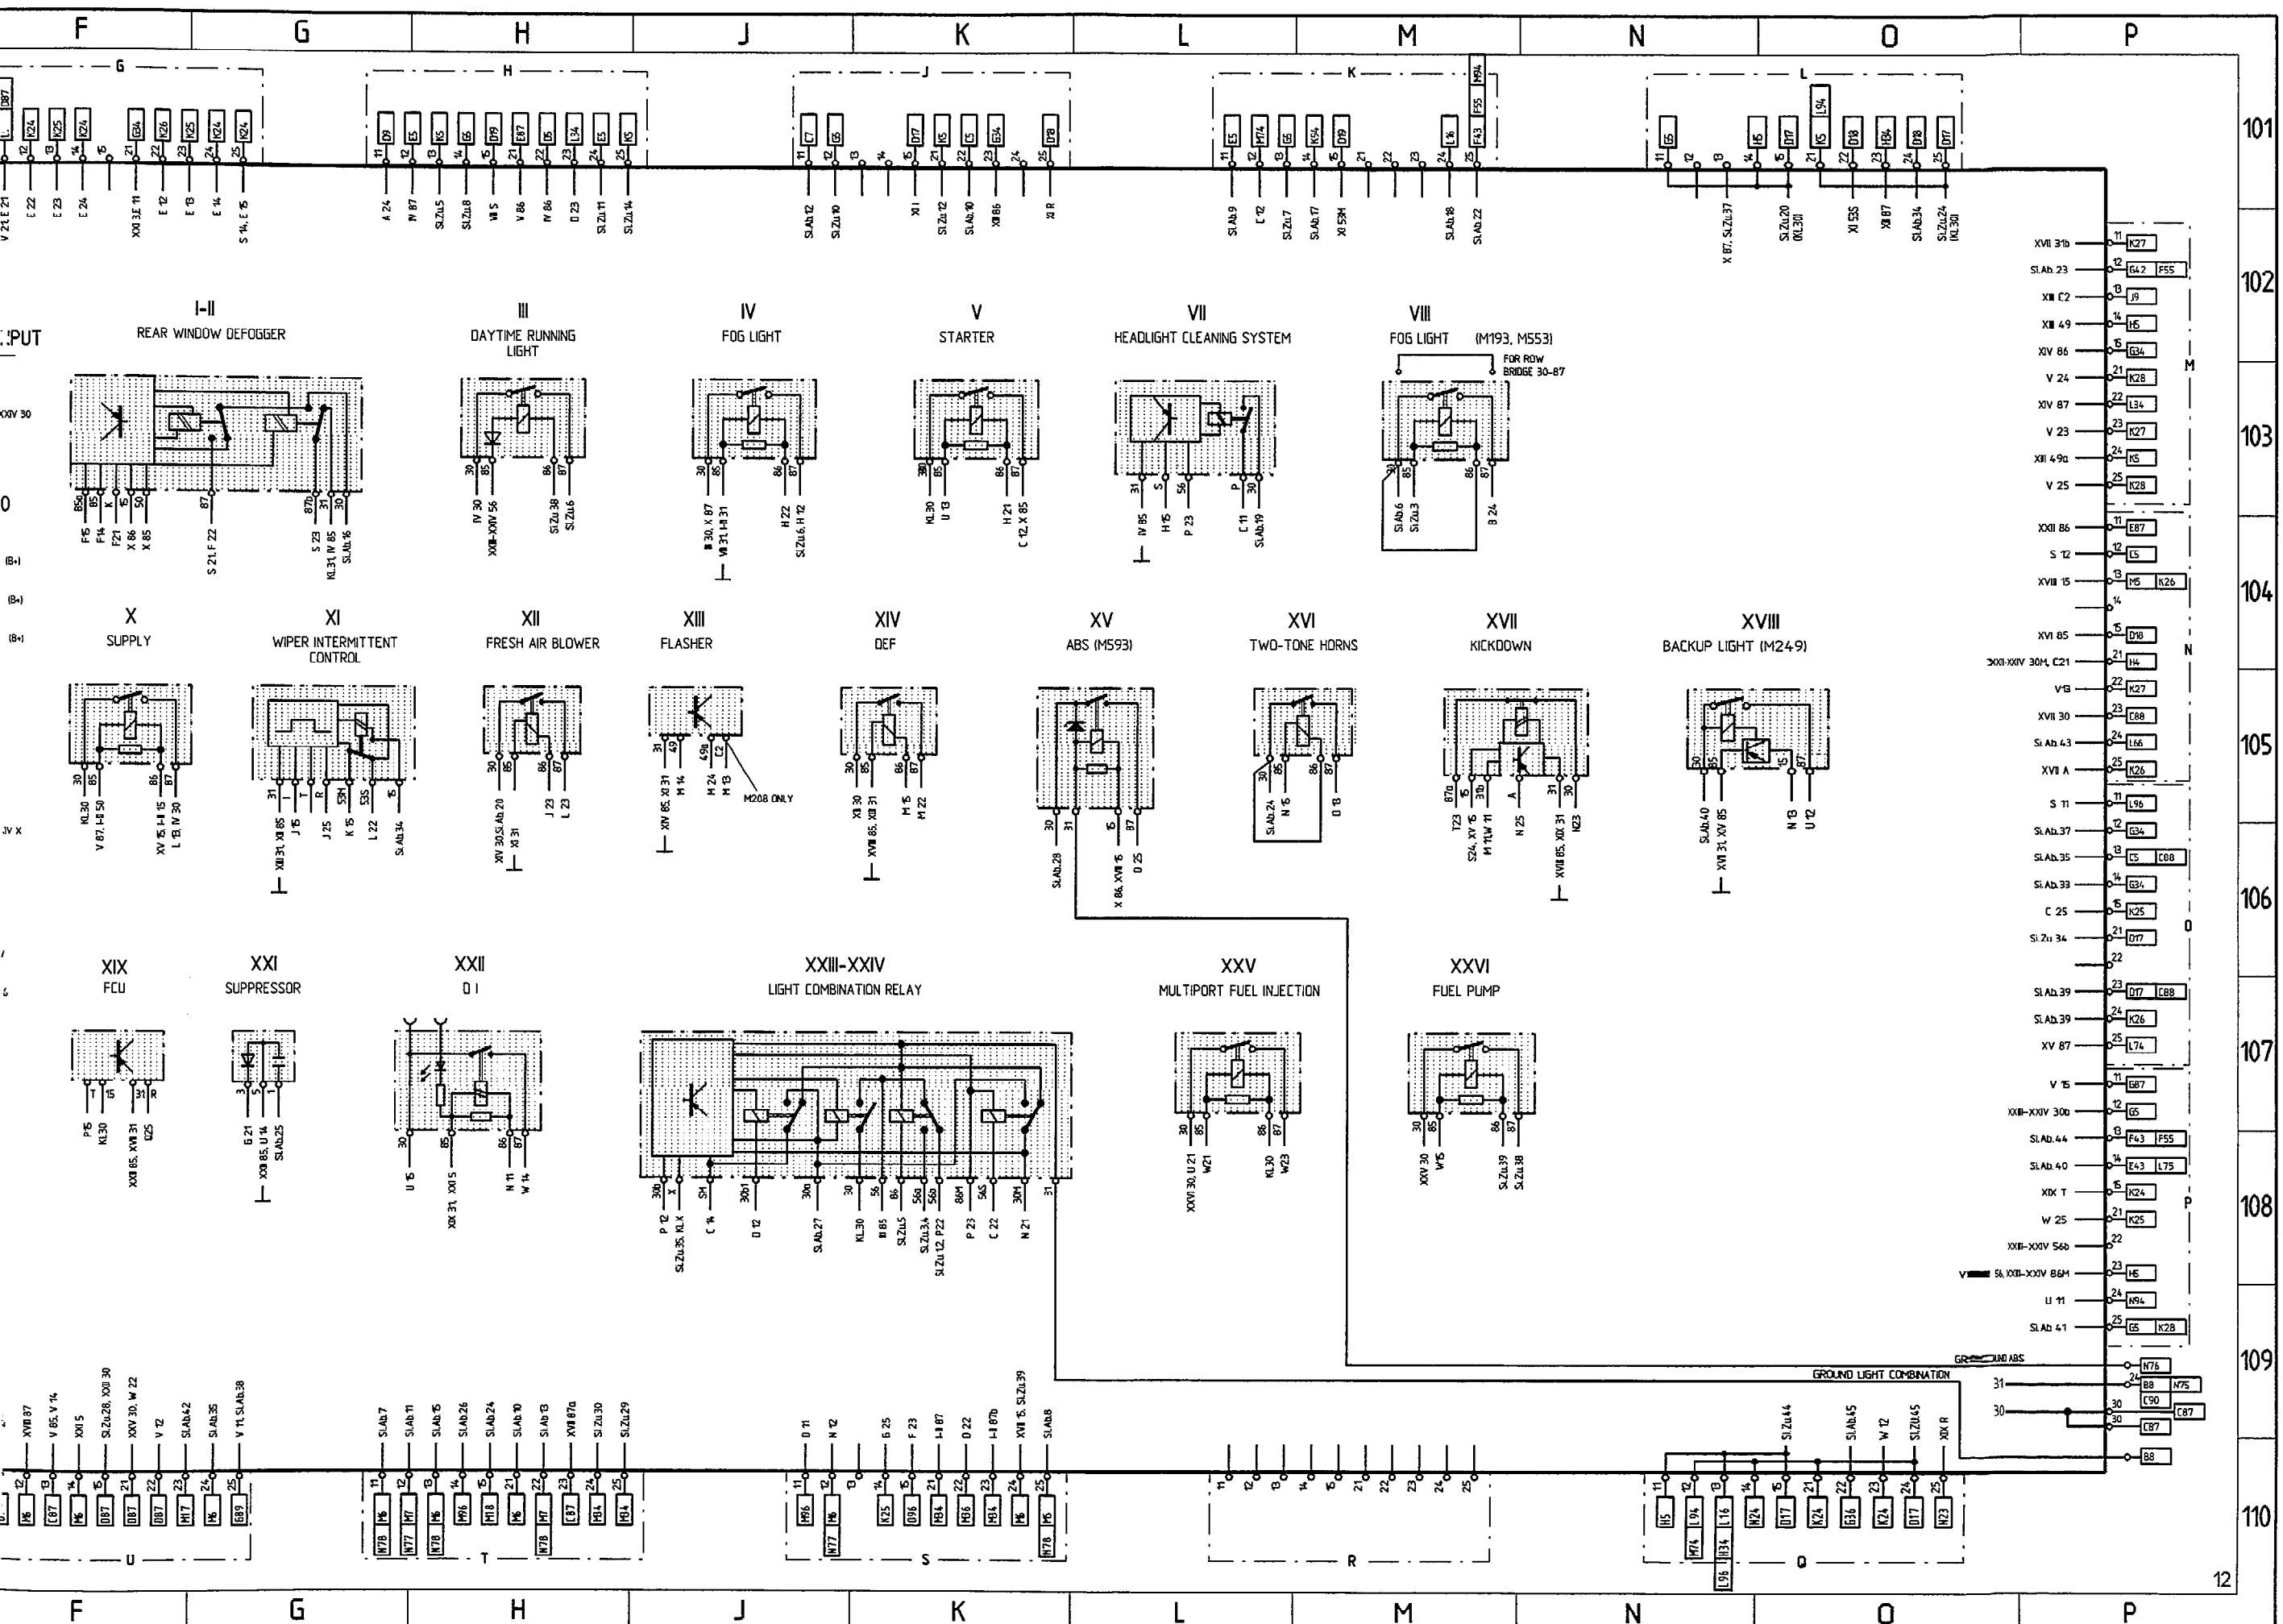

# 928 GTS MODEL 93/2 SHEET 13


## CONSTRUCTION COMPONENTS

CONSTRUCTION COMPONENTS					CONSTRUCTION COMPONENTS				
DESIGNATION, FUNCTION	POSITION IN VEHICLE		NOTE	FIELD IN WIRING DIAGRAM	DESIGNATION, FUNCTION	POSITION IN VEHICLE		NOTE	FIELD IN WIRING DIAGRAM
	LHD	RHD				LHD	RHD		
ABS/PORSCHE DIFFER. LOCK CONTROL UNIT	7cQ		IN DRIVER'S FOOTWELL ON SIDE	DJ 71-72	HF SENSOR				D-G 79,80
ABS/PORSCHE DIFFER. LOCK CONTROL UNIT		7cQ	ABOVE CENTRAL ELECTRIC	DJ 71-72	HIGH PRESSURE AND LOW PRESSURE SWITCH	2dM	2dM	IN FRONT OF AIR CONDITIONING COMPRESSOR RIGHT	P 32
ACCELERATING SENSOR	10eQ	10eQ	UNDER THE LEFT SEAT	K 73	HORN ALARM SYSTEM				L 91,92
AIR CONDITIONING SYSTEM CONTROL UNIT	8cN-O	8cN-O	IN HEATER BOX	AB 34-36	HYDRAULIC UNIT ABS				AB 73-76
ALARM-PRIMED INDICATOR LAMPS				MP 91,92	IGNITION CIRCUIT CONTROL CONTROL UNIT	7dL	7dQ	ON CONTROL UNIT CONSOLE	HJ 81,82
ASHTRAY LIGHT				GH 31	IGNITION FINAL STAGE				F 82,83
BACKUP LIGHT SWITCH				P5, L1,2	INDICATOR SWITCH BRAKE FLUID				F 21,22
BATTERY				C 82	INFO SWITCH				E 30
BLOWER FINAL STAGE				O 39,40	INSIDE TEMP. SENSOR				B 32,33
BLOWER INSIDE SENSOR				AB 33,34	INSIDE LIGHTS ROOF				P 99,100
BLOWER MOTOR				H 40	INSIDE LIGHTS TAILGATE I				O 99,100
BLOWER SWITCH FRESH AIR				JK 31,32	INSIDE LIGHTS TAILGATE II				N 99,100
BLOWER SWITCH ADDITIONAL AIR CONDITIONING SYSTEM				G 37,38	INSTRUMENT CLUSTER				A-C 22-30
BOOSTER	11eK	11eR	UNDER THE COVER ON PASSENGER'S SIDE SILL	GH 64,65	KICKDOWN SOLENOID VALVE				AB 86
BRAKE PAD WEAR INDICATOR				D-H 79,80	KICK-DOWN SWITCH				BC 86,87
BULB CONTROL UNIT	7cL	7cQ	ON PASSENGER'S PARCEL TRAY	NO 1	KNOCK SENSOR				LM 81
BUTTON PANEL AC SWITCH				EF 31,32	LICENSE PLATE LIGHTS				P 6,7
CENTRAL ELECTRIC	7dM	7dP	IN PASSENGER'S FOOTWELL ON FIREWALL		LIGHTS CENTRAL ELECTRIC				LM 93
CENTRAL LOCK BUTTON				E 99,100	LOCK CYLINDER FOR PASSENGER'S DOOR				C 91,92
CIGAR LIGHTER				GH 31	LOCK CYLINDER FOR DRIVER'S DOOR				A 91,92
CLOCK				F 1	MASS AIR FLOW SENSOR				OP 84,85
CLUTCH SWITCH				A 89,90	MEMORY SWITCH RIGHT				A 51,52
CODING ELEMENT				OP 83,84	MEMORY SWITCH LEFT				A 59,60
CONCEALED HEADLIGHT LEFT				A 7	M F I JETRONIC CONTROL UNIT	7dL	7dQ	IN PASSENGER'S FOOTWELL ON CONTROL UNIT CONSOLE	J 87-89
CONCEALED HEADLIGHT RIGHT				A 4	MICRO SWITCH CENTRAL NOZZLE				AB 37
CONCEALED HEADLIGHT MOTOR				A 5,6	MIRROR MEMORY CONTROL UNIT	7cQ	7cL	IN DRIVER'S FOOTWELL ON SIDE	D 52-57
CONTROL FOR ADDITIONAL AIR CONDITIONER	12dN	12dN	ON SUPPLEMENTARY AIR CONDITIONING, RIGHT	EF 39,40	MIRROR ADJUSTMENT SWITCH				AB 46,47, A 55,56
CONTROL UNIT AIRBAG				M-O 71	MOTOR POWER WINDOW PASSENGER'S SIDE				N 11
CONTROL UNIT ALARM SYSTEM	7cM	7cP	UNDER THE PASSEGER SEAT	GH 92-96	MOTOR POWER WINDOW DRIVER'S SIDE				F 11
CONTROL UNIT POWER WINDOWS, SUNROOF				JK 14	MOTOR SUN ROOF				E 11
CONTROL UNIT CRUISE CONTROL	6dQ		IN DRIVER'S FOOTWELL BELOW THE FOOT REST	AB 88,89	ODOMETER RESET SWITCH				JKL 21,22
CONTROL UNIT CRUISE CONTROL		7dN-O	IN CENTRE CONSOLE AT FRONT	AB 88,89	OIL LEVEL SWITCH	3eN-O	3eN-O	ON OIL PAN, FRONT	P 26
COOLANT FAN FINAL STAGE	1cN	1cN	IN ENGINE COMPARTMENT ON FRONT RIGHT END PANEL	O 39,40	OIL PRESSURE SENSOR				P 27
COOLANT FAN CONTROL UNIT	10eK	10eR	UNDER THE COVER ON PASSENGER'S SIDE SILL	MN 39,40	OIL TEMPERATURE SWITCH (M24.9)	13eD	13eD	ON TORQUE CONVERTER LEFT SIDE	P 36
COOLANT LEVEL SWITCH				M 29,30	OUTSIDE TEMP. SENSOR	2-3dQ	2-3dQ	IN AIR DUCT TO GENERATOR	G 31
COOLANT TEMP. SENSOR				P 26	OUTSIDE TEMP. SENSOR				D 21
CRUISE CONTROL SWITCH				A 87	PARKING BRAKE CONTACT				E 21,22
DELAYING RELAY SEAT HEATER				M 42	POTENTIOMETER INSTRUMENT LIGHT				DE 2
DIAGNOSTIC CONNECTOR				JK 30	POTENTIOMETER IDLE SPEED CO				OP 88
DI CONTROL UNIT	7dL	7dQ	IN PASSENGER'S FOOTWELL ON CONTROL UNIT CONSOLE	L 82-84	POTENTIOMETER FOR HEADLIGHT VERTICAL AIM CONTROL				D 1
DISTRIBUTER				GH 82,83	POTENTIOMETER FOR WIPING/WASHING				B 16
DOOR CONTACT SWITCH LEFT				BC 99,100	POTENTIOMETER EXTRA AIR CONDITIONING SYSTEM				F 37,38
DOOR CONTACT SWITCH RIGHT				C 99,100	PRESSURE SWITCH COOLANT				MN 30
DOOR CONTACT FOR GLOVE COMPARTMENT LIGHT				D 99,100	PRESSURE SWITCH FRIGEN				L 40
DOOR CONTACT SWITCH TAILGATE				F 99,100	PUMP LOCK DIFFERENTIAL	17dQ	17dQ	BEHIND THR LH REAR WHEEL	B 77,78
DOOR LOCK LIGHT PASSENGER'S SIDE				P 93	PUMP RELAIS LOCK DIFFERENTIAL	16dO	16dO	UNDER THE SPARE WHEEL COVER	B 79,80
DOOR LOCK LIGHT DRIVER'S SIDE				M 93	PUSH BUTTON SWITCH FOR POWER WINDOW				G 11, L 11
DRIVE CENTRAL LOCKING SYSTEM DRIVER'S DOOR				B 91,92	PUSH BUTTON SUN ROOF				E 14,15
DRIVE CENTRAL LOCKING SYSTEM PASSENGER'S DOOR				D 91,92	RADIATOR FAN				P 38,39
DRIVE CRUISE CONTROL				B 90	REAR WINDOW DEFODGER				P 31,32
ENGINE COMPARTMENT LIGHT				B 96	REAR WINDOW WIPER MOTOR				P 18,19
ENGINE SPEED SENSOR				JK 83,84	REAR WINDOW WIPER RELAY	18cO	18cO	UNDER THE TOOL KIT COVER	OP 17
EVAPORATOR SENSOR				H 37,38	RESISTANCE GROUP FOR BLOWER	7cL-M	7cL-M	ON BLOWER HOUSING	KL 31,32
FLOOR LAMP DRIVER'S SIDE				N 91,92	RESISTANCE GROUP FOR ADD. AIR CONDITIONER	12dD	12dD	ON SUPPLEMENTARY AIR CONDITIONING, LEFT	HJ 37,38
FLOOR LAMP PASSENGER'S SIDE				O 91,92	RESISTOR INSTRUMENT LIGHTS	7eP	7cM	UNDER THE STEERING CONSOLE	DE 21,22
FREEZING PROTECTION SWITCH AIR CONDITIONING SYSTEM	7cM	7cM	UNDER THE WINDSHIELD WIPER COVER	FG 31	ROOF ANTENNA				EF 61,62
FREQUENCY SWITCHES				FG 66, H66	SEAT BELT				O 22
FRESH AIR BLOWER ENGINE				LM 31,32	SEAT MEMORY CONTROL UNIT LEFT	10dP	10dP	IN SEAT	K-O 57
FRONT SENSOR AIRBAG				OP 73,74	SEAT MEMORY CONTROL UNIT RIGHT	10dM	10dM	IN SEAT	K-O 53,54
FUEL INJECTORS				L-N 90	SHIFT VALVE RESONANCE FLAP				OP 86
FUEL LEVEL SENSOR				H 30	SOLENOID CLUTCH COMPRESSOR				P 33
FUEL PUMP				GH 90	SOLENOID VALVE ABS				C 72
GENERATOR				DE 81,82	SOLENOID VALVES AIR CONDITIONING				B 37-40
GLOVE BOX LAMP				CD 100	SOLENOID VALVE LOCK DIFFERENTIAL	17dQ	17dQ	BEHIND THE LH REAR WHEEL	C 72
HALL SENSOR				L 81	SOLENOID VALVE (ADDITIONAL AIR CONDITIONER)	10eM	10eM	UNDER THE RIGHT SEAT	F 38
HAZARD LIGHT SWITCH				HJ 1	SPEAKER				F-J 66-69
HEADLIGHT WASHING FLUID PUMP				D 11	SPEED SENSOR				E-H 79,80
HEADLIGHT VERTICAL AIM CONTROL				A4, A 6,7	STEERING IGNITION LOCK				B 14-16
HEATED OXYGEN SENSOR				O 90	STARTER INTERLOCK				L12, H21, A85

F G H J K L M N O P

DESIGNATION, FUNCTION	POSITION IN VEHICLE		NOTE	FIELD IN WIRING DIAGRAM
	LHD	RHD		
HF SENSOR				D-G 79,80
HIGH PRESSURE AND LOW PRESSURE SWITCH	2dM	2dM	IN FRONT OF AIR CONDITIONING COMPRESSOR RIGHT	P 32
HORN ALARM SYSTEM				L 91,92
HYDRAULIC UNIT ABS				AB 73-76
IGNITION CIRCUIT CONTROL UNIT	7dL	7dQ	ON CONTROL UNIT CONSOLE	HJ 81,82
IGNITION FINAL STAGE				F 82,83
INDICATOR SWITCH BRAKE FLUID				F 21,22
INFO SWITCH				E 30
INSIDE TEMP. SENSOR				B 32,33
INSIDE LIGHTS ROOF				P 99,100
INSIDE LIGHTS TAILGATE I				D 99,100
INSIDE LIGHTS TAILGATE II				N 99,100
INSTRUMENT CLUSTER				A-C 22-30
KICKDOWN SOLENOID VALVE				AB 86
KICK-DOWN SWITCH				BE 86,87
KNOCK SENSOR				LM 81
LICENSE PLATE LIGHTS				P 6,7
LIGHTS CENTRAL ELECTRIC				LM 93
LOCK CYLINDER FOR PASSENGER'S DOOR				C 91,92
LOCK CYLINDER FOR DRIVER'S DOOR				A 91,92
MASS AIR FLOW SENSOR				OP 84,85
MEMORY SWITCH RIGHT				A 51,52
MEMORY SWITCH LEFT				A 59,60
M F I JETRONIC CONTROL UNIT	7dL	7dQ	IN PASSENGER'S FOOTWELL ON CONTROL UNIT CONSOLE	J 87-89
MICRO SWITCH CENTRAL NOZZLE				AB 37
MIRROR MEMORY CONTROL UNIT	7cQ	7cL	IN DRIVER'S FOOTWELL ON SIDE	D 52-57
MIRROR ADJUSTMENT SWITCH				AB 46,47, A 55,56
MOTOR POWER WINDOW PASSENGER'S SIDE				N 11
MOTOR POWER WINDOW DRIVER'S SIDE				F 11
MOTOR SUN ROOF				E 11
ODOMETER RESET SWITCH				JKL 21,22
OIL LEVEL SWITCH	3eN-D	3eN-D	ON OIL PAN, FRONT	P 26
OIL PRESSURE SENSOR				P 27
OIL TEMPERATURE SWITCH (M249)	13eO	13eO	ON TORQUE CONVERTER LEFT SIDE	P 36
OUTSIDE TEMP. SENSOR	2-3dQ	2-3dQ	IN AIR DUCT TO GENERATOR	G 31
OUTSIDE TEMP. SENSOR				D 21
PARKING BRAKE CONTACT				E 21,22
POTENTIOMETER INSTRUMENT LIGHT				DE 2
POTENTIOMETER IDLE SPEED CO				OP 88
POTENTIOMETER FOR HEADLIGHT VERTICAL AIM CONTROL				D 1
POTENTIOMETER FOR WIPING/WASHING				B 16
POTENTIOMETER EXTRA AIR CONDITIONING SYSTEM				F 37,38
PRESSURE SWITCH COOLANT				MN 30
PRESSURE SWITCH FRIGEN				L 40
PUMP LOCK DIFFERENTIAL	17dQ	17dQ	BEHIND THR LH REAR WHEEL	B 77,78
PUMP RELAIS LOCK DIFFERENTIAL	16dO	16dO	UNDER THE SPARE WHEEL COVER	B 79,80
PUSH BUTTON SWITCH FOR POWER WINDOW				G 11, L 11
PUSH BUTTON SUN ROOF				E 14,15
RADIATOR FAN				P 38,39
REAR WINDOW DEFOGGER				P 31,32
REAR WINDOW WIPER MOTOR				P 18,19
REAR WINDOW WIPER RELAY	18cO	18cO	UNDER THE TOOL KIT COVER	OP 17
RESISTANCE GROUP FOR BLOWER	7cL-M	7cL-M	ON BLOWER HOUSING	KL 31,32
RESISTANCE GROUP FOR ADD. AIR CONDITIONER	12dO	12dO	ON SUPPLEMENTARY AIR CONDITIONING, LEFT	HJ 37,38
RESISTOR INSTRUMENT LIGHTS	7eP	7eM	UNDER THE STEERING CONSOLE	DE 21,22
ROOF ANTENNA				EF 61,62
SEAT BELT				O 22
SEAT MEMORY CONTROL UNIT LEFT	10dP	10dP	IN SEAT	K-O 57
SEAT MEMORY CONTROL UNIT RIGHT	10dM	10dM	IN SEAT	K-O 53,54
SHIFT VALVE RESONANCE FLAP				OP 86
SOLENOID CLUTCH COMPRESSOR				P 33
SOLENOID VALVE ABS				C 72
SOLENOID VALVES AIR CONDITIONING				B 37-40
SOLENOID VALVE LOCK DIFFERENTIAL	17dQ	17dQ	BEHIND THE LH REAR WHEEL	C 72
SOLENOID VALVE (ADDITIONAL AIR CONDITIONER)	10eM	10eM	UNDER THE RIGHT SEAT	F 38
SPEAKER				F-J 66-69
SPEED SENSOR				E-H 79,80
STEERING IGNITION LOCK				B 14-16
STARTER INTERLOCK				L12, H21, A85

DESIGNATION, FUNCTION	POSITION IN VEHICLE		NOTE	FIELD IN WIRING DIAGRAM
	LHD	RHD		
STOP LIGHT TAILGATE				J 9,10
STOP LIGHT SWITCH				C 2,3
SUPPRESSOR FOR RADIO	8dO	8dO	IN CENTRE CONSOLE IN FRONT OF RADIO	DE 61
SWITCHING UNIT EX (M193)	8dN		IN CENTRE CONSOLE BELOW RADIO	P 28-30
TAILGATE LOCK				E 91
TAILGATE UNLOCKING SWITCH				KL 99,100
TAILGATE UNLOCKING DRIVE				M 99,100
TANK VENTING VALVE				OP 86,87
TEMPERATURE SENSOR DOUBLE NTC				OP 87,88
TEMPERATURE SENSOR COOLING WATER				K 40
TEMPERATURE SWITCH SUCTION TUBE				K 40
THERMO ELEMENTS CATALYTIC CONVERTER				D 28,29
THERMO ELEMENTS IGNITION CIRCUIT				JK 82
THROTTLE VALVE SWITCH	5cM	5cP	IN COOLANT HOSE BEFORE EXPANSION TANK	JK 90
TIME RELAY	8dN		IN CENTRE CONSOLE BELOW RADIO	P 23-25
TIRE PRESSURE CONTROL CONTROL UNIT	7cP	7cM	ON INSTRUMENT PANEL	K 76-78
TOOTHED BELT TENSION SWITCH				N 22
TRAILER COUPLING				O75
TRANSMISSION PROTECTION SWITCH				D 84,85
TURN SIGNAL / DIMMER SWITCH				JK 12
TWO-TONE HORNS				CD 20
WARNING BUZZER	8cP	8cM	ON STEERING PROTECTIVE TUBE	D 29,30
WASHING JETS				B 11,12
WASHING FLUID LEVEL SWITCH	6cL	6cL	ON WINDSHIELD WASHER TANK	MN 28,29
WINDSHIELD WASHING FLUID PUMP				D 11
WIPE/WASH SWITCH				AB 18-20

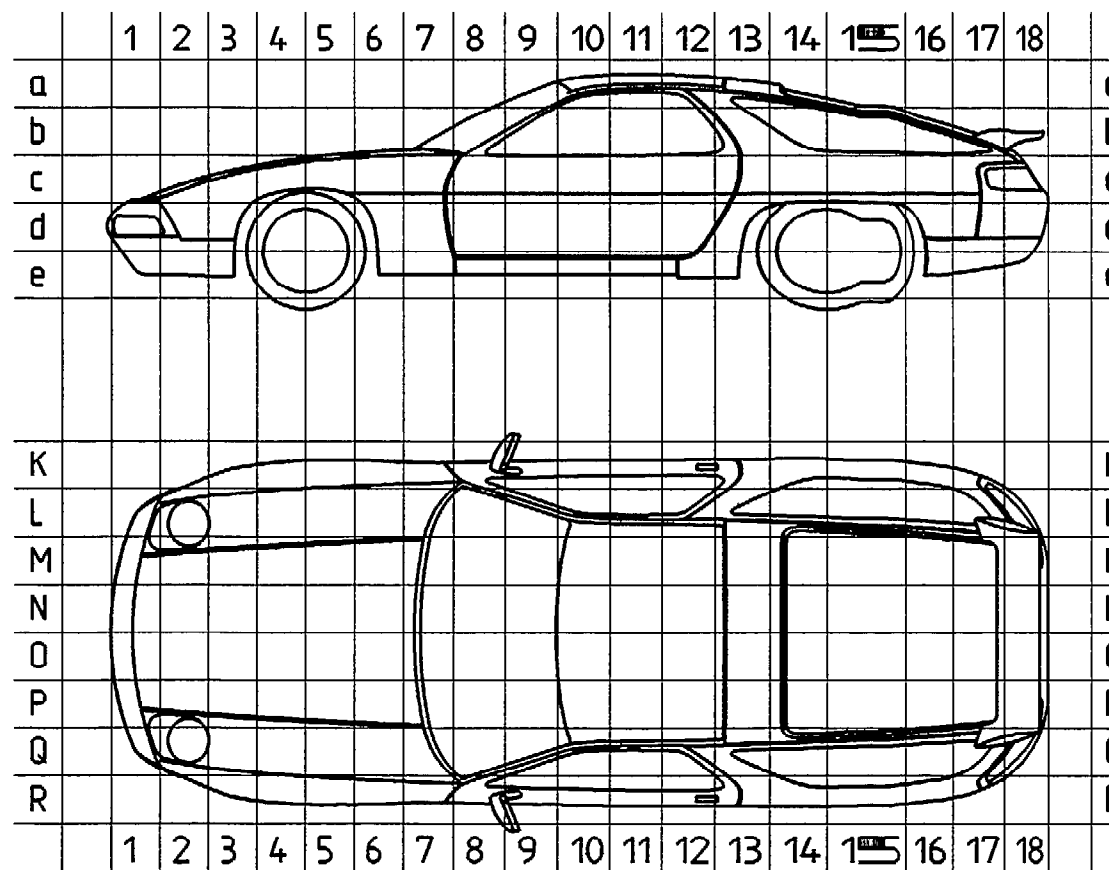

F G H J K L M N O P

### PLUG CONNECTIONS

CODE	NUMBER OF PINS	DESIGNATION, FUNCTION	POSITION IN VEHICLE		NOTE	FIELD IN WIRING DIAGRAM
			LHD	RHD		
T1	3	GLOVE BOX LAMP	7cL	7cQ	ABOVE D1 MFI CONTROL UNIT	CD98
T2	2	ENGINE COMPARTMENT LIGHT	6cD	6cO	UNDER THE WIPER SYSTEM COVER	B97
T3	26	DOOR DRIVER'S SIDE	7cQ	7cL	ON DRIVER'S DOOR	C44,C55-60,D22,A93,94,K92,93
T4	26	DOOR PASSENGER'S SIDE	7cL	7cQ	IN PASSENGER'S DOOR	B42,C51-54,C93,94,K92,93
T5	30	INSTRUMENT SCUTTLE	7cQ	7cL	AT SUPPORTING TUBE ON STEERING COLUMN	C3-H3, K23,H33
T6	12	DOOR DRIVER'S SIDE	7cQ	7cL	ON DRIVER'S DOOR	C44,C60,FG65,G14,B93,94,N93
T7	2	TRANSMISSION BACKUP LIGHT SWITCH	16dO	16dO	UNDER THE SPARE WHEEL COVER	P5
T8	2	LICENSE PLATE LIGHTS	18cN	18cO	UNDER THE TOOL KIT COVER	P6
T9	2	DOOR CONTACT SWITCH TAILGATE	18cO	18cO	UNDER CARPET IN FRONT OF TOOL KIT	F98
T10	6	REAR WIRING LOOM / B-PILLAR	13dL	13dQ	UNDER THE PASSENGER SIDE REAR TRIM PANEL	LM10,N31-32,097
T11	8	B-PILLAR / TAILGATE	13aN	13aO	UNDER TAILGATE TRIM PANEL CLOSE TO SUN VISOR	K10,N031,32,098
T12	2	SIDE MARKER LIGHT LEFT REAR	18cO		UNDER THE TOOL KIT COVER	O10
T13	2	SIDE MARKER LIGHT RIGHT REAR	18cN		UNDER THE TOOL KIT COVER	O2
T14						
T15						
T16						
T17						
T18	14	FRONT END / ENGINE WIRING LOOM	3cM	3cM	IN ENGINE COMPARTMENT AT RIGHT WHEEL HOUSING	O26,27,033,JK39,083
T19	26	INSTRUMENT PANEL - / REAR WIRING LOOM	7dL	7dL	NEAR CENTRAL ELECTRIC	EF13,GH28,HJ23,M4,F96,97,J97
T20	14	SEAT DRIVER'S SIDE	10eO	10eL	UNDER THE SEAT, ADVANCE SEAT	F58-60,HJ46,K43-44
T21	14	SEAT PASSENGER'S SIDE	10eL	10eO	UNDER THE SEAT, ADVANCE SEAT	H42,F51-53
T22	12	DOOR PASSENGER'S SIDE	7cL	7cQ	IN PASSENGER'S DOOR	C42,C51,H65,L14,D93,94,093
T23	21	ABS	7dQ	7dQ	FOOTWELL AT LEFT SIDE PANEL	K73-76,F30
T24	6	TRAILER COUPLING	6dL	6dQ	UNDER THE CENTRAL ELECTRIC	QP75,76
T25	1	WIRE CONNECTOR	L4	L4	IN ENGINE COMPARTMENT RIGHT	C85
T26	2	HEATED SPRAY JET LEFT	6cO	6cO	UNDER THE WIPER SYSTEM COVER	C12
T27	2	HEATED SPRAY JET RIGHT	6cO	6cO	UNDER THE WIPER SYSTEM COVER	C11
T28						
T29	4	AIR CONDITIONING SYSTEM	8cN	8cN	IN CENTRE CONSOLE	F33
T30	6	AIR CONDITIONING SYSTEM	8cN	8cN	IN CENTRE CONSOLE	F33-34
T31	4	INSIDE TEMP. SENSOR FOR AIR CONDITIONER	8cN	8cN	IN CENTRE CONSOLE	BC33
T32	3	AUTOMATIC TRANSMISSION	16dO	16dO	UNDER THE SPARE WHEEL COVER	O36,D86
T33	6	FRONT END / INSTRUMENT PANEL WIRING LOOM	6dL	6dQ	UNDER THE CENTRAL ELECTRIC	C2,A98
T34	8	ADDITIONAL AIR CONDITIONER	12dN	12dN	ON SUPPLEMENTARY AIR CONDITIONING, RIGHT	G39
T35	1	ADDITIONAL AIR CONDITIONER	6dL	6dQ	UNDER THE CENTRAL ELECTRIC	F36
T36	6	MIRROR PASSENGER'S SIDE				B41-42
T37	15	MIRROR DRIVER'S SIDE				CD48, C21
T38	15	MIRROR PASSENGER'S SIDE WITH MEMORY				A52-54
T39	15	MIRROR DRIVER'S SIDE WITH MEMORY				A57-58
T40						
T41						
T42	6	WL INSTRUMENT PANEL / WL B-PILLAR	13dL	13dQ	UNDER THE PASSENGER SIDE REAR TRIM PANEL	E13,E93,94
T43						
T44	3	WIRING LOOM B-PILLAR / TAILGATE LOCK	13aN	13aO	UNDER TAILGATE TRIM PANEL CLOSE TO SUN VISOR	E92
T45	2	IGNITION FINAL STAGE / CONTROL UNIT	6dL	6dQ	UNDER THE CENTRAL ELECTRIC	KL83,84
T46	19	DIAGNOSTIC CONNECTOR	11eK	11eR	UNDER THE COVER ON PASSENGER'S SIDE SILL	JK30
T47	8	CODING ELEMENT FOR IGNITION SYSTEM AND LH-JETRONIC	7dL	7dQ	ON CONTROL UNIT CONSOLE	N84
T48	3	HEATED OXYGEN SENSOR	6dL	6dQ	UNDER THE CENTRAL ELECTRIC	O89
T49	2	FRESH AIR BLOWER	7cL	7cL	ON BLOWER HOUSING	LM32
T50	6	AUTOM. TRANSM. COUPLING TO GEARBOX WIRING LOOM	16dO	16dO	UNDER THE SPARE WHEEL COVER	HJ22
T51	6	AUTOM. TRANSMISSION COUPLING TO REAR WIRING LOOM	16dO	16dO	UNDER THE SPARE WHEEL COVER	BC85,86,M2
T52	6	AIRBAG	8dN		IN CENTRE CONSOLE	M73
T53	2	AIRBAG	8dN		IN CENTRE CONSOLE	M73

### GROUND POINTS

CODE	DESIGNATION, FUNCTION	POSITION IN VEHICLE		NOTE
		LHD	RHD	
GP I	BODY FRONT LEFT	1cO	1cO	IN ENGINE COMPARTMENT AT FRONT END PANEL
GP II	BODY FRONT RIGHT	2cM	2cM	IN ENGINE COMPART. NEAR AIR CONDITIONING CONDENSER
GP III	WHEEL HOUSING WALL FRONT RIGHT	3cM	3cM	IN ENGINE COMPARTM. RIGHT SIDE ABOVE IGNITION COIL
GP IV	STEERING CONSOLE	8cP	8cM	ON STEERING CONSOLE, BELOW LEFT
GP V	FIREWALL	8dM	8dP	ABOVE CENTRAL ELECTRIC
GP VI	BODY REAR	16dO	16dO	UNDER THE SPARE WHEEL COVER
GP VII	GROUND STRAP BATTERY	18dO	18dO	UNDER THE TOOL KIT COVER
GP VIII	ENGINE POWER	6cO	6cO	ON UPPER CRANKCASE, REAR LEFT
GP IX	ENGINE ELECTRONICS	6cN	6cN	ON UPPER CRANKCASE, REAR RIGHT
GP X	WHEEL HOUSING LEFT OUTER	3dQ	3dQ	BEHIND ABS HYDRAULIC UNIT
GP XI	WHEEL HOUSING RIGHT INNER	5cM	5cM	IN ENGINE COMPART. ON RIGHT SUSPENSION STRUT MOUNT
GP XII	WHEEL HOUSING LEFT INNER	5cP	5cP	IN ENGINE COMPARTM. ON LEFT SUSPENSION STRUT MOUNT

### ABBREVIATIONS

CODE	MEANING	CODE	MEANING
ABS	ANTILOCK BRAKING SYSTEM	NTC	NEGATIVE TEMPERATURE COEFFICIENT
AC	AIR CONDITIONING SYSTEM	NO	NUMBER
ADL	ADDITIONAL DRIVING LIGHTS	OP	OPEN
CE	CENTRAL ELECTRIC	PIN	PIN
CL	CLOSE	PL	PLUG
CLS	CENTRAL LOCKING SYSTEM	POT	POTENTIOMETER
CP	CONNECTING POINT	PSD	PORSCHE LIMITED SLIP DIFFERENTIAL
CU	CONTROL UNIT	RA	REAR AXLE
DEF	DEFROST	RDK	TIRE PRESSURE CONTROL
D I	ELECTRIC IGNITION SYSTEM WITH KEY-JOCK CONTROL	RHD	RIGHT-HAND DRIVE
DP	DISCONNECTING POINT	RFL	REAR FOG LIGHT
ESO	ENGINE-SPEED SENSOR OUTPUT	RL	REAR LEFT
FA	FRONT AXLE	ROW	REST OF WORLD
FCU	FREQUENCY CONVERTER UNIT	RR	REAR RIGHT
FL	FRONT LEFT	SA	SAUDI ARABIA
FOG	FOG LIGHT	SCS	COMBINED STEERING COLUMN SWITCH
FR	FRONT RIGHT	SS	SPEED SENSOR
GP	GROUND POINT	TE	TERMINAL
HCS	HEADLIGHT CLEANING SYSTEM	USA	USA
HF	HIGH FREQUENCY	WL	WIRING LOOM
IC	INSTRUMENT CLUSTER	WP	WELD POINT
LED	LIGHT-EMITTING DIODE	WW	WORLDWIDE
LF	LOW FREQUENCY		
LHD	LEFT-HAND DRIVE		
MFI - DI	DIGITAL ENGINE ELECTRONICS		

F

G

H

J

K

L

M

N

O

P

GROUND POINTS


CODE	DESIGNATION, FUNCTION	POSITION IN VEHICLE		NOTE
		LHD	RHD	
GP I	BODY FRONT LEFT	1cO	1cO	IN ENGINE COMPARTMENT AT FRONT END PANEL
GP II	BODY FRONT RIGHT	2cM	2cM	IN ENGINE COMPART. NEAR AIR CONDITIONING CONDENSER
GP III	WHEEL HOUSING WALL FRONT RIGHT	3cM	3cM	IN ENGINE COMPARTM. RIGHT SIDE ABOVE IGNITION COIL
GP IV	STEERING CONSOLE	8cP	8cM	ON STEERING CONSOLE, BELOW LEFT
GP V	FIREWALL	8dM	8dP	ABOVE CENTRAL ELECTRIC
GP VI	BODY REAR	16dO	16dO	UNDER THE SPARE WHEEL COVER
GP VII	GROUND STRAP BATTERY	18dO	18dO	UNDER THE TOOL KIT COVER
GP VIII	ENGINE POWER	6cO	6cO	ON UPPER CRANKCASE, REAR LEFT
GP IX	ENGINE ELECTRONICS	6cN	6cN	ON UPPER CRANKCASE, REAR RIGHT
GP X	WHEEL HOUSING LEFT OUTER	3dQ	3dQ	BEHIND ABS HYDRAULIC UNIT
GP XI	WHEEL HOUSING RIGHT INNER	5cM	5cM	IN ENGINE COMPART. ON RIGHT SUSPENSION STRUT MOUNT
GP XII	WHEEL HOUSING LEFT INNER	5cP	5cP	IN ENGINE COMPARTM. ON LEFT SUSPENSION STRUT MOUNT

M - NUMBERS

M 061	ENGLAND VERSION	M 513	LUMBAR SUPPORT SEAT RIGHT
M 139	ADJUSTABLE SEAT HEATING SEAT LEFT	M 525	ALARM SYSTEM WITH CONTINUOUS TONE (SWITZERLAND)
M 193	JAPAN VERSION	M 528	OUTSIDE MIRROR CONVEX PASSENGER'S SIDE
M 195	TELEPHONE PREPARATION CELLULAR (MOTOROLA)	M 537	SEATING POSITION CONTROL COMFORT SEAT LEFT
M 208	TRAILER COUPLING	M 538	SEATING POSITION CONTROL COMFORT SEAT RIGHT
M 215	SAUDI-ARABIA VERSION	M 553	USA - CANADA VERSION
M 249	AUTOMATIC TRANSMISSION	M 562	AIRBAG
M 261	OUTSIDE MIRROR FLAT PASSENGER'S SIDE	M 570	ADD. AIR CONDITIONER (INCREASED COOLING CAPACITY)
M 340	ADJUSTABLE SEAT HEATING SEAT RIGHT	M 576	REAR FOG LIGHT
M 383	SPORT SEAT LEFT	M 586	LUMBAR SUPPORT SEAT LEFT
M 387	SPORT SEAT RIGHT	M 602	HIGH MOUNTED STOP LIGHT
M 479	AUSTRALIAN VERSION	M 612	TELEPHONE PREPARATION C-NETWORK (PHILIPS)
M 481	TRANSMISSION	M 650	ELECTRIC SUN ROOF
M 484	USA VERSION		

ABBREVIATIONS

CODE	MEANING	CODE	MEANING
ABS	ANTILOCK BRAKING SYSTEM	NTC	NEGATIVE TEMPERATURE COEFFICIENT
AC	AIR CONDITIONING SYSTEM	NO	NUMBER
ADL	ADDITIONAL DRIVING LIGHTS	OP	OPEN
CE	CENTRAL ELECTRIC	PIN	PIN
CL	CLOSE	PL	PLUG
CLS	CENTRAL LOCKING SYSTEM	POT	POTENTIOMETER
CP	CONNECTING POINT	PSD	PORSCHE LIMITED SLIP DIFFERENTIAL
CU	CONTROL UNIT	RA	REAR AXLE
DEF	DEFROST	RDK	TIRE PRESSURE CONTROL
DI	ELECTRIC IGNITION SYSTEM WITH KNOCK CONTROL	RHD	RIGHT-HAND DRIVE
DP	DISCONNECTING POINT	RFL	REAR FOG LIGHT
ESO	ENGINE-SPEED SENSOR OUTPUT	RL	REAR LEFT
FA	FRONT AXLE	ROW	REST OF WORLD
FCU	FREQUENCY CONVERTER UNIT	RR	REAR RIGHT
FL	FRONT LEFT	SA	SAUDI ARABIA
FOG	FOG LIGHT	SCS	COMBINED STEERING COLUMN SWITCH
FR	FRONT RIGHT	SS	SPEED SENSOR
GP	GROUND POINT	TE	TERMINAL
HCS	HEADLIGHT CLEANING SYSTEM	USA	USA
HF	HIGH FREQUENCY	WL	WIRING LOOM
IC	INSTRUMENT CLUSTER	WP	WELD POINT
LED	LIGHT-EMITTING DIODE	WW	WORLDWIDE
LF	LOW FREQUENCY		
LHD	LEFT-HAND DRIVE		
MFI + DI	DIGITAL ENGINE ELECTRONICS		

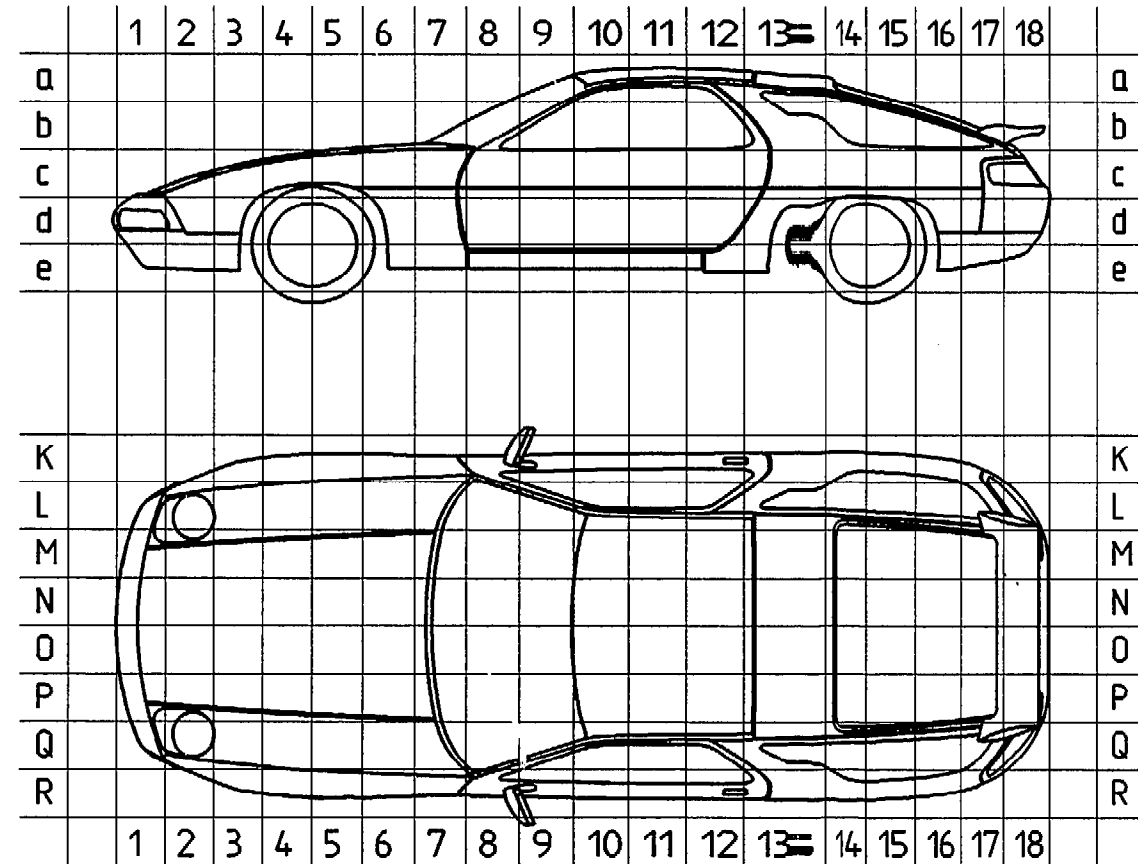

FIELD IN WIRING DIAGRAM

CD98
B97
C44,C55-60,D22,A93,94,K92,93
B42,C51-54,C93,94,K92,93
C3-H3,K23,H33
C44,C60,FG65,G14,B93,94,N93
P5
P6
F98
LM10,N31-32,097
K10,N031,32,098
O10
O2

O26,27,033,K39,083
EF13,GH28,HJ23,M4,F96,97,197
F58-60,HJ46,K43-44
H42,F51-53
C42,C51,H65,L14,D93,94,093
K73-76,F30
OP75,76
C85
C12
C11

F33
F33-34
BC33
O36,D86
C2,A98
G39
F36
B41-42
CD48,C21
A52-54
A57-58

E13,E93,94
E92
KL83,84
JK30
NB4
D89
LM32
HJ22
BC85,86,M2
M73
M73

F

G

H

J

K

L

M

N

O

P