

Workshop Manual

928

DR. ING. h. c. F. PORSCHE Aktiengesellschaft

The Workshop Manual is only for the internal use of the Porsche Dealer Organization.

© 1977 Dr. Ing. h.c. F. Porsche Aktiengesellschaft
Sales, D-7140 Ludwigsburg

All rights reserved. – Printed in Germany XX, 1988

WKD 481 621

Print No. W 42-608-126-1

List of Repair Groups

General	Technical Data	Page 0.1
Repair Groups		Group
	Maintenance, Self-diagnosis	03
Engine	Engine, Crankcase	10
	Engine, Crankshaft, Pistons	13
	Engine, Cylinder Head and Valve Drive	15
	Engine, Lubrication	17
	Engine, Cooling	19
	Fuel Supply	20
	Air Flow Controlled Fuel Injection	24
	Exhaust System/Emission Controls	26
	Starter, Power Supply, Cruise Control	27
	Ignition System	28
Transmission	Clutch, Controls	30
	Torque Converter	32
	Manual Transmission, Controls, Case	34
	Manual Transmission, Gears, Shafts	35
	Automatic Transmission, Controls, Case	37
	Automatic Transmission, Gears, Valve Body	38
	Differential, Transaxle System	39
Chassis	Front Wheel Suspension	40
	Rear Wheel Suspension, Axle Shaft	42
	Wheels, Tires, Alignment	44
	Antiblock System	45
	Brakes, Mechanical	46
	Brakes, Hydraulics	47
	Steering	48
Body	Body-Front Section	50
	Body-Center Section	51
	Body-Rear Section	53
	Lids	55
	Doors	57
	Hardtop	61
	Bumpers	63
	Glasses, Window Control	64
	Exterior Equipment	66
	Interior Equipment	68
	Seats	72
	Seat Covers	74
Heating, Ventilation, Air Condition	Heater	80
	Ventilation	85
	Air Conditioner	87
Electrics	Instruments, Fuel Gauge, Alarm System	90
	Radio	91
	Windshield Wipers and Washer	92
	Exterior Lights, Lamps, Switches	94
	Interior Lights	96
	Wiring	97

Wiring

Wiring diagram 928 S4 Model 88	97 - 281
Wiring diagram 928 S4/GT Model 89	87 - 309
Wiring diagram 928 S4/GT Model 90	97 - 339
Wiring diagram 928 S4/GT Model 91	97 - 367
Wiring diagram 928 GTS Model 93	97 - 397
Wiring diagram 928 GTS Model 93/2	97 - 427