


Electric wiring diagram (Part II) Type 914, Model 71 - USA

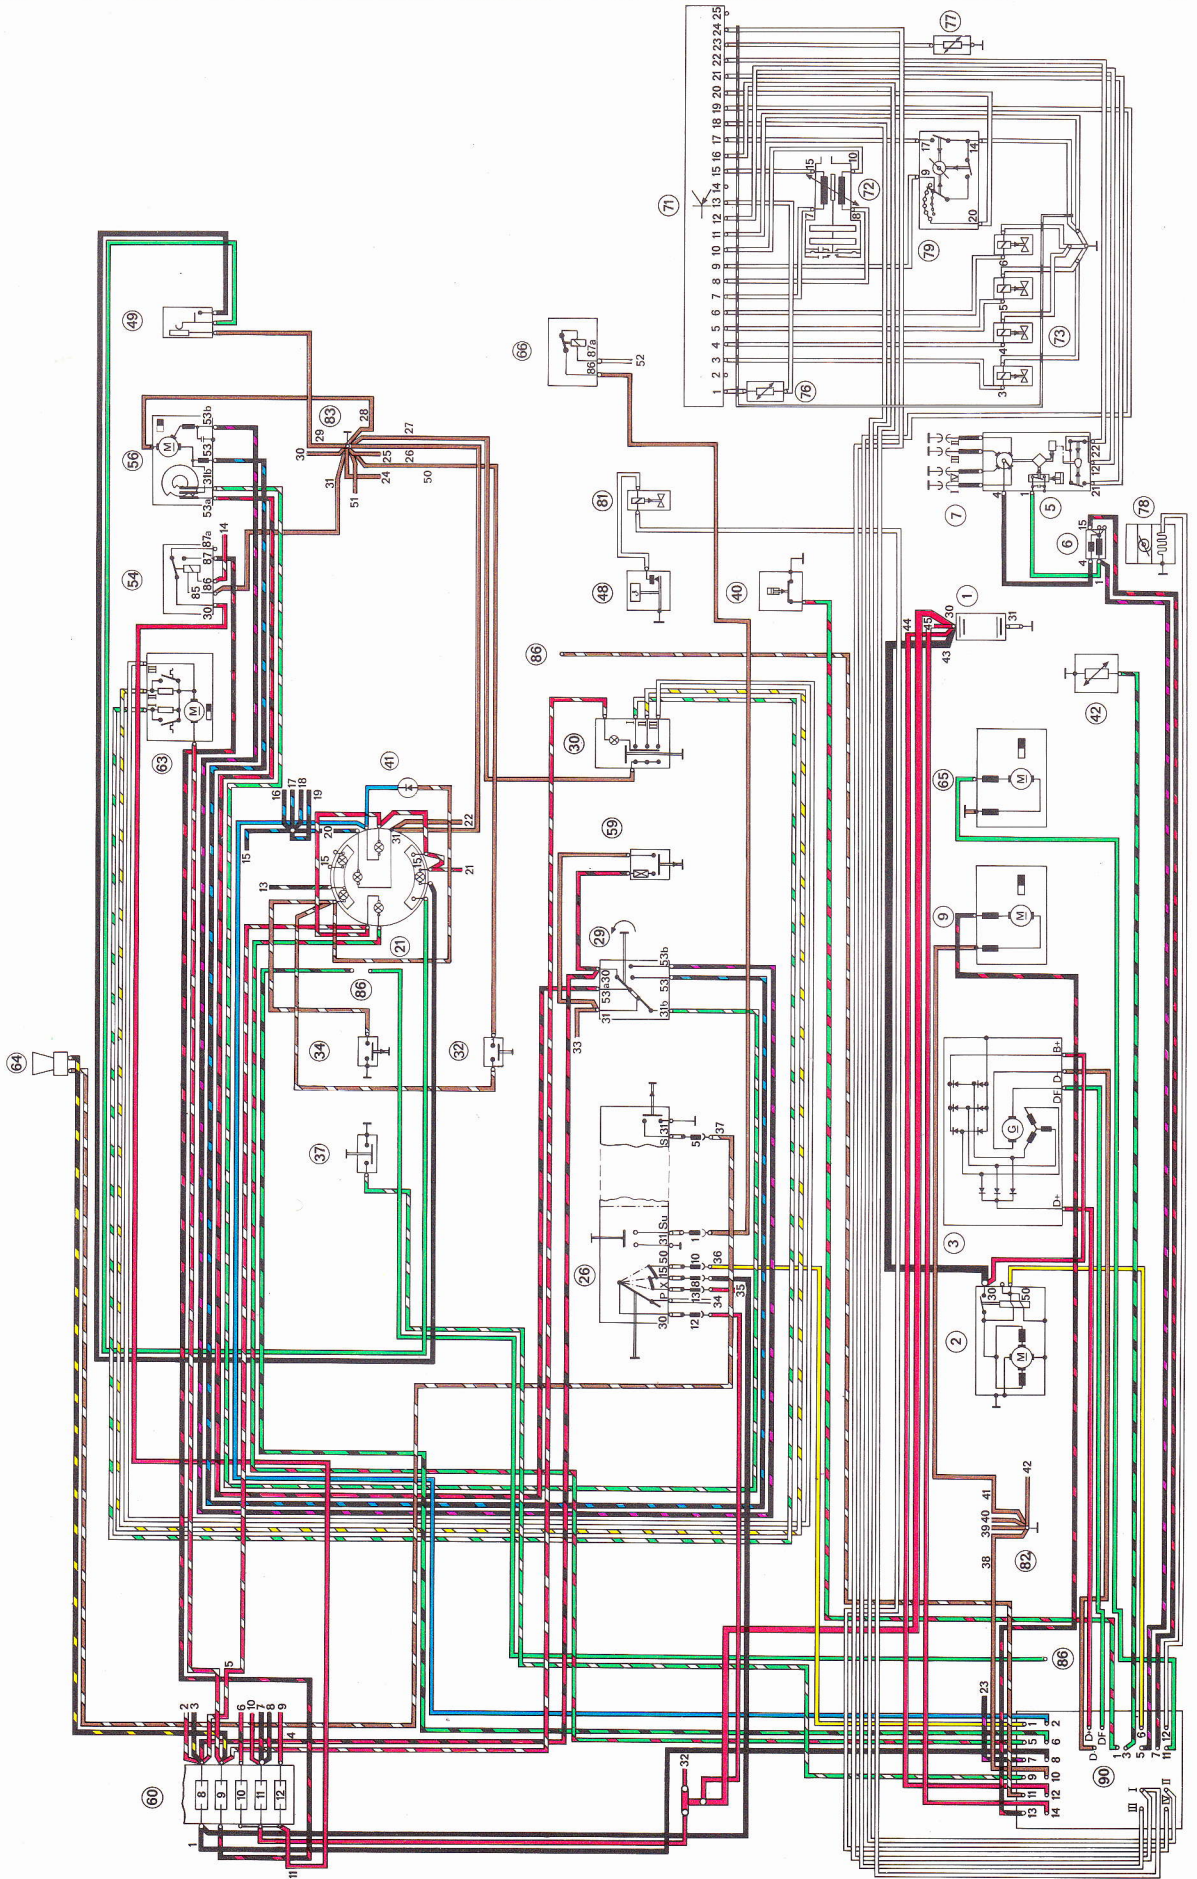

- 1 Battery
- 2 Starter
- 3 Alternator
- 5 Ignition distributor
- 6 Ignition coil
- 7 Spark plugs
- 9 Gasoline pump
- 21 Combination instrument
- 26 Steering ignition starter switch, dimming switch with signal button in steering wheel
- 29 Wiper-washer switch
- 30 Fan and separate heater switch
- 32 Brake warning switch
- 34 Hand brake contact
- 37 Switch for heater blower
- 40 Oil pressure switch
- 41 Diode
- 42 Oil temperature indicator (optional)
- 48 Thermoswitch
- 49 Indicator for fuel gauge
- 54 Relay for fresh air blower
- 56 Wiper motor
- 59 Cigarette lighter
- 60 Fuse box
- 63 Fresh air blower
- 64 Horn
- 65 Heater blower
- 66 Buzzer
- 71 Electronic control unit for fuel injection
- 72 Pressure sensor
- 73 Electric injection valve
- 76 Temperature sensor I
- 77 Temperature sensor II
- 78 Supplementary air valve
- 79 Throttle valve switch
- 81 Cold start valve
- 82 Ground connection point A
- 83 Ground connection point B
- 86 Sportomatic (optional)
- 90 Regulator plate
- 8 Brake-, blinker-, backup light, windshield wiper, cigarette lighter
- 9 Fresh air blower, horn
- 10 (Fog lamps)
- 11 Interior light, warning light, buzzer
- 12 Motor for actuating retractable headlights

FUSES:

CAUTION!

Disconnection of battery with the engine running will result in immediate destruction of alternator.