

## Electric wiring diagram (Part III) Type 914, Model 71

## CAUTION!

Disconnection of battery with the engine running will result in immediate destruction of alternator.